


GARDEN TRACTOR INDEX

MODEL	DESCRIPTION	PAGE
782 Diesel	Tractor Diagram	C51.
784	Tractor Diagram (719,999 & Below)	C52.
784	Tractor Diagram (720,000 - 737,624)	C53.
800	Tractor Diagram	C54.
800	Electric Lights & Lift Diagram	C55.
882 Diesel	Tractor Diagram	C56.
982	Tractor Diagram	C57.
982	Tractor Diagram With Rear PTO	C58.
984	Tractor Diagram	C59.
986	Tractor Diagram	C60.
1000	Tractor Diagram	C61.
1000	Electric Lights & Lift Diagram	C62.
1050	Tractor Diagram	C63.
1100	Tractor Diagram	C64.
1200	Tractor Diagram	C65.
1200	Electric Lights & Lift Diagram	C66.
1204	Tractor Diagram	C67.
1210	Tractor Diagram (720,000 - 750,037)	C68.
1210	Tractor Diagram (750,038 - 756,999)	C69.
1210	Tractor Diagram (757,000 & Above)	C70.
1211	Tractor Diagram (756,300 - 756,999)	C71.
1211	Tractor Diagram (757,000 & Above)	C72.
1250	Tractor Diagram	C73.
1250	Electric Lights & Lift Diagram	C74.
1282	Tractor Diagram (719,999 & Below)	C75.
1282	Tractor Diagram (720,000 & Above)	C76.
1340	Tractor Diagram	C77.
1340	Indicator Harness	C78.
1440	Tractor Diagram	C79.
1440	Indicator Harness	C80.
1450	Tractor Diagram	C81.
1450	Electric Lights & Lift Diagram	C82.
1512 Diesel	Tractor Diagram	C83.
1535	Tractor Diagram	C84.
1535	Indicator Harness	C85.
1541	Tractor Diagram	C86.
1541	Indicator Harness	C87.
1572 Diesel	Tractor Diagram	C88.
1604	Tractor Diagram	C89.
1606	Tractor Diagram	C90.
1641	Tractor Diagram	C91.
1641	Indicator Harness	C92.
1650	Tractor Diagram	C93.
1650	Electric Lights & Lift Diagram	C94.
1710	Tractor Diagram	C95.
1711	Tractor Diagram	C96.
1712	Tractor Diagram	C97.
1772 Diesel	Tractor Diagram	C98.
1782 Diesel	Tractor Diagram	C99.
1782 Diesel	Indicator Harness	C100.




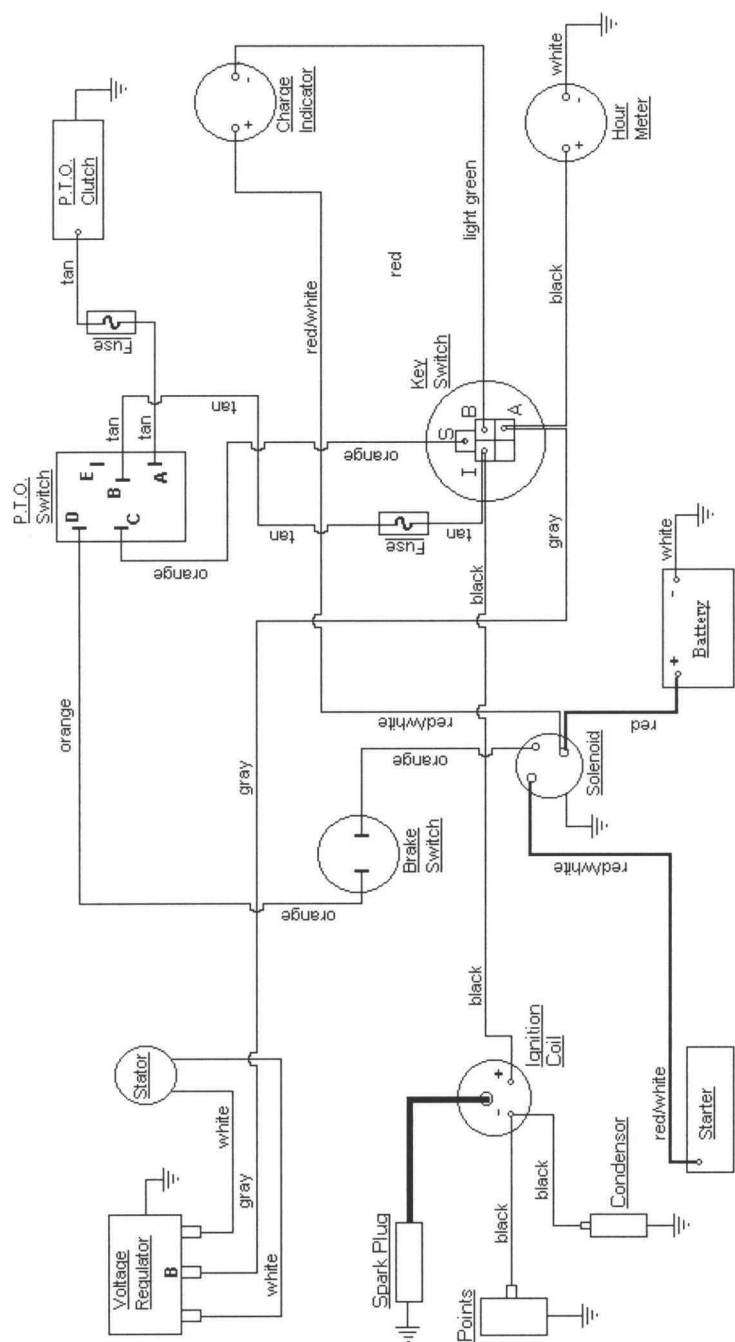


P.T.O. SWITCH	
OFF	B+E, C+D
ON	B+A

KEY SWITCH	
OFF	NONE
RUN	B+I+A
START	B+I+S


MODEL 800

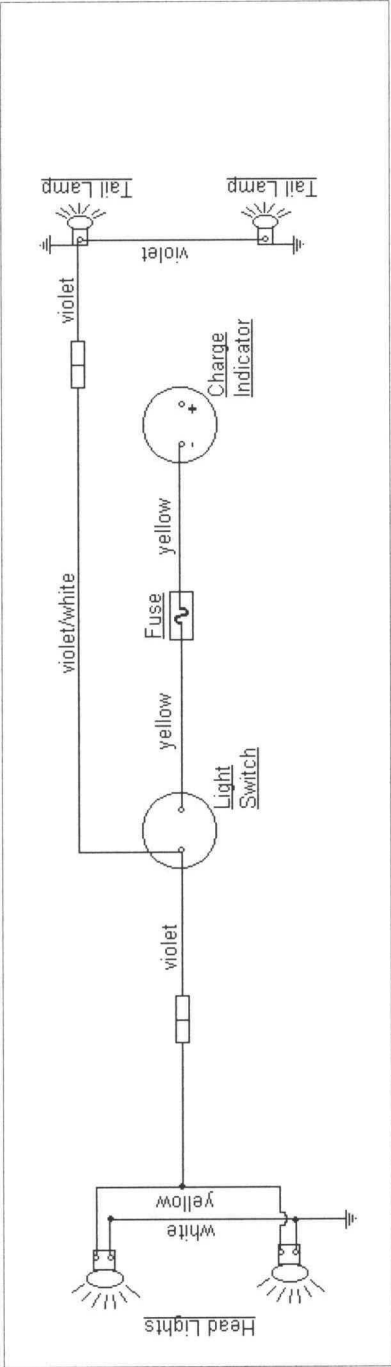

Electric Lighting Wiring Diagram.

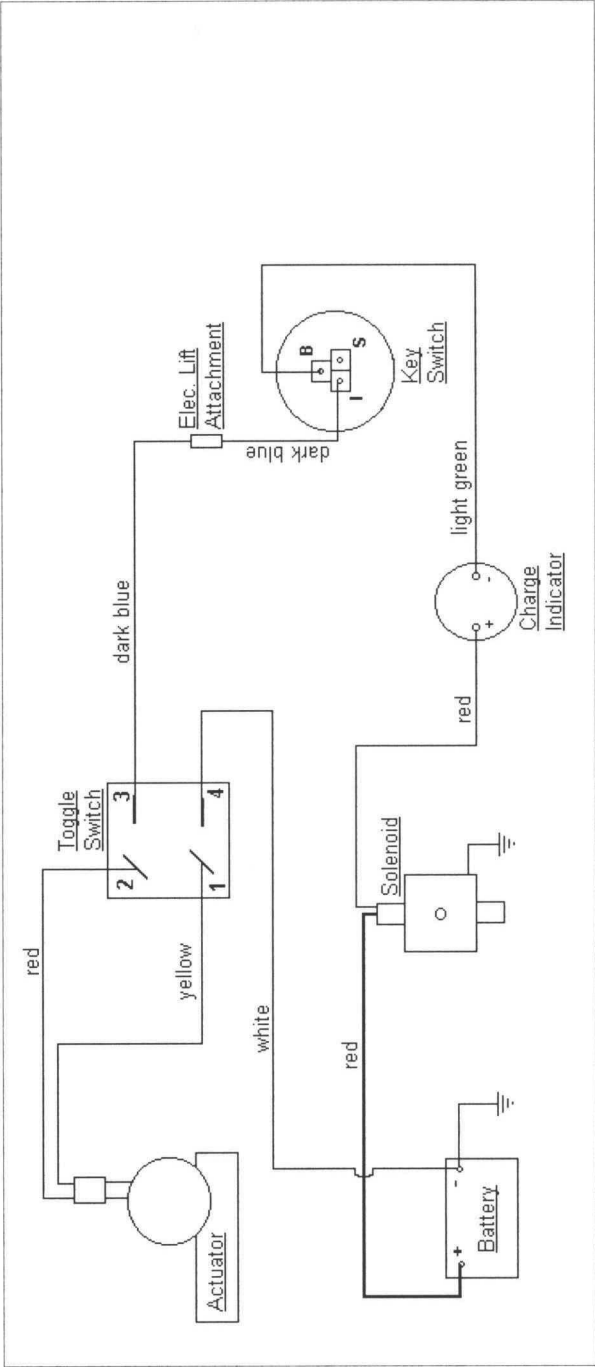


Electric Lift Wiring Diagram.

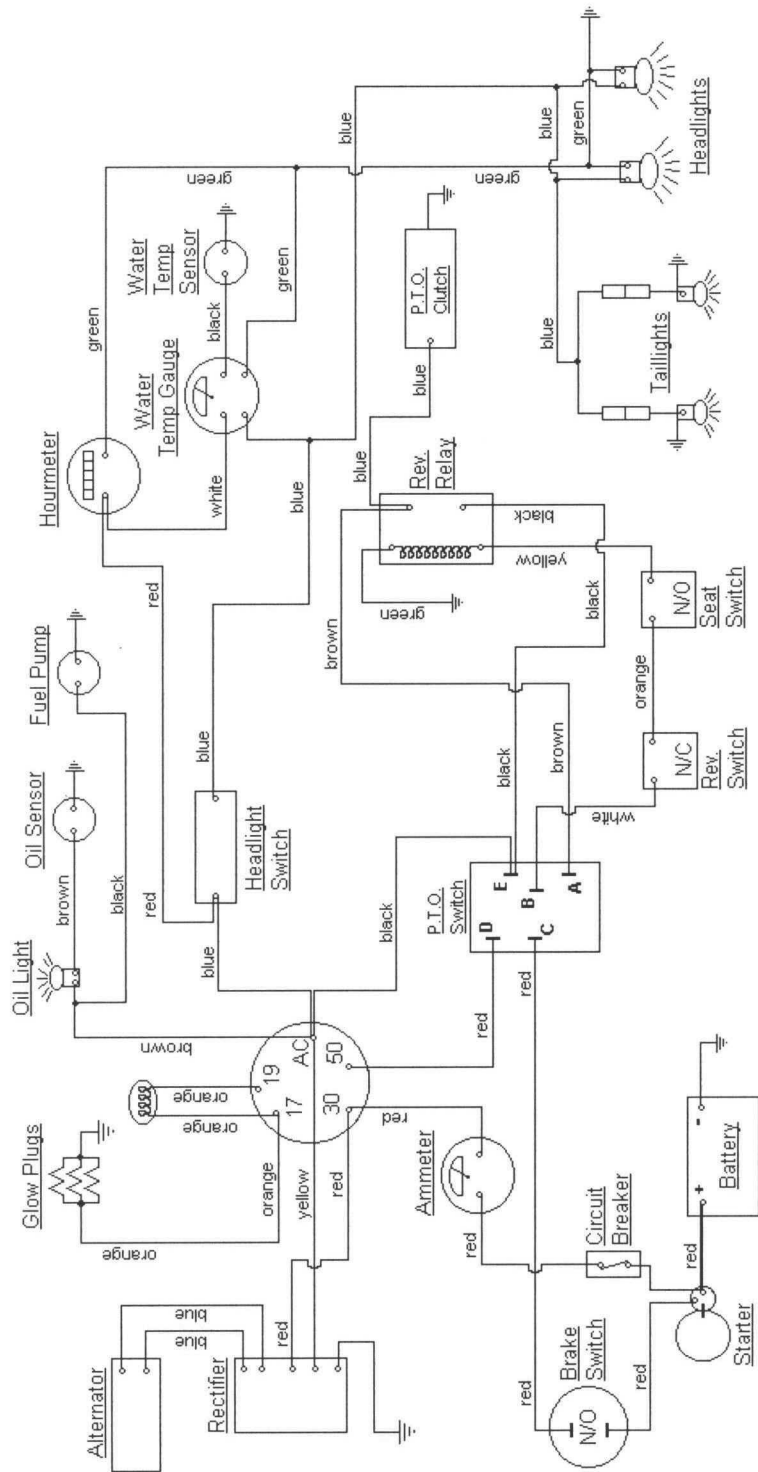

PTO SWITCH	
OFF	C+D
ON	B+A
START	B+A+E

KEY SWITCH	
GLOW PLUG	30+19+AC
OFF	NONE
ON	30+AC
START	30+50+19+AC

MODEL 982

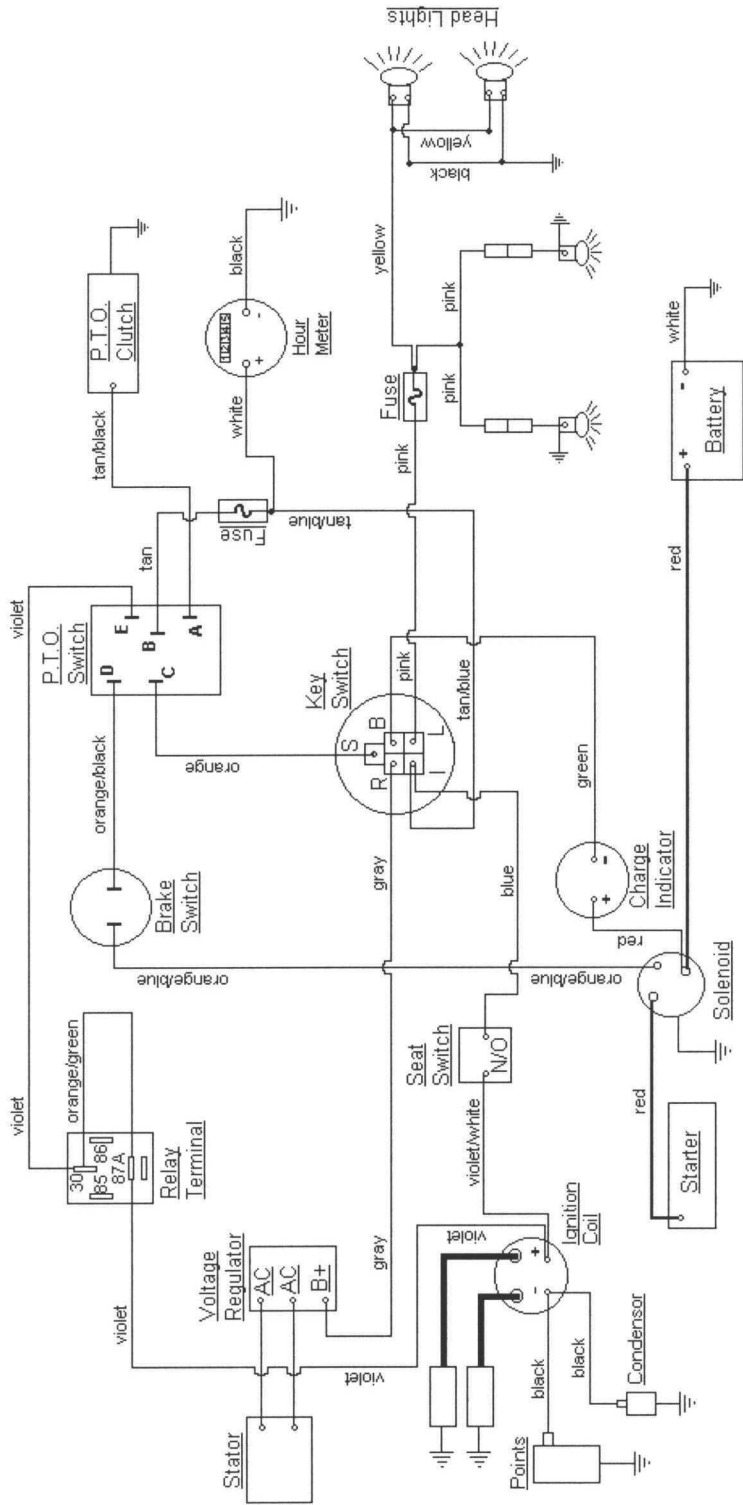


P.T.O. SWITCH	
OFF	B+E, C+D
ON	B+A

KEY SWITCH	
OFF	NONE
RUN w/LIGHTS	B+I+R+L
RUN	B+I+R
START	B+I+S

MODEL 982 WITH REAR PTO OPTION


C58.

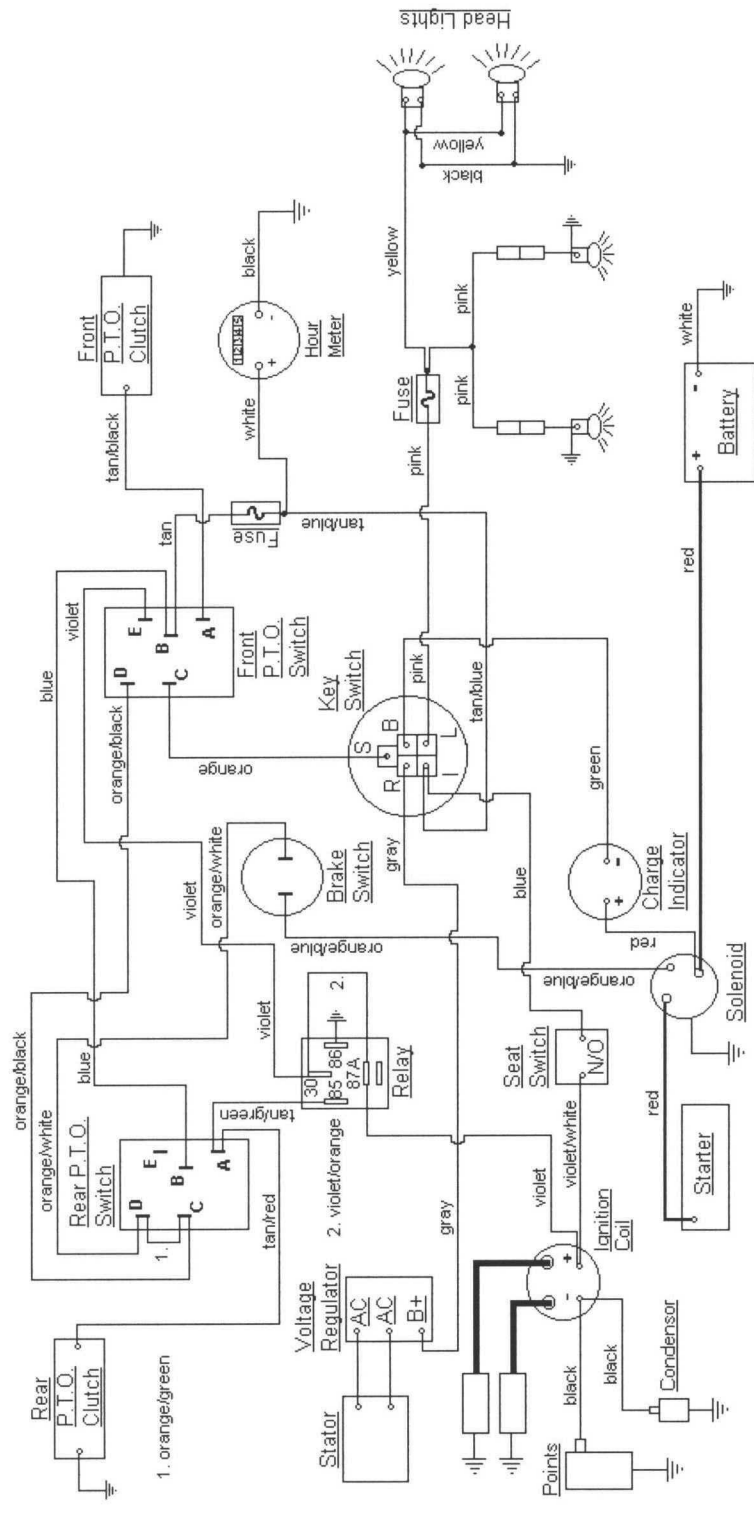

P.T.O. SWITCH	
OFF	B+E, C+D
ON	B+A

KEY SWITCH	
OFF	NONE
RUN w/LIGHTS	B+I+R+L
RUN	B+I+R
START	B+I+S


MODEL 984

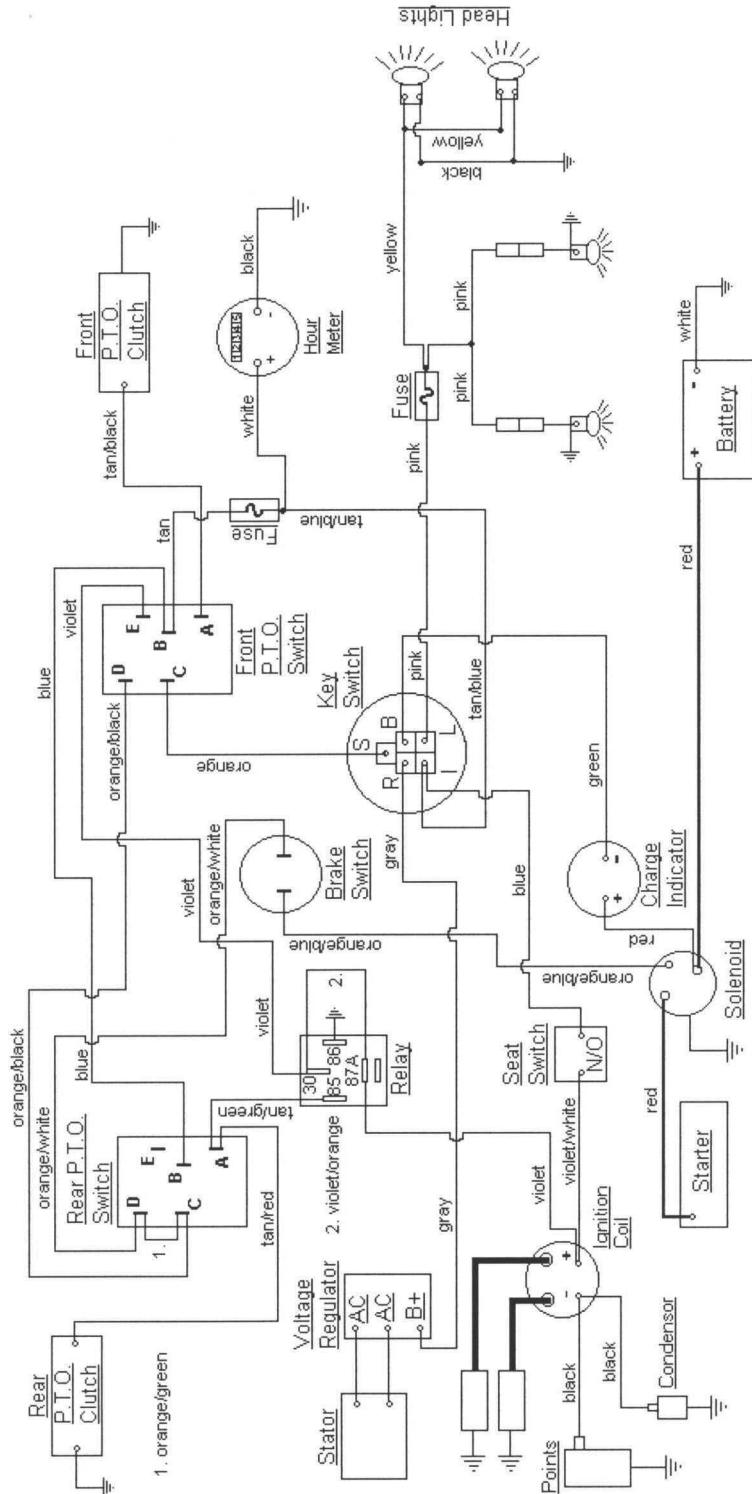

P.T.O. SWITCH	
OFF	B+E, C+D
ON	B+A

KEY SWITCH	
OFF	NONE
RUN w/LIGHTS	B+I+R+L
RUN	B+I+R
START	B+I+S


NOTE: 982 REAR PTO WAS A OPTION.
984 & 986 REAR PTO WAS STANDARD.

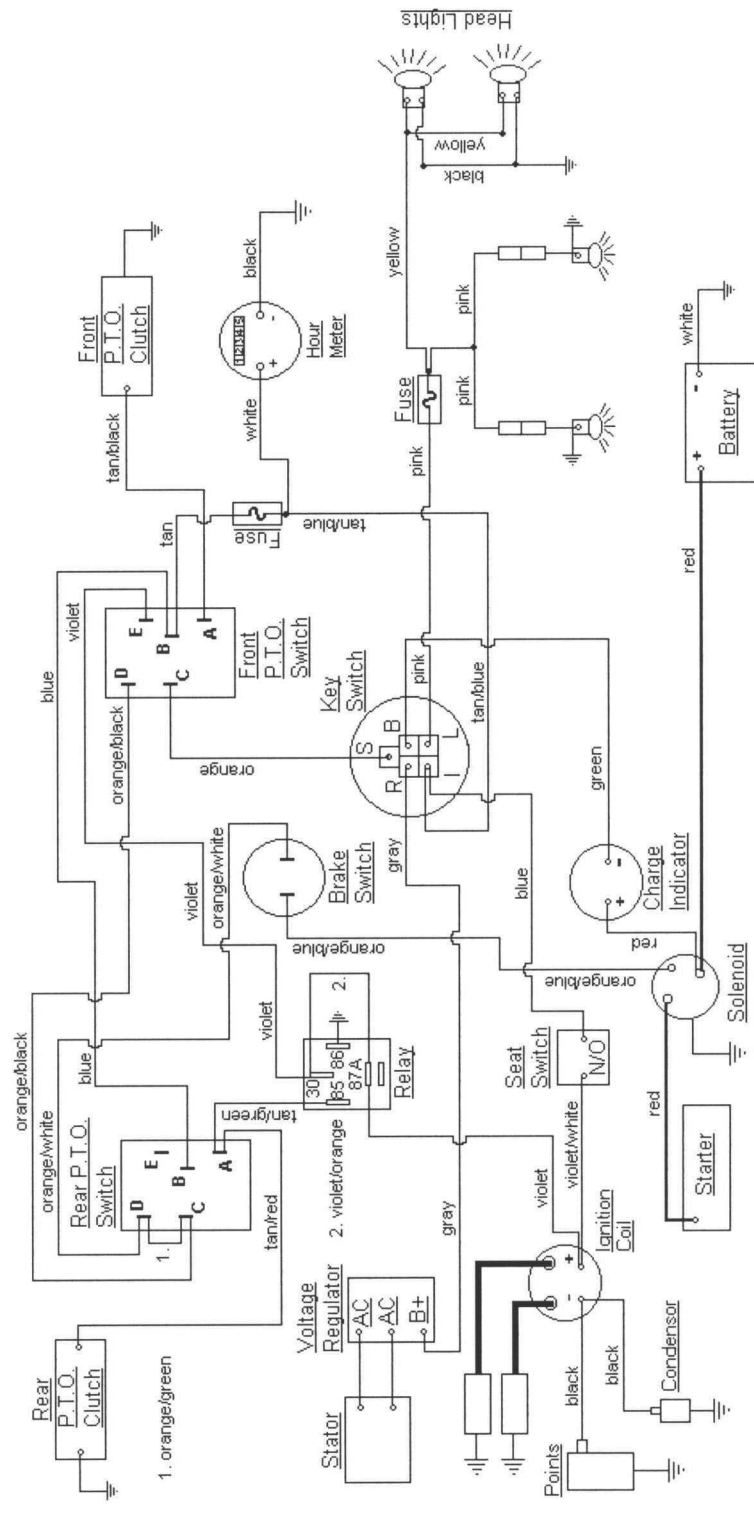

P.T.O. SWITCH	
OFF	B+E, C+D
ON	B+A


KEY SWITCH	
OFF	NONE
RUN w/LIGHTS	B+I+R+L
RUN	B+I+R
START	B+I+S

MODEL 1000

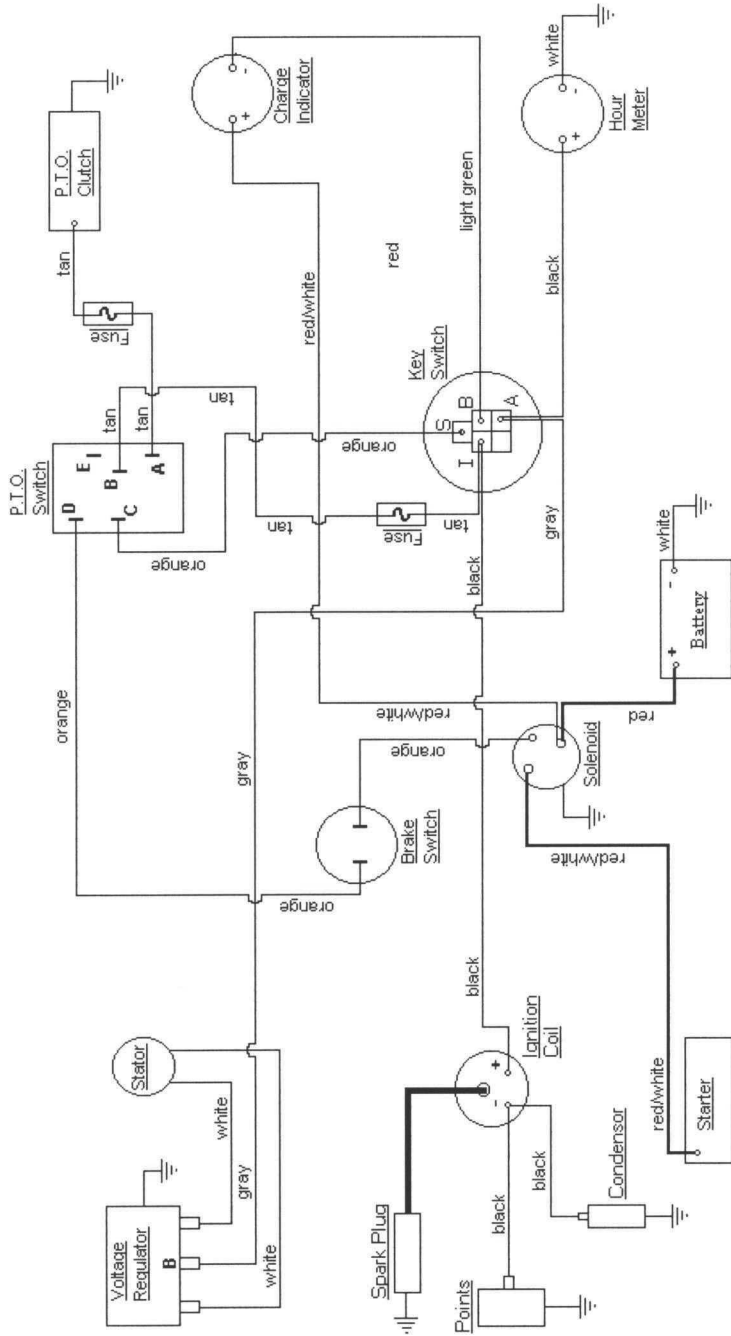


P.T.O. SWITCH	
OFF	B+E, C+D
ON	B+A

KEY SWITCH	
OFF	NONE
RUN	B+I+A
START	B+I+S

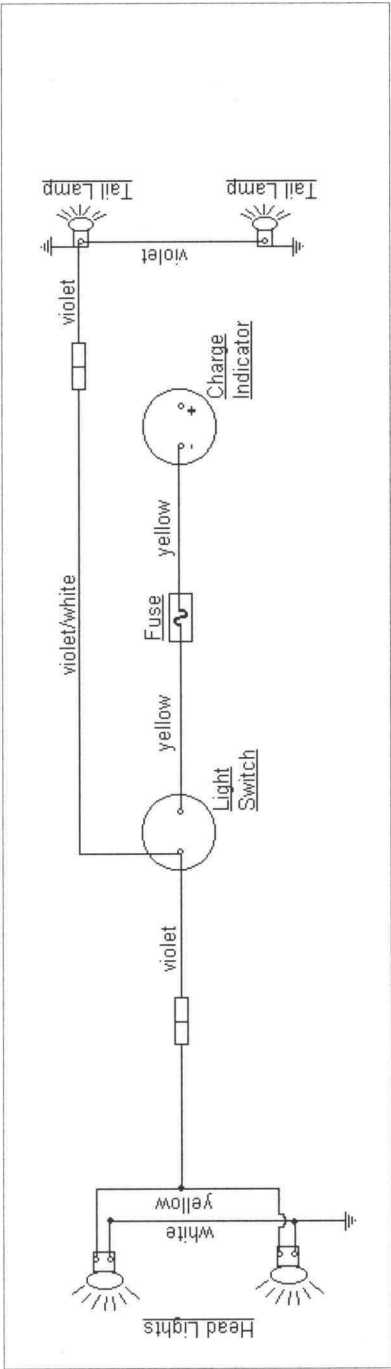


Electric Lighting Wiring Diagram.

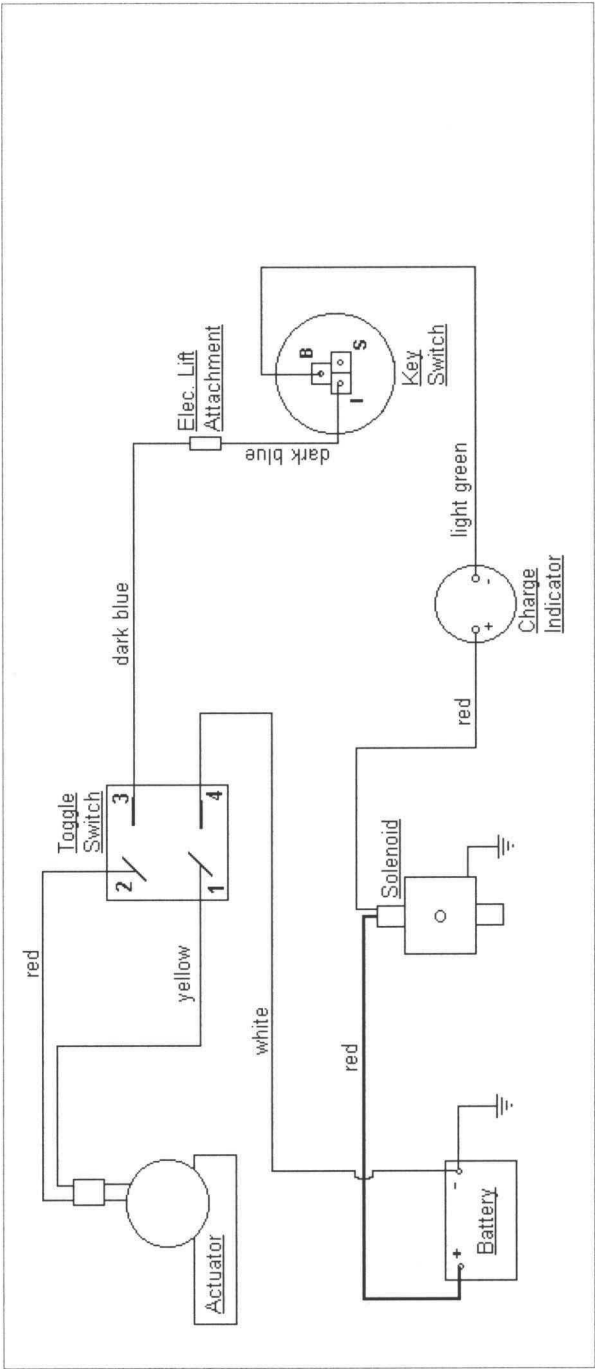


Electric Lift Wiring Diagram.

MODEL 1050

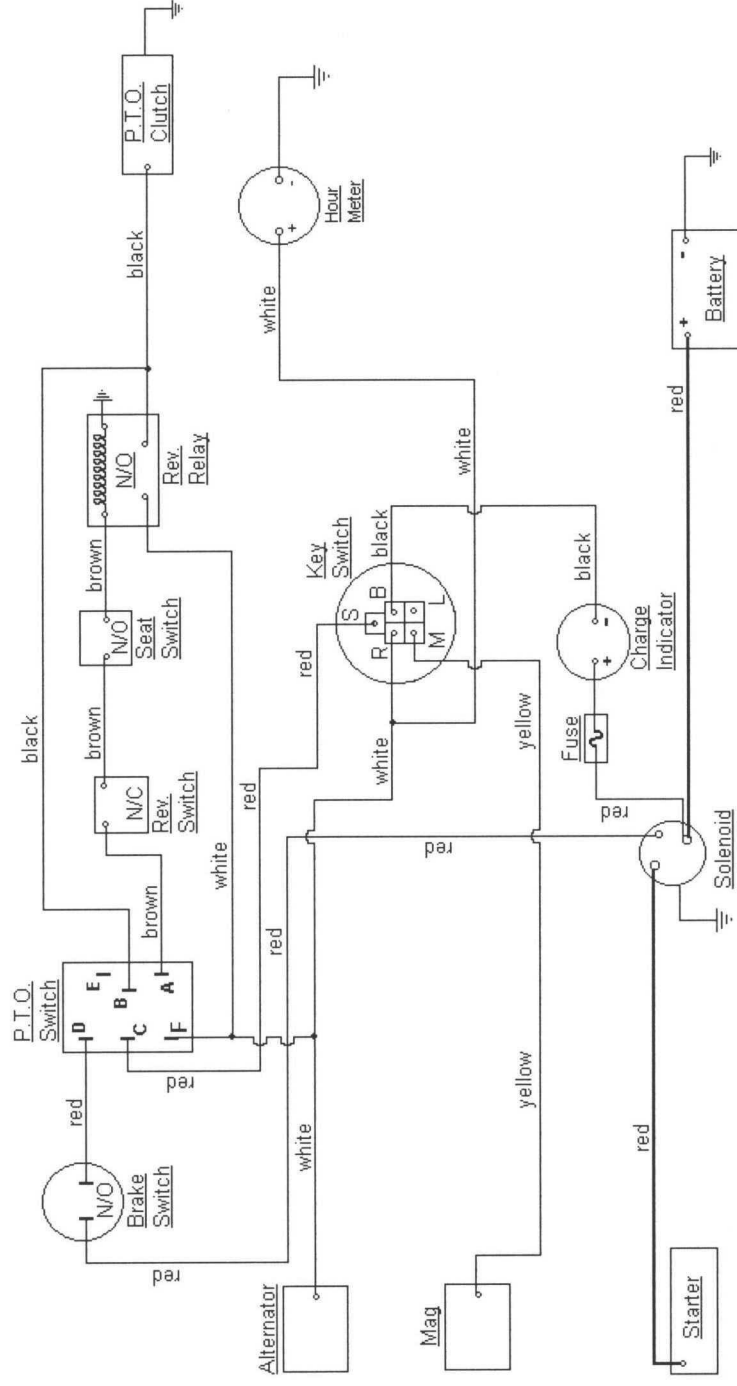

P.T.O. SWITCH	
OFF	C+D
ON	B+A
START	B+A+F


KEY SWITCH	
OFF	M+GROUND
RUN w/LIGHTS	B+R+L
RUN	B+R
START	B+S

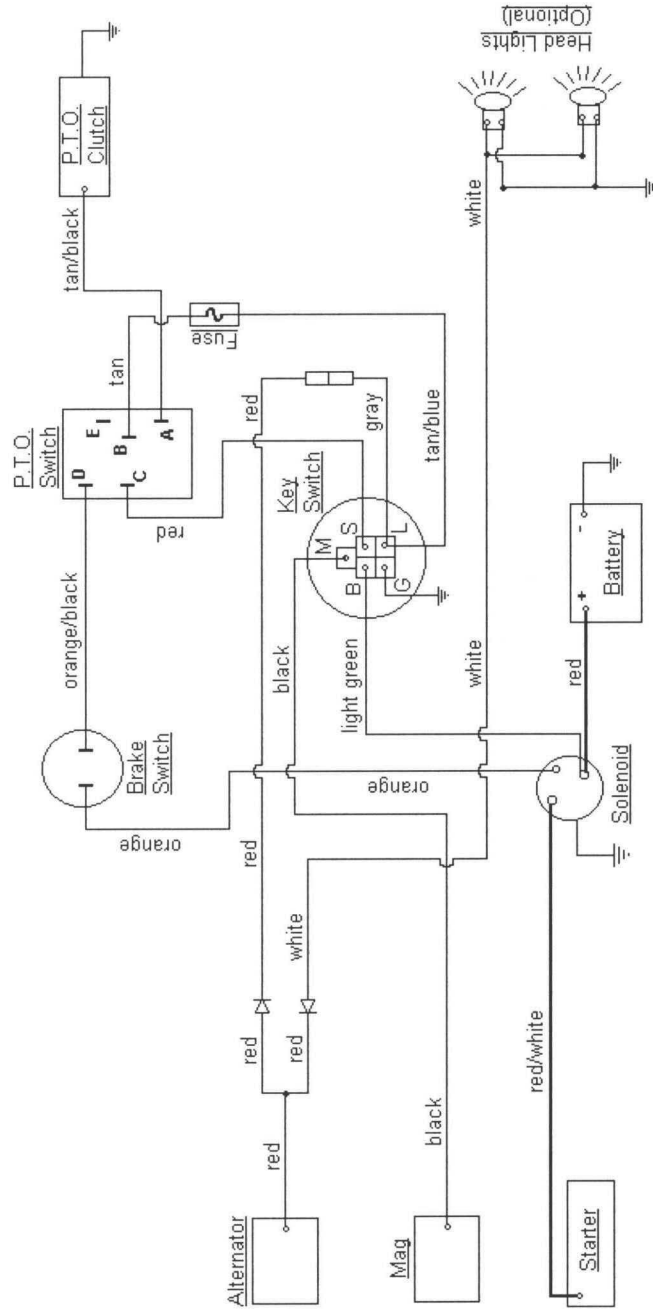


P.T.O. SWITCH	
ON	A+B
OFF	C+D, B+E

KEY SWITCH	
OFF	M+G
RUN	B+L
START	B+S



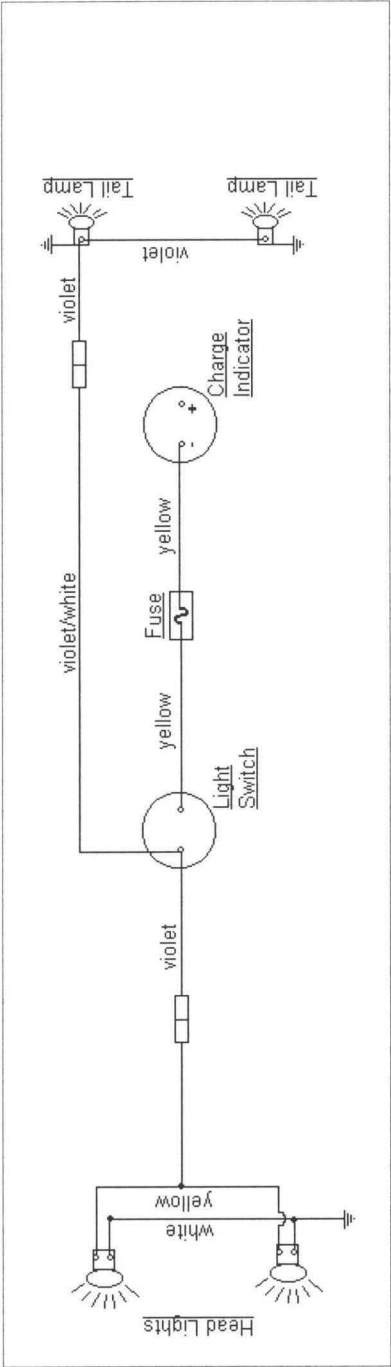


Electric Lighting Wiring Diagram.

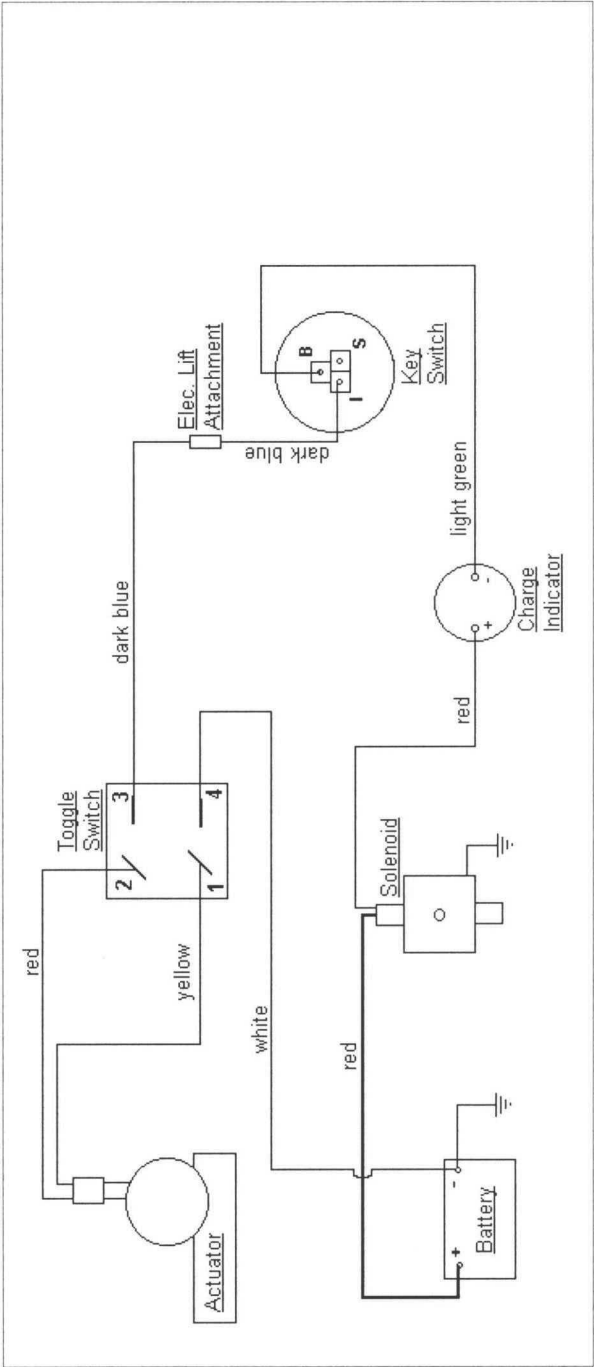


Electric Lift Wiring Diagram.

MODEL 1204

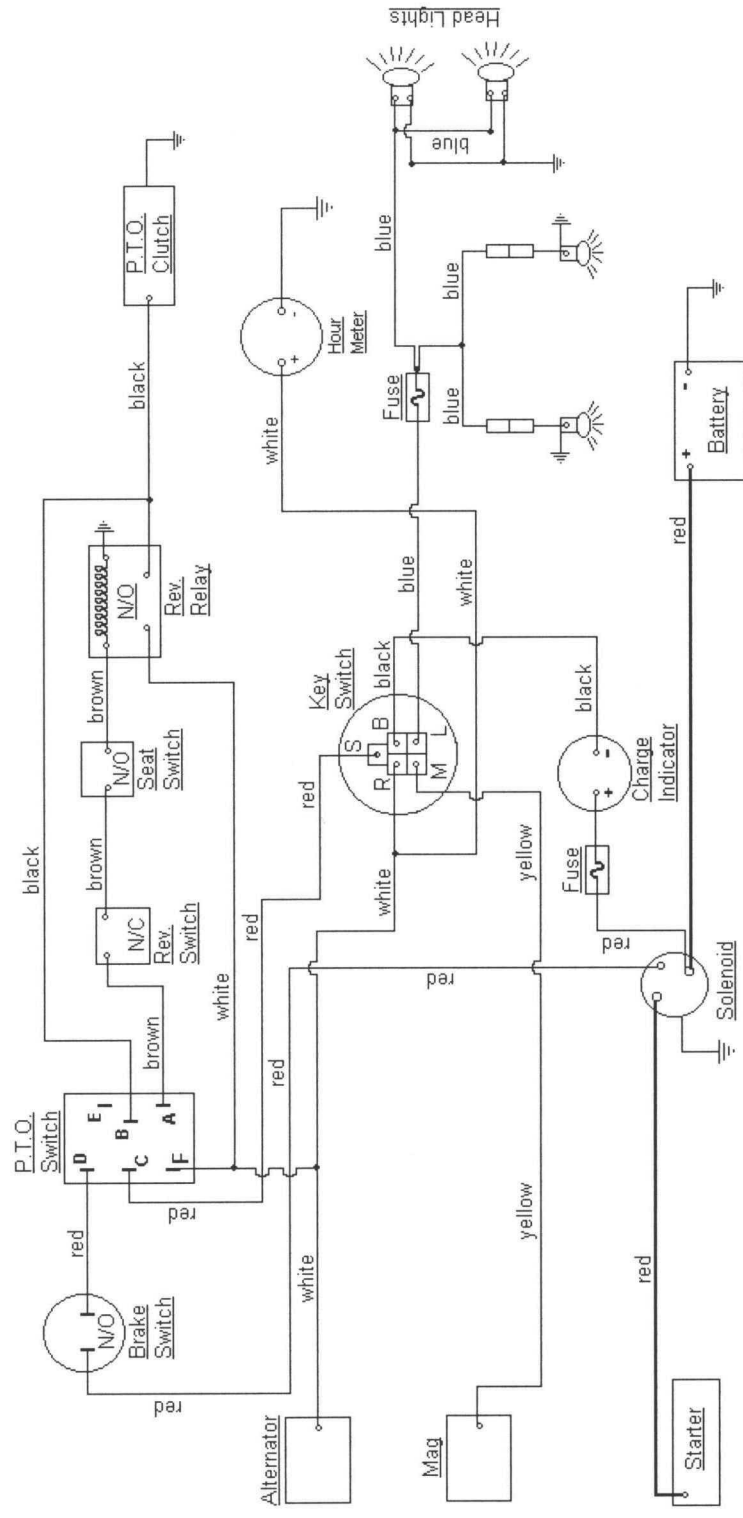

P.T.O. SWITCH	
OFF	C+D
ON	B+A
START	B+A+F

KEY SWITCH	OFF	M+GROUND
	RUN w/LIGHTS	B+R+L
	RUN	B+R
	START	B+S

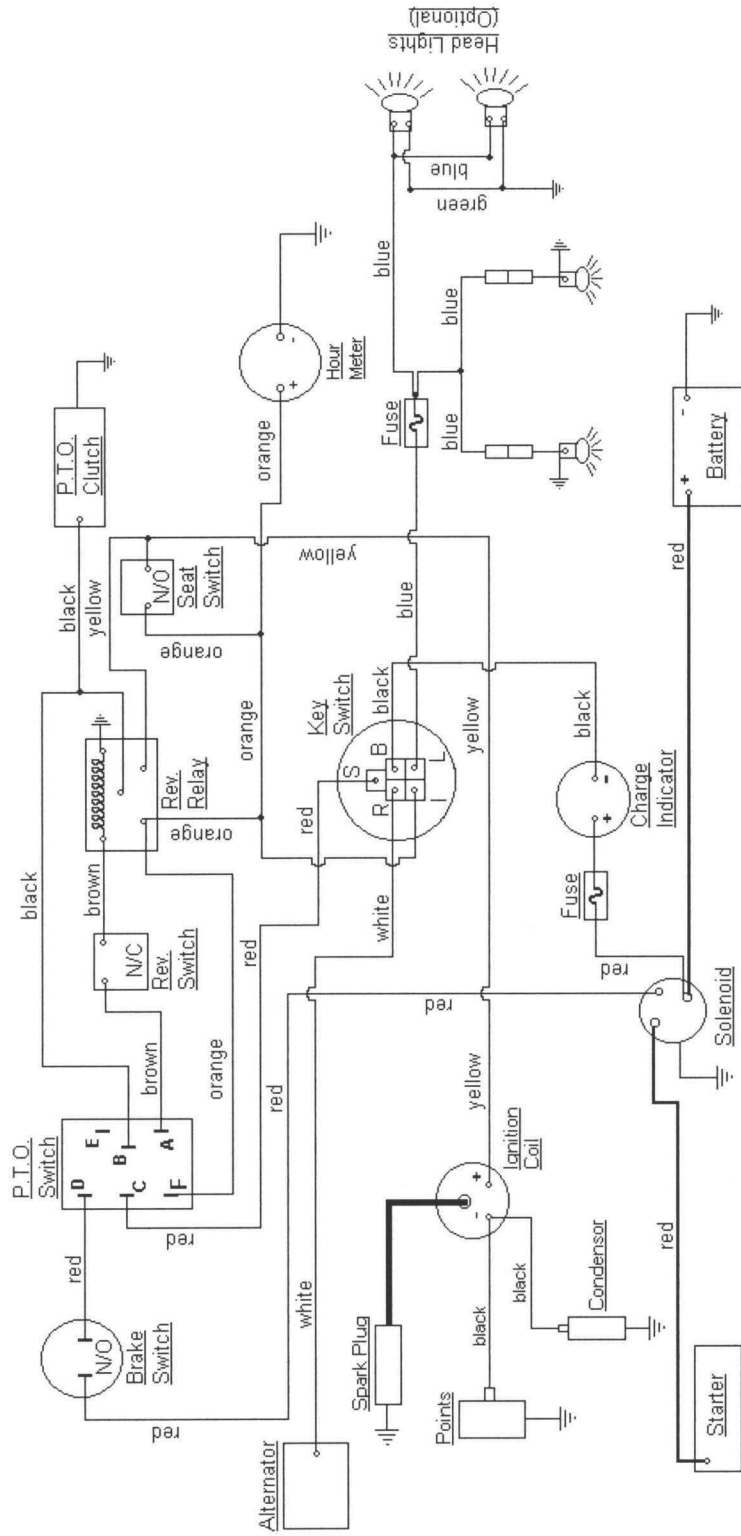


P.T.O. SWITCH	
OFF	C+D
ON	B+A
START	B+A+F

KEY SWITCH		
OFF	NONE	
RUN w/LIGHTS	B+I+R+L	
RUN	B+I+R	
START	B+I+S	

MODEL 1210
SERIAL NUMBER (720,000 - 750,037)

MODEL 1210
SERIAL NUMBER (750,038 - 756,999)

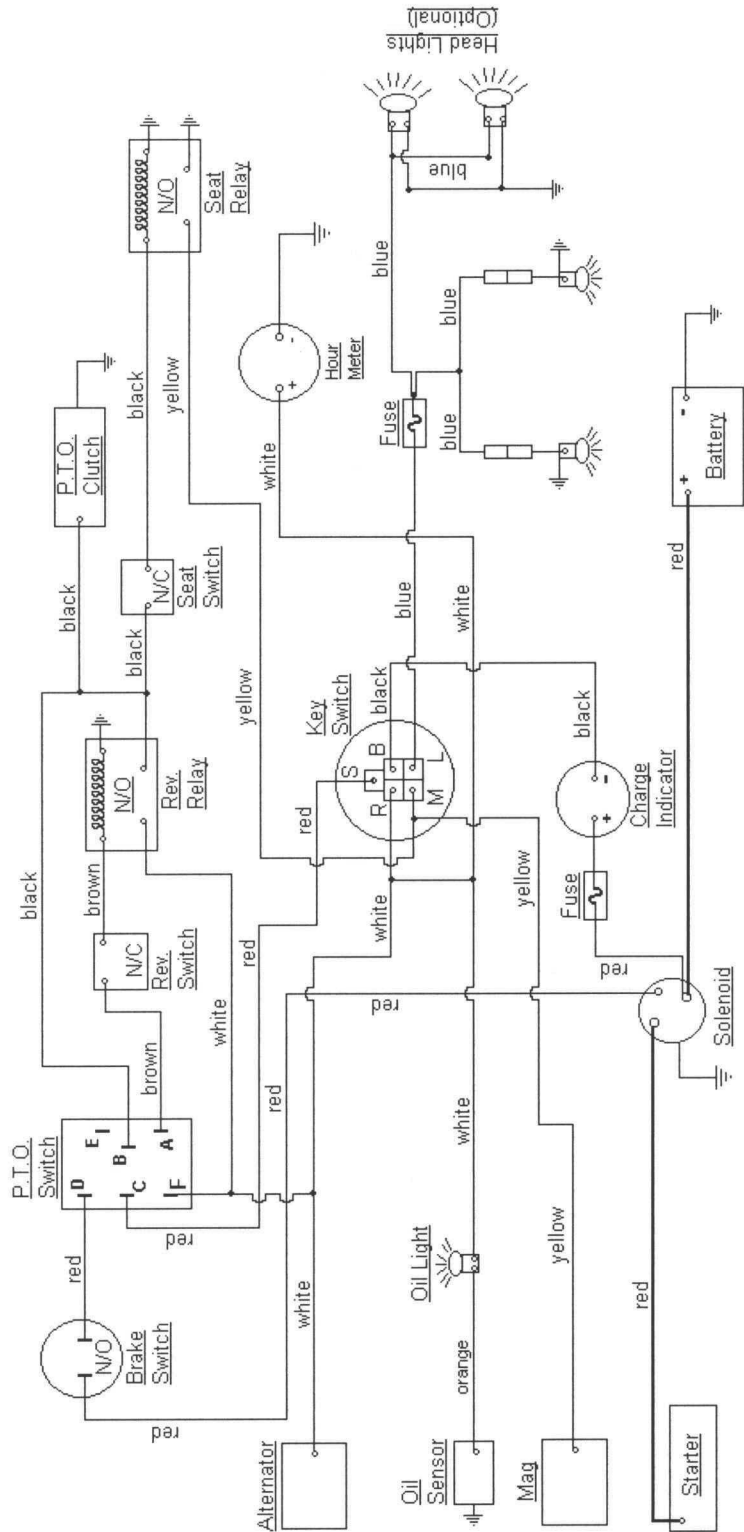


P.T.O. SWITCH	
OFF	C+D
ON	B+A
START	B+A+F

KEY SWITCH	
OFF	M+GROUND
RUN w/LIGHTS	B+R+L
RUN	B+R
START	B+S



MODEL 1211
SERIAL NUMBER (756,300 - 756,999)

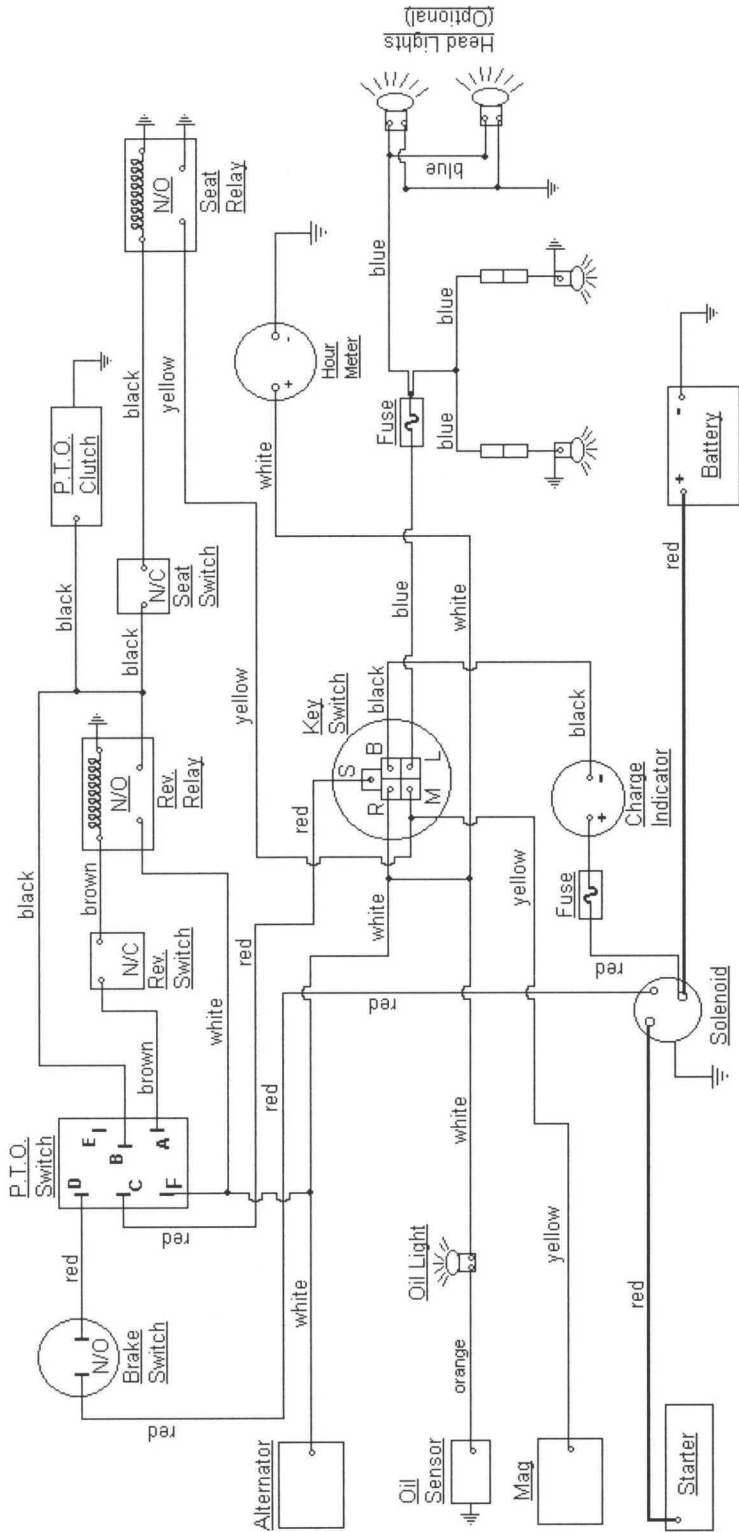


P.T.O. SWITCH	
OFF	C+D
ON	B+A
START	B+A+F


KEY SWITCH	
OFF	M+GROUND
RUN w/LIGHTS	B+R+L
RUN	B+R
START	B+S





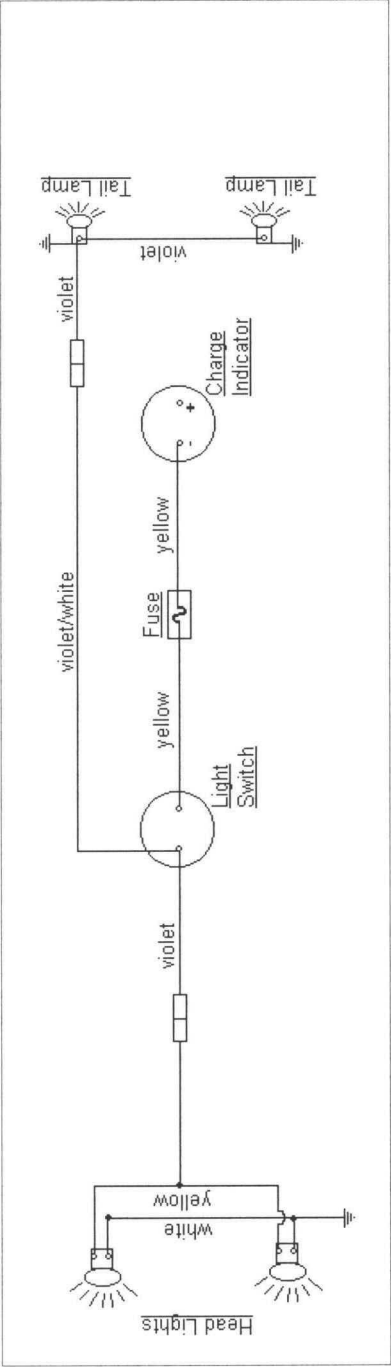


Electric Lighting Wiring Diagram.

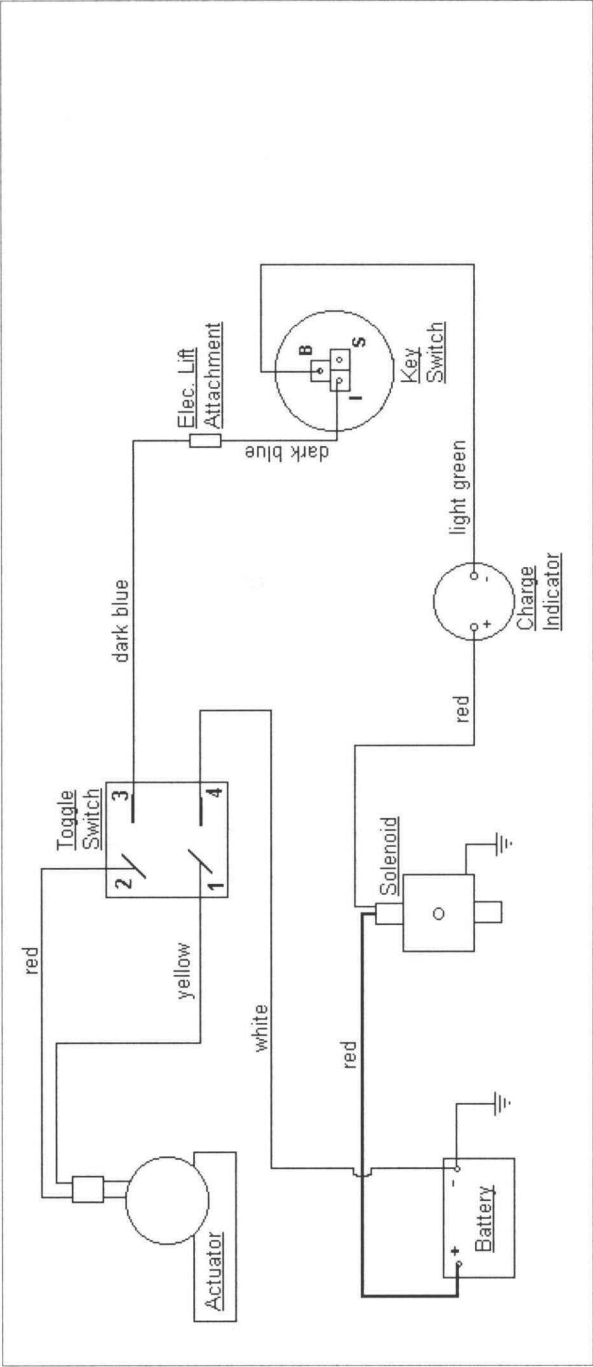


Electric Lift Wiring Diagram.

MODEL 1282
SERIAL NUMBER (719,999 - Below)

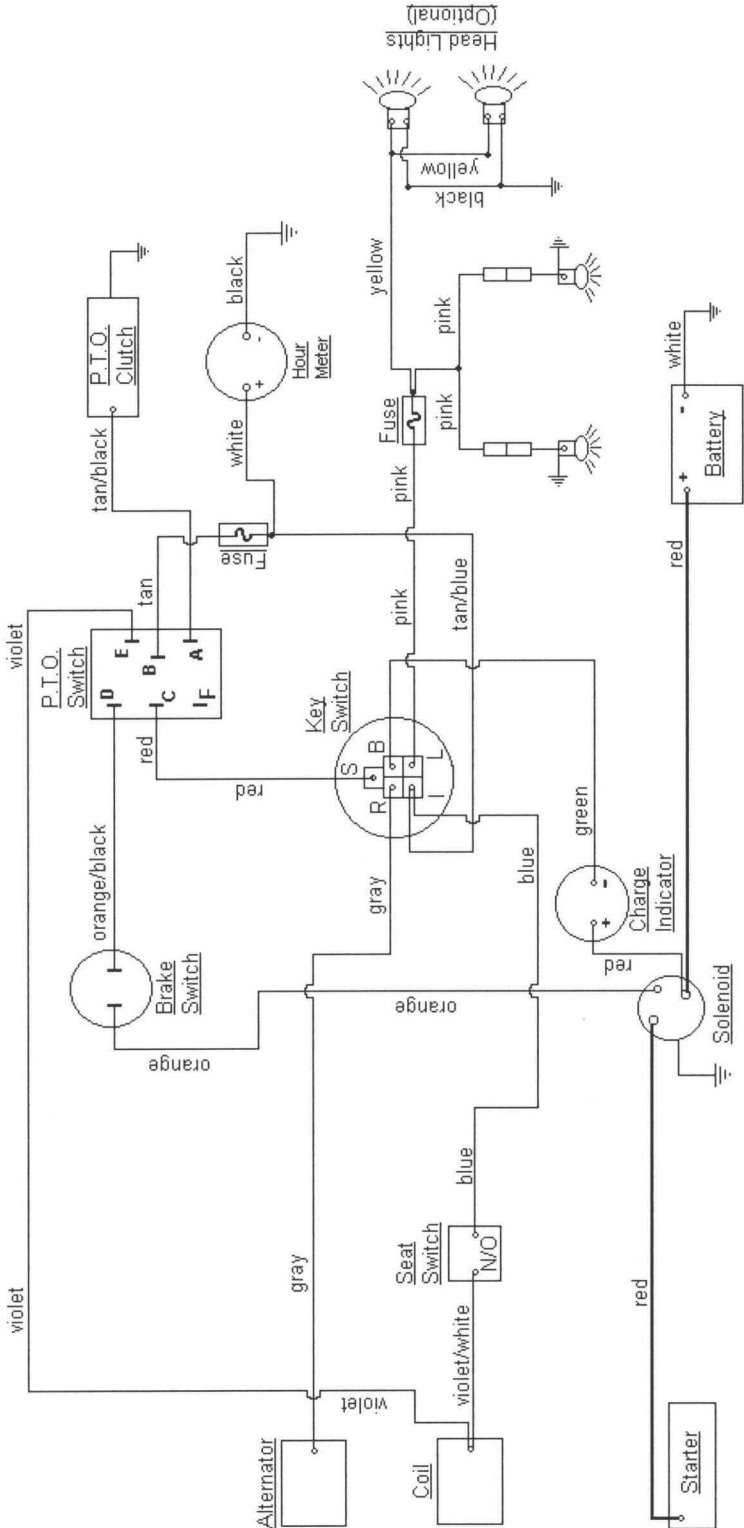

P.T.O. SWITCH	
OFF	B+E, C+D
ON	B+A


KEY SWITCH	
OFF	NONE
RUN w/LIGHTS	B+I+R+L
RUN	B+I+R
START	B+I+S

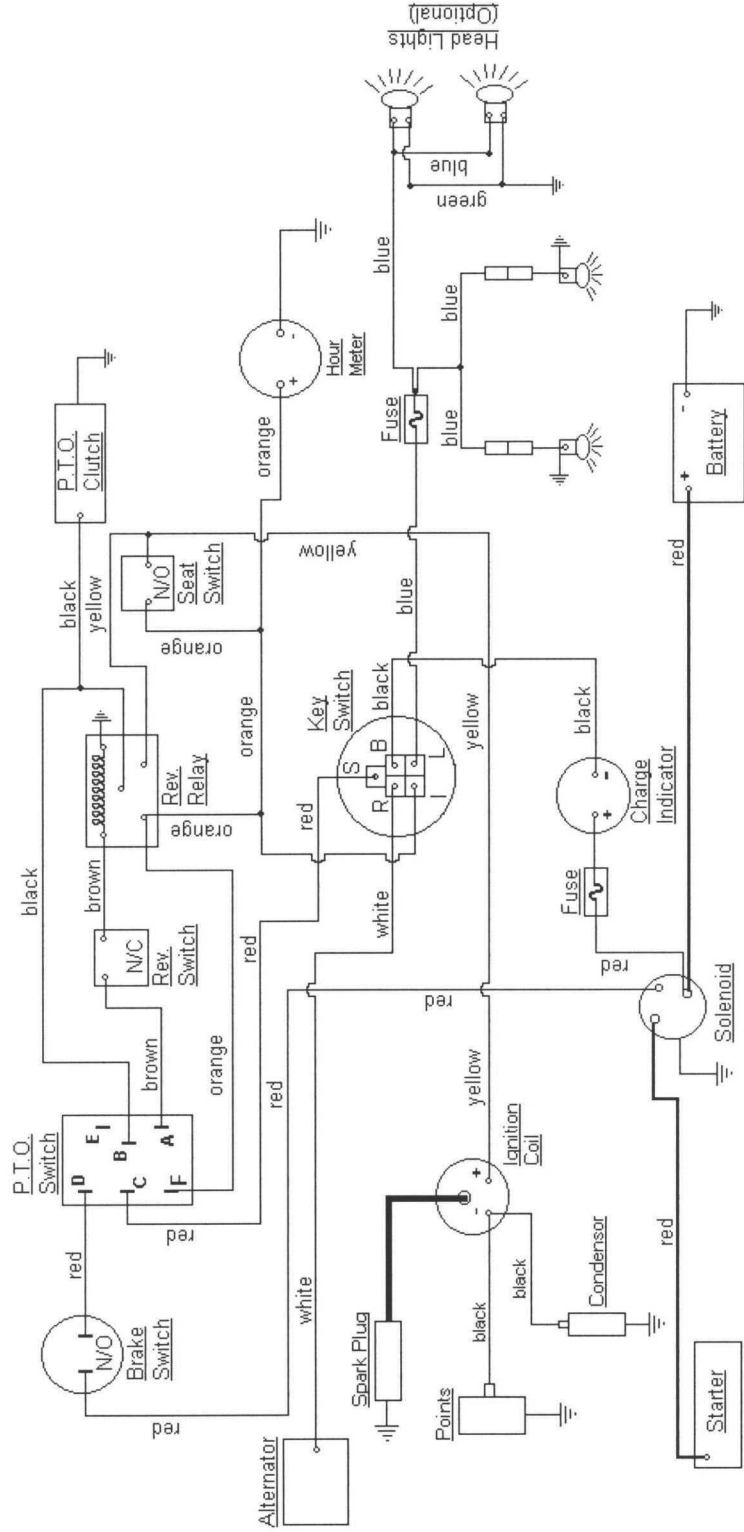

P.T.O. SWITCH	
OFF	C+D
ON	B+A
START	B+A+F

KEY SWITCH	
OFF	NONE
RUN w/LIGHTS	B+I+R+L
RUN	B+I+R
START	B+I+S


MODEL 1340

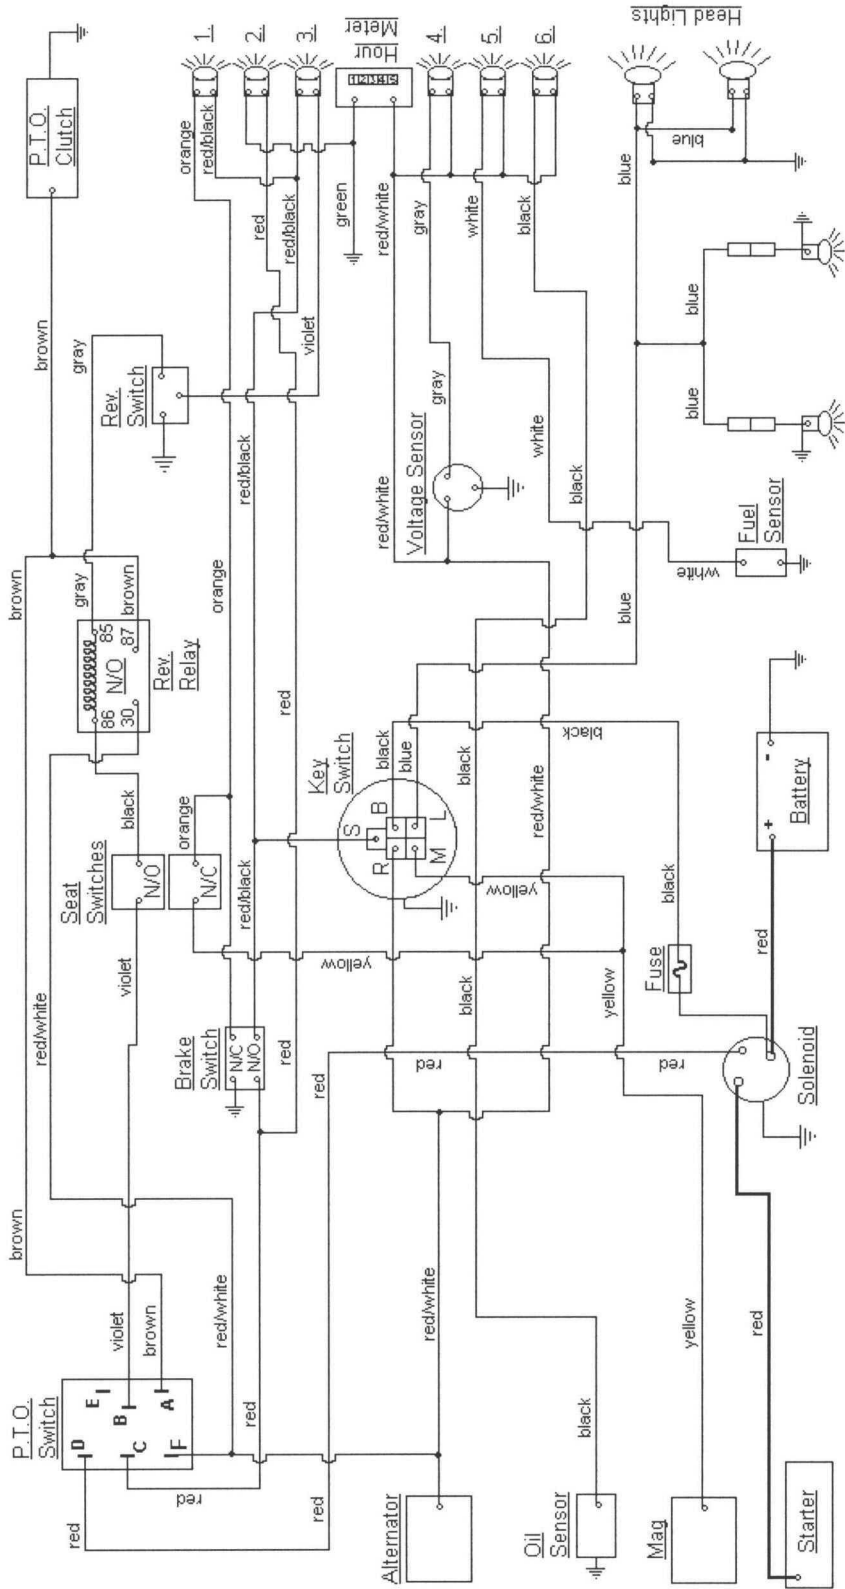

PTO SWITCH	
OFF	C+D
ON	B+A
START	B+A+F


KEY SWITCH	
OFF	M+GROUND
RUN w/LIGHTS	B+R+L
RUN	B+R
START	B+S

DASH LIGHTS	
1: DEPRESS LEFT PEDAL	
2: DISENGAGE PTO	
3: IN REVERSE	
4: AMP	
5: LOW FUEL	
6: LOW OIL	

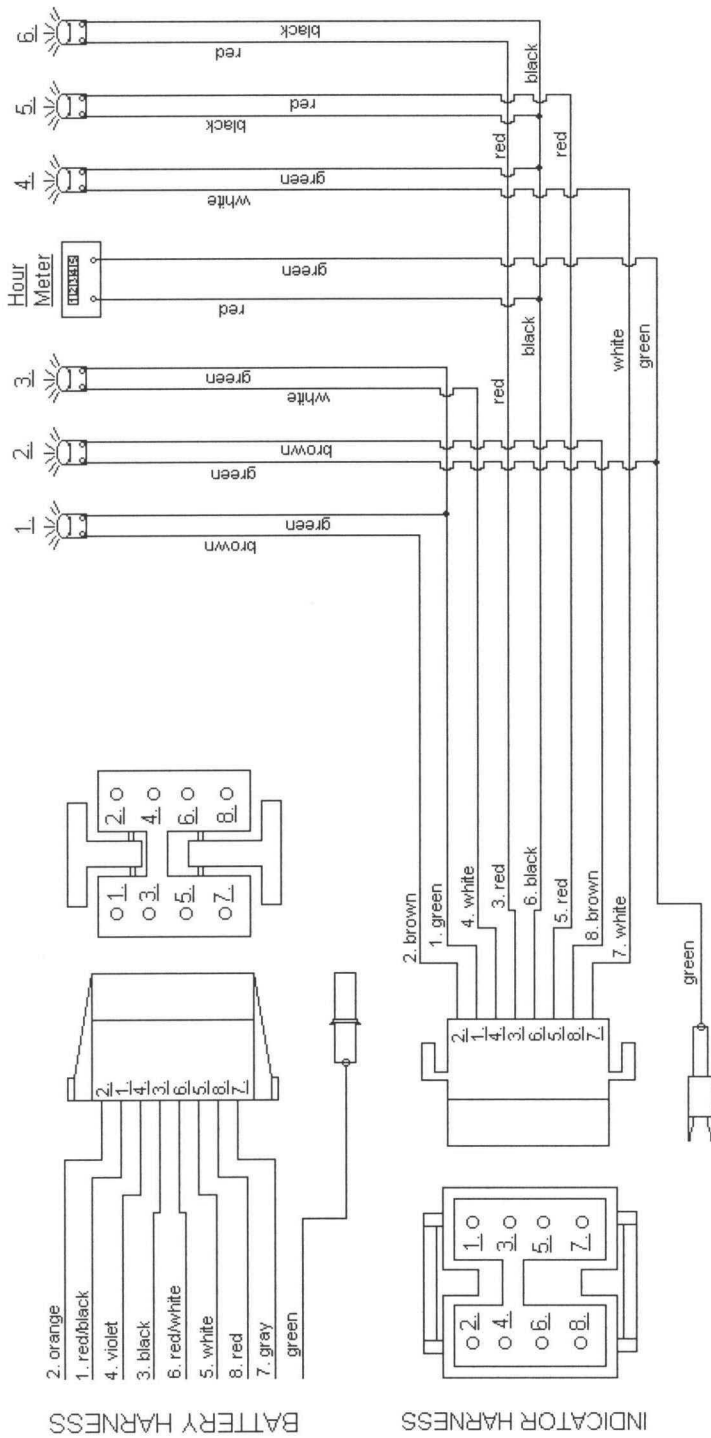

- DASH LIGHTS
- | |
|-----------------------|
| 1: DEPRESS LEFT PEDAL |
| 2: DISENGAGE PTO |
| 3: IN REVERSE |
| 4: AMP |
| 5: LOW FUEL |
| 6: LOW OIL |

MODEL 1440

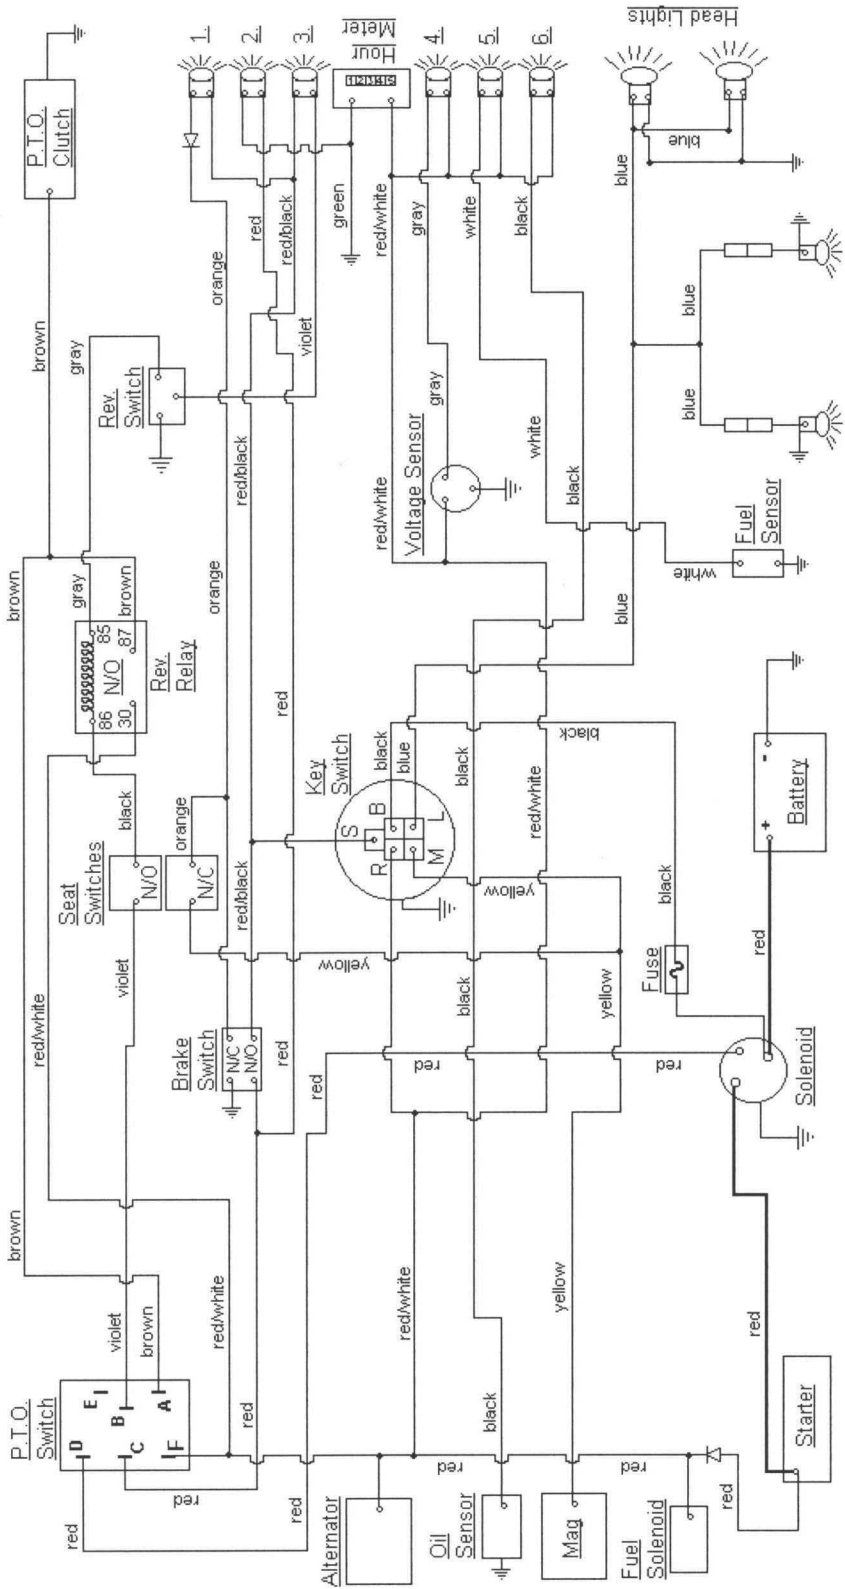

PTO SWITCH


OFF	C+D
ON	B+A
START	B+A+F

KEY SWITCH

OFF	M+GROUND
RUN w/LIGHTS	B+R+L
RUN	B+R
START	B+S

DASH LIGHTS


1: DEPRESS LEFT PEDAL
2: DISENGAGE PTO
3: IN REVERSE
4: AMP
5: LOW FUEL
6: LOW OIL

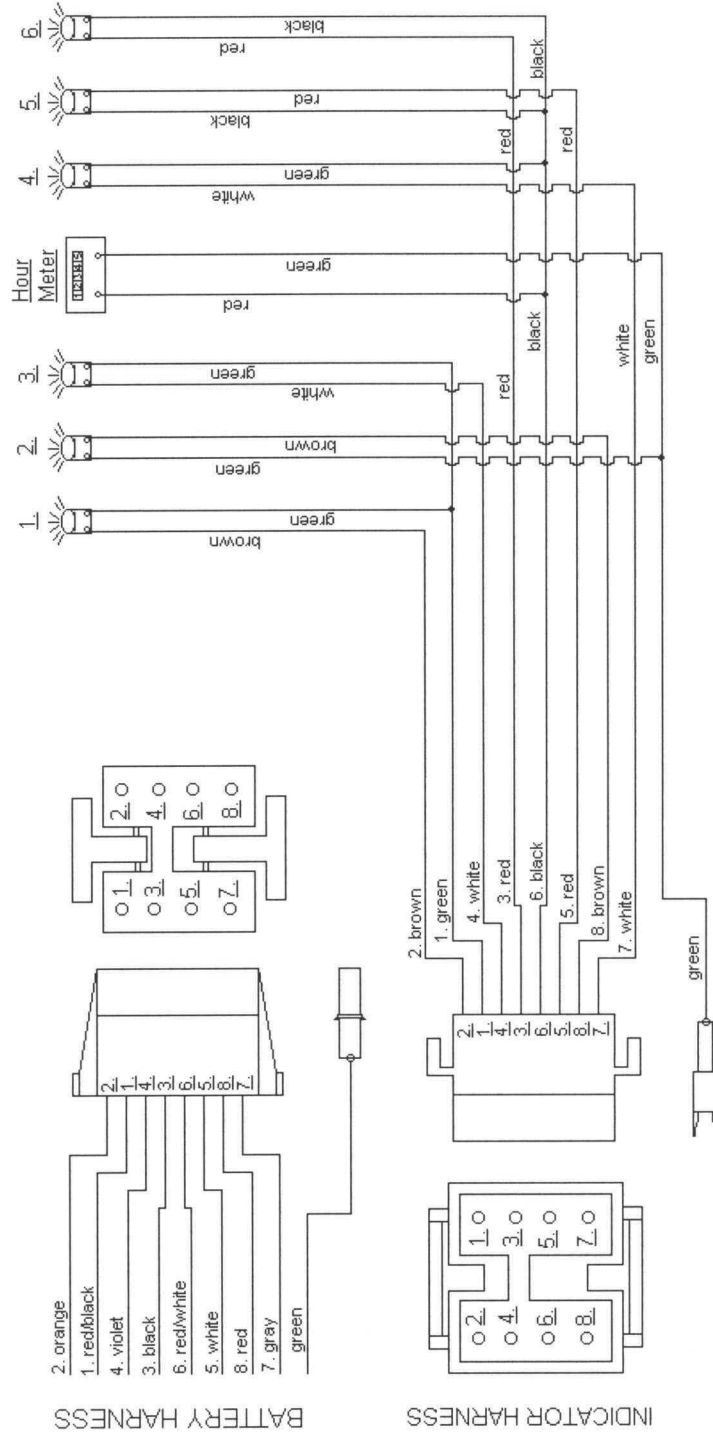

DASH LIGHTS


1:	DEPRESS LEFT PEDAL
2:	DISENGAGE PTO
3:	IN REVERSE
4:	AMP
5:	LOW FUEL
6:	LOW OIL

MODELS 1450

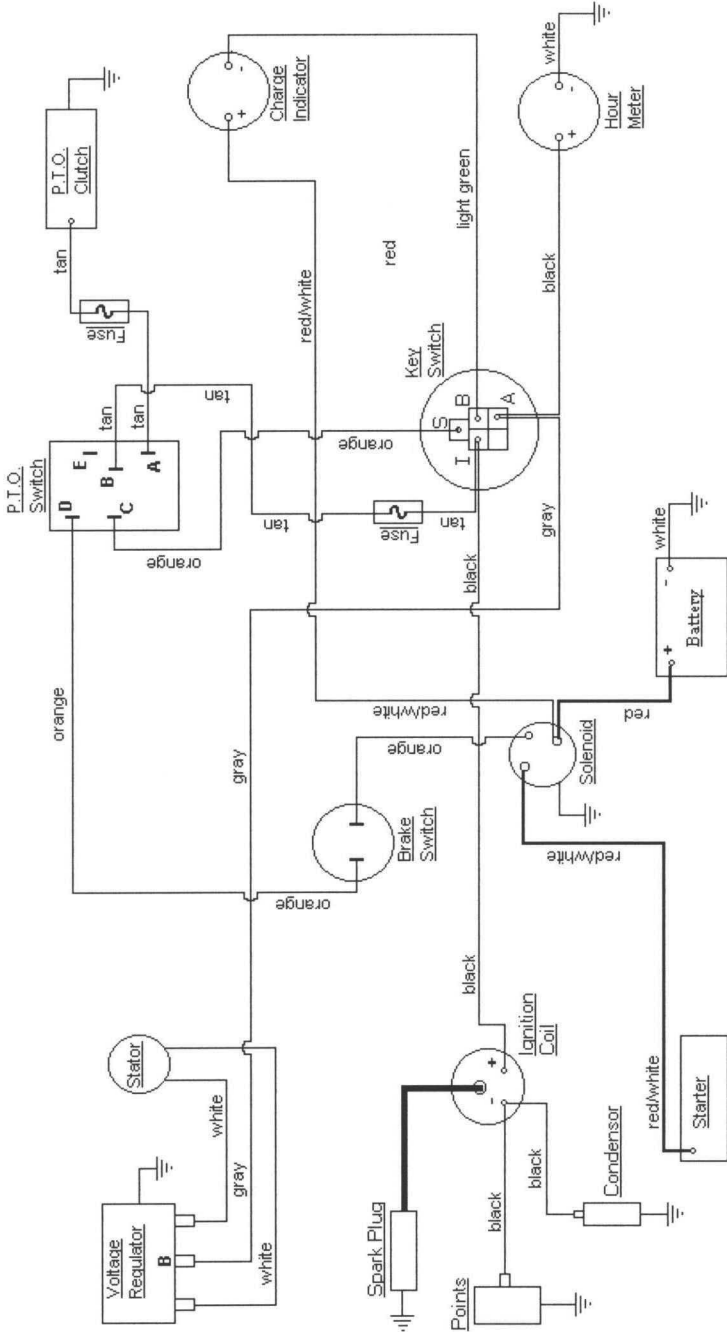


P.T.O. SWITCH	
OFF	B+E, C+D
ON	B+A

KEY SWITCH	
OFF	NONE
RUN	B+I+A
START	B+I+S

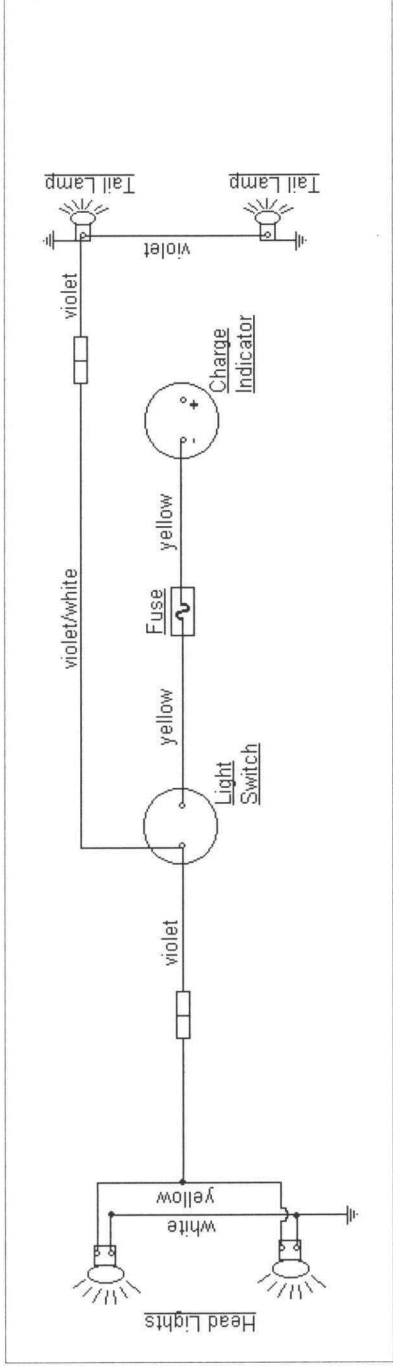


Electric Lighting Wiring Diagram.

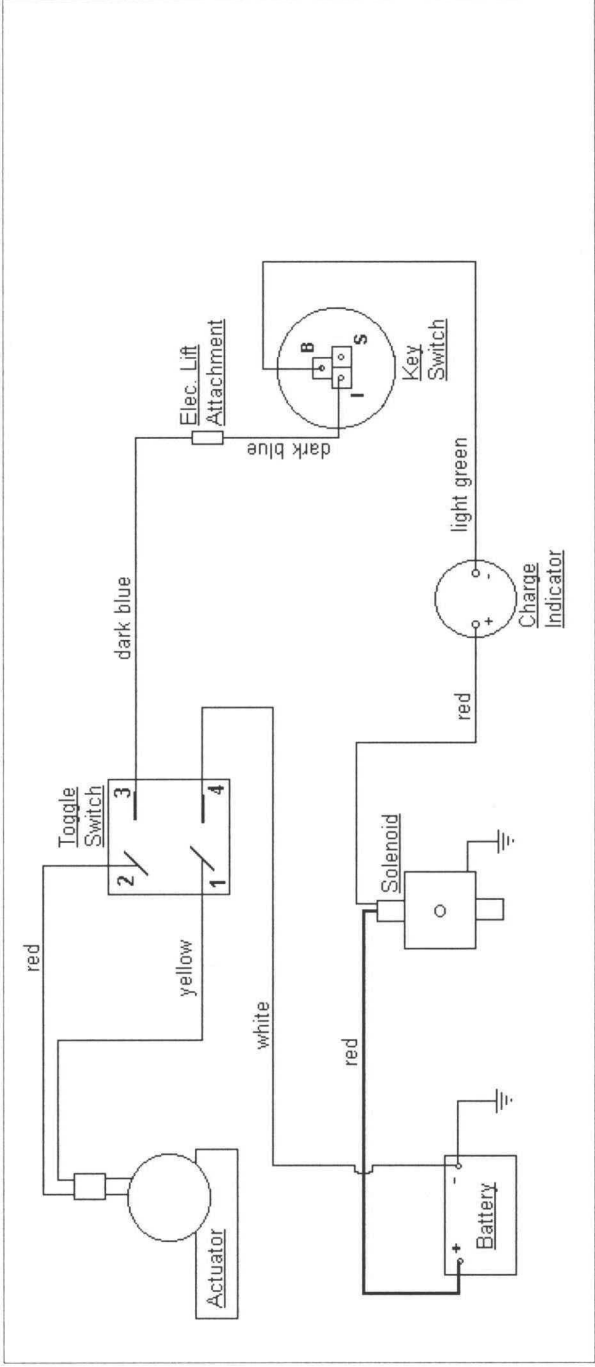

Electric Lift Wiring Diagram.



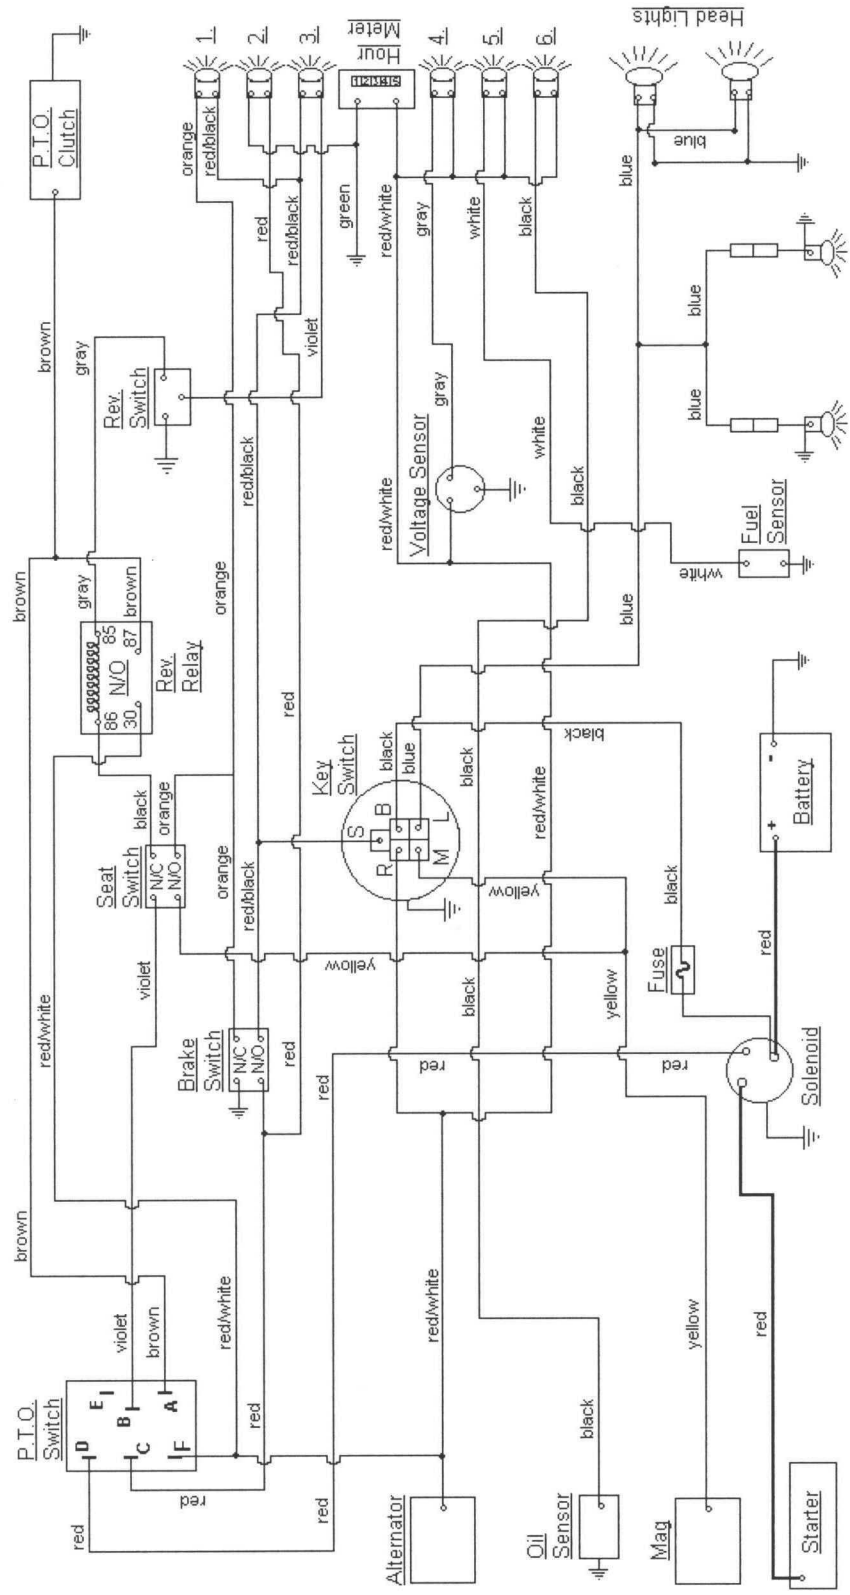


DASH LIGHTS	
1:	DEPRESS LEFT PEDAL
2:	DISENGAGE PTO
3:	IN REVERSE
4:	AMP
5:	LOW FUEL
6:	LOW OIL


KEY SWITCH	
OFF	M+GROUND
RUN w/LIGHTS	B+R+L
RUN	B+R
START	B+S

PTO SWITCH	
OFF	C+D
ON	B+A
START	B+A+F

MODEL 1535
INDICATOR HARNESS

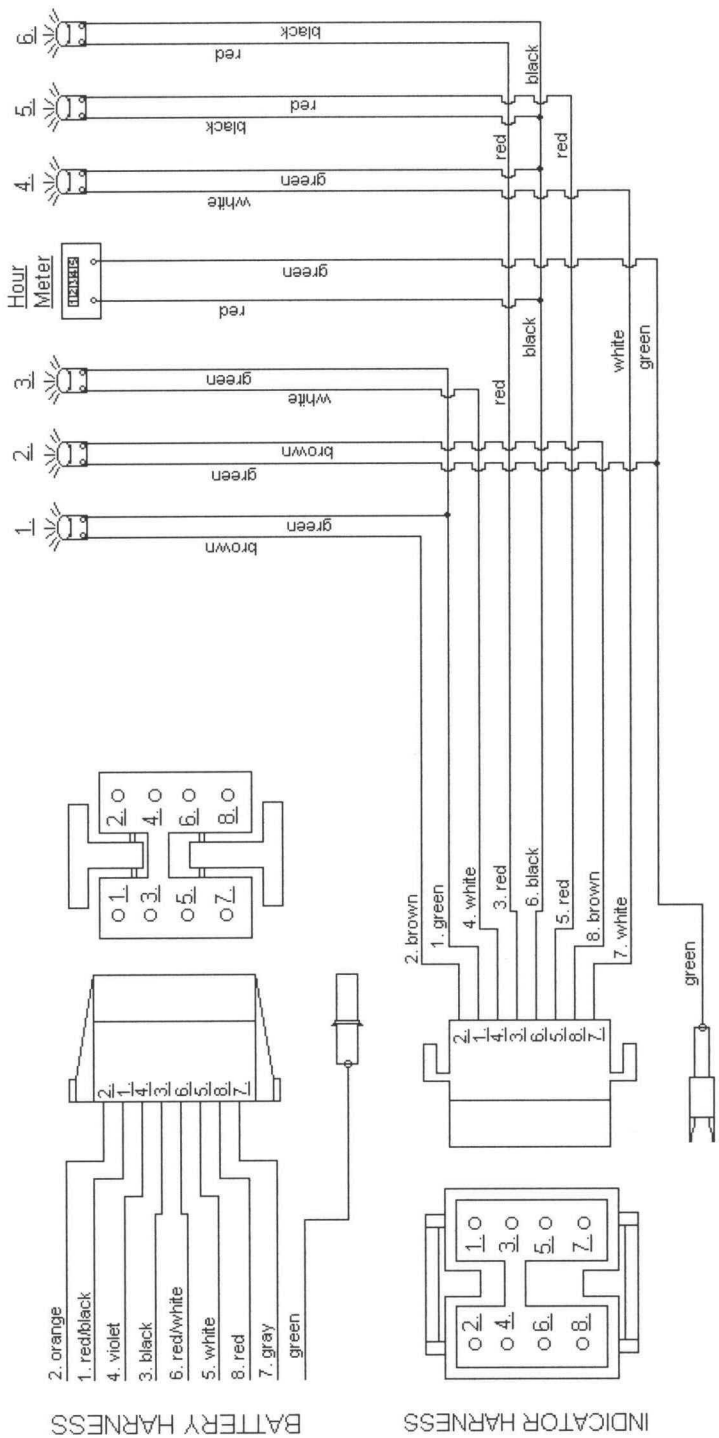



DASH LIGHTS	
1:	DEPRESS LEFT PEDAL
2:	DISENGAGE PTO
3:	IN REVERSE
4:	AMP
5:	LOW FUEL
6:	LOW OIL

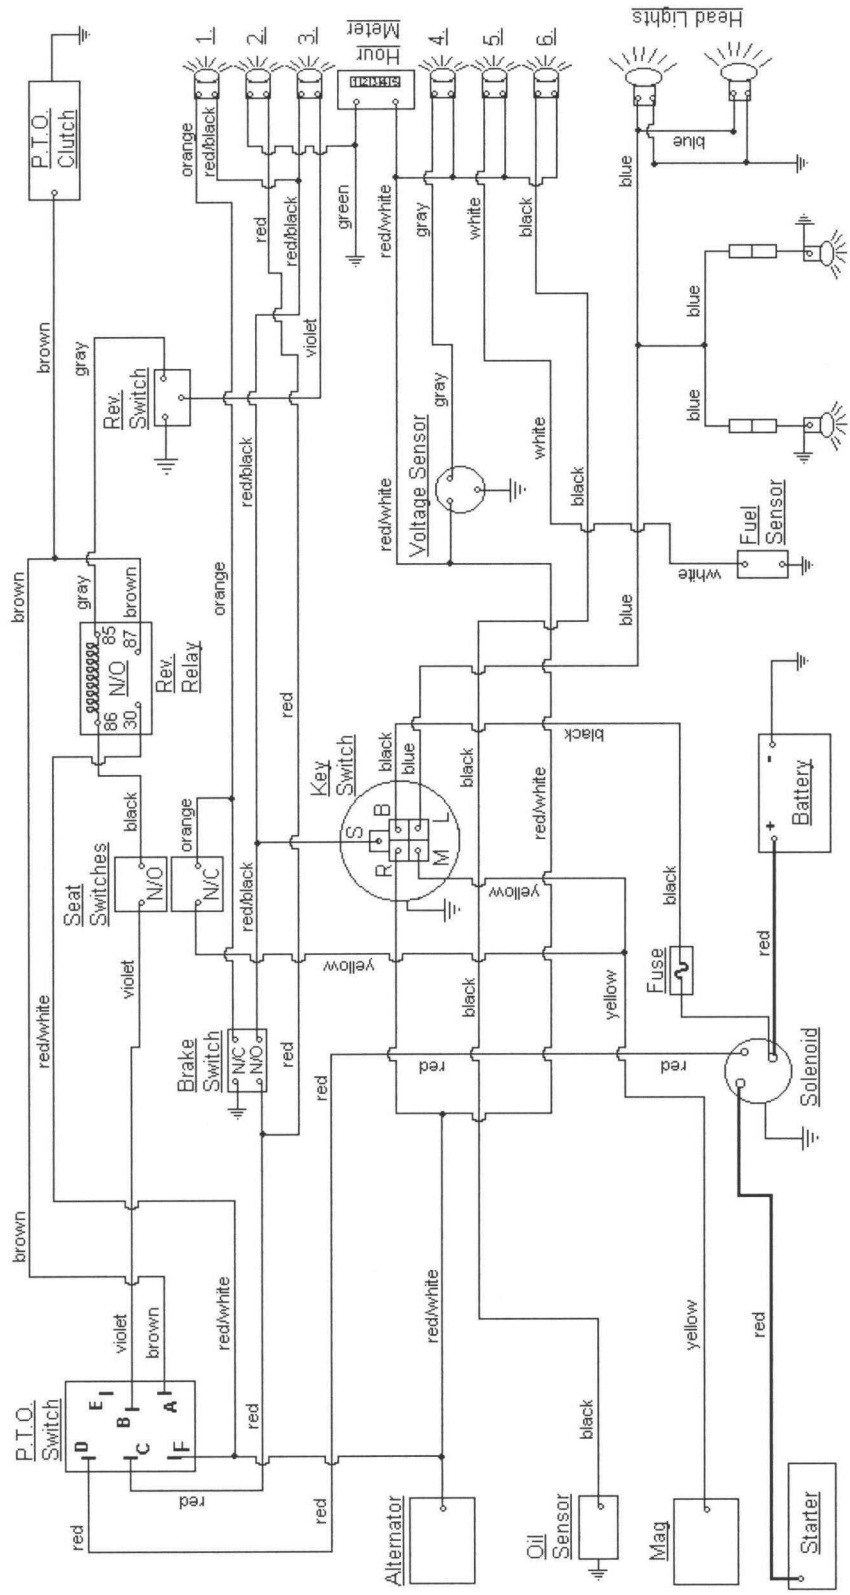

PTO SWITCH		KEY SWITCH		DASH LIGHTS	
OFF	C+D	OFF	M+GROUND	1:	DEPRESS LEFT PEDAL
ON	B+A	RUN w/LIGHTS	B+R+L	2:	DISENGAGE PTO
START	B+A+F	RUN	B+R	3:	IN REVERSE
		START	B+S	4:	AMP
				5:	LOW FUEL
				6:	LOW OIL

MODEL 1541
INDICATOR HARNESS

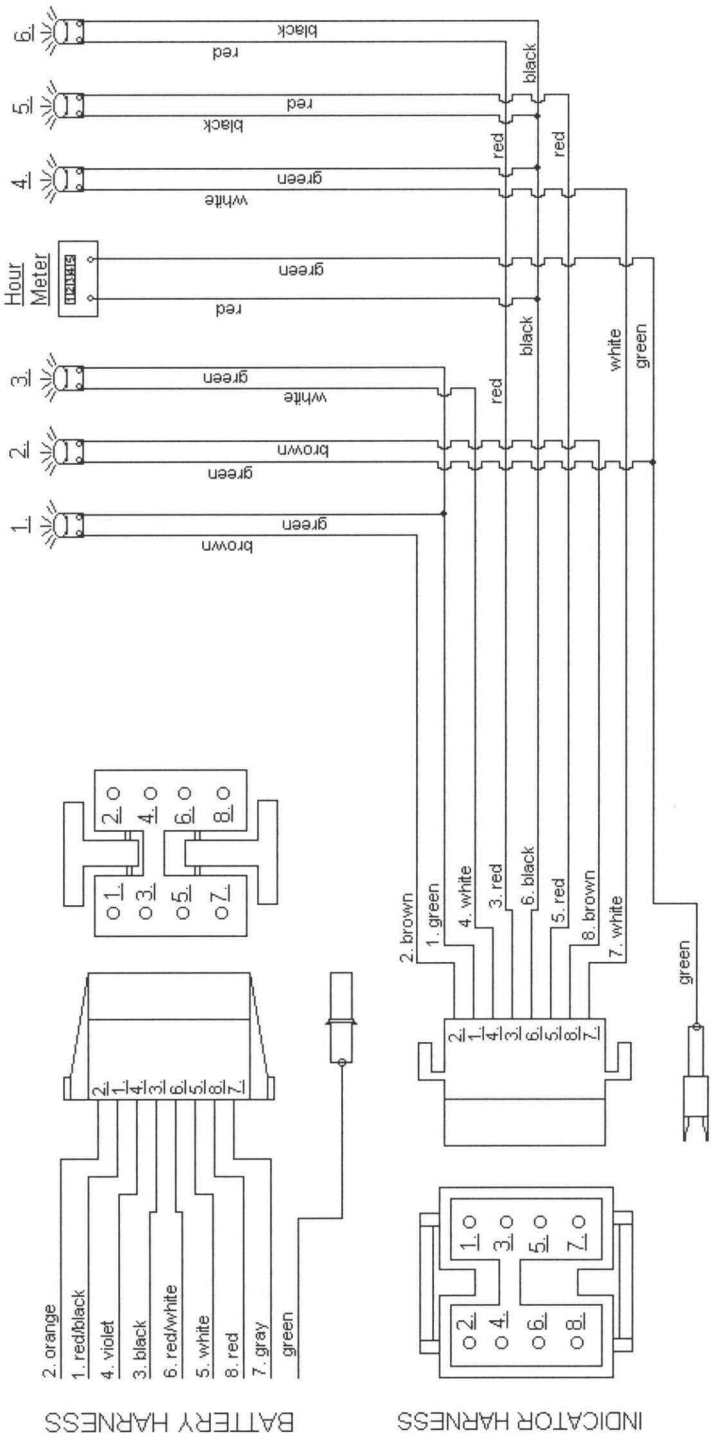


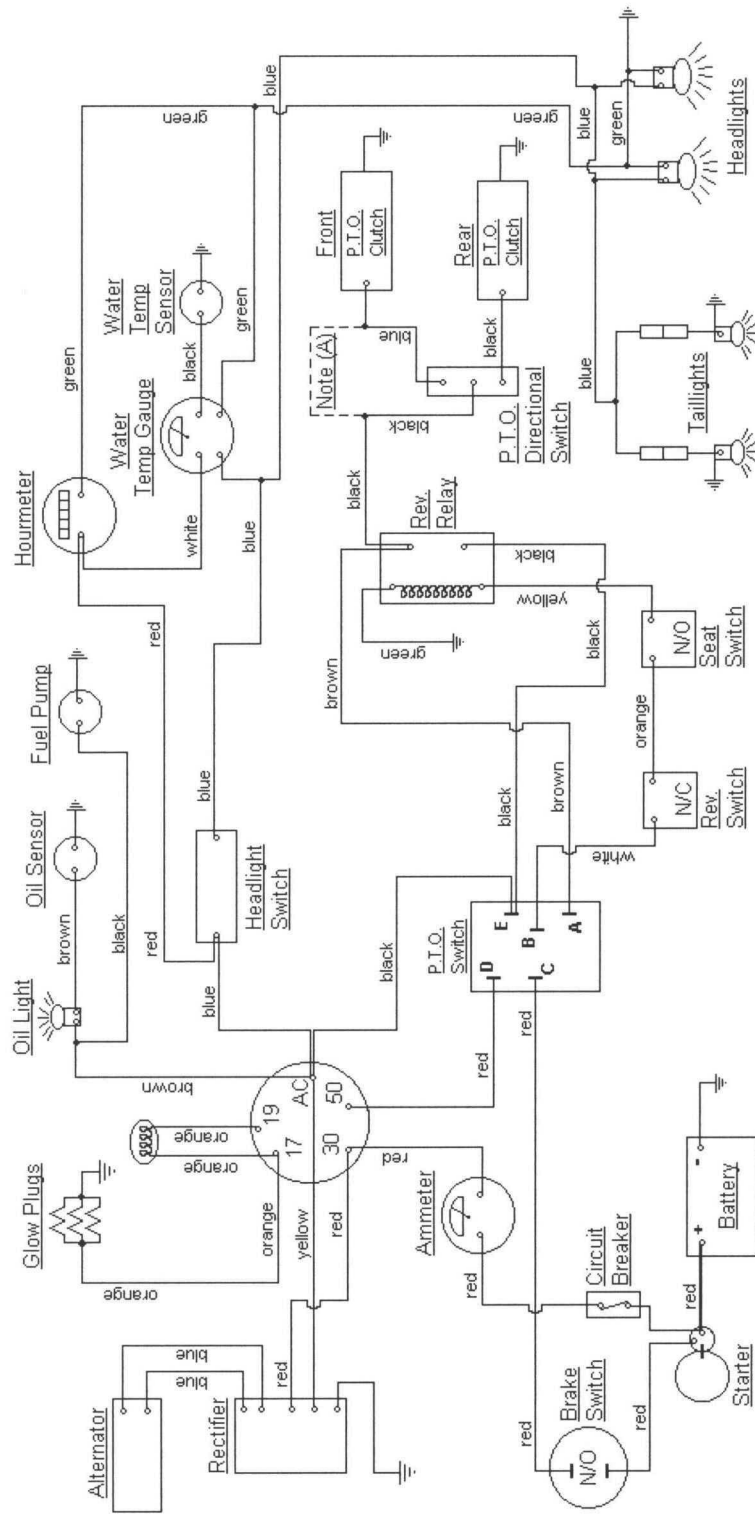

PTO SWITCH	
OFF	C+D
ON	B+A
START	B+A+E

KEY SWITCH	
GLOW PLUG	30+19+AC
OFF	NONE
ON	30+AC
START	30+50+19+AC

NOTE: (A) REMOVE JUMPER FOR REAR P.T.O. INSTALLATION

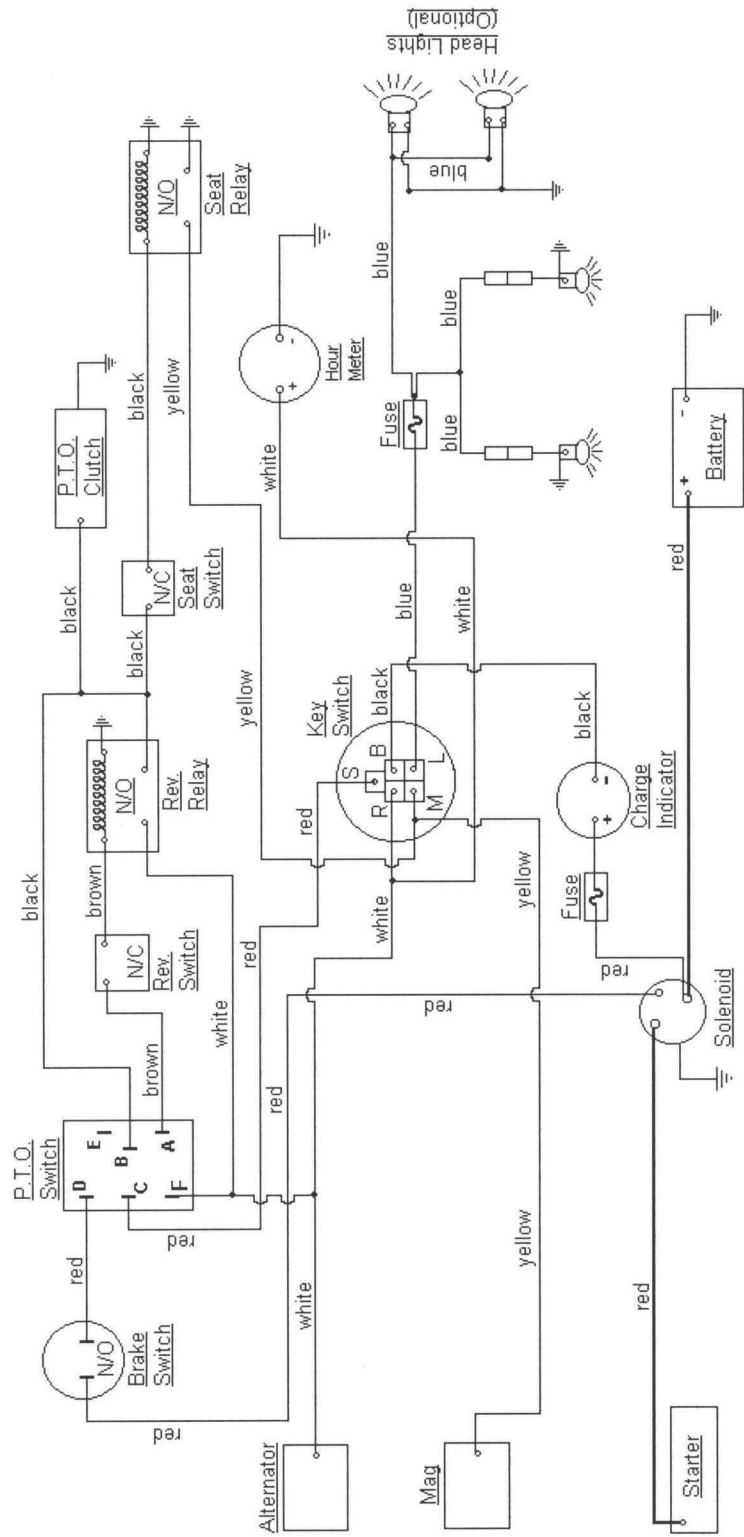


PTO SWITCH	
OFF	C+D
ON	B+A
START	B+A+F

KEY SWITCH	
OFF	M+GROUND
RUN w/LIGHTS	B+R+L
RUN	B+R
START	B+S

NOTE: HEADLIGHTS NOT STANDARD ON THE MODEL 482.

MODEL 1641

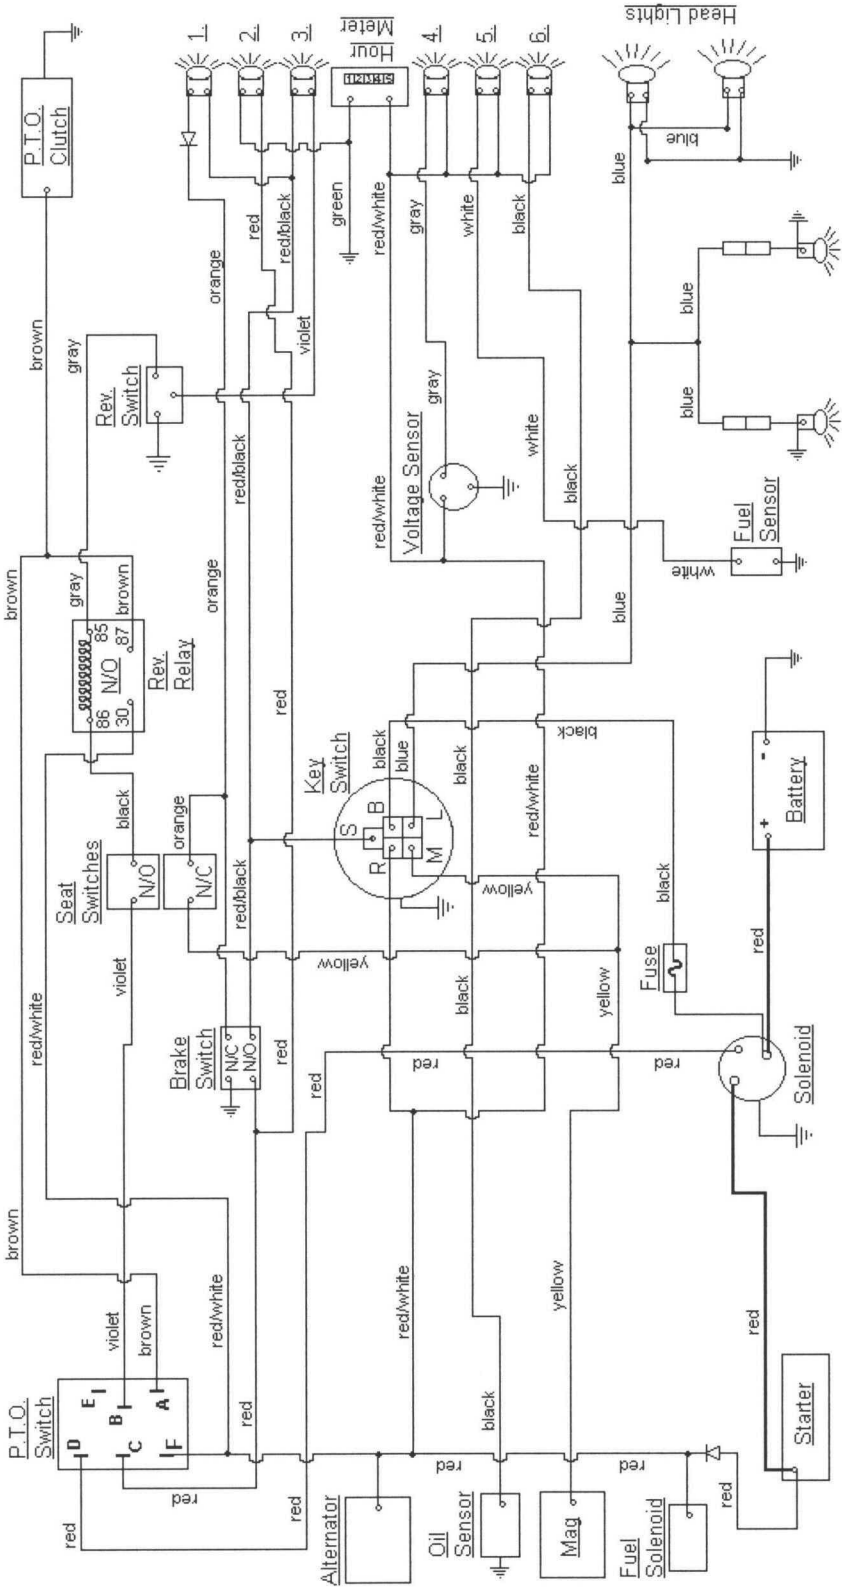

PTO SWITCH


OFF	C+D
ON	B+A
START	B+A+F

KEY SWITCH

OFF	M+GROUND
RUN w/LIGHTS	B+R+L
RUN	B+R
START	B+S


DASH LIGHTS

1: DEPRESS LEFT PEDAL
2: DISENGAGE PTO
3: IN REVERSE
4: AMP
5: LOW FUEL
6: LOW OIL

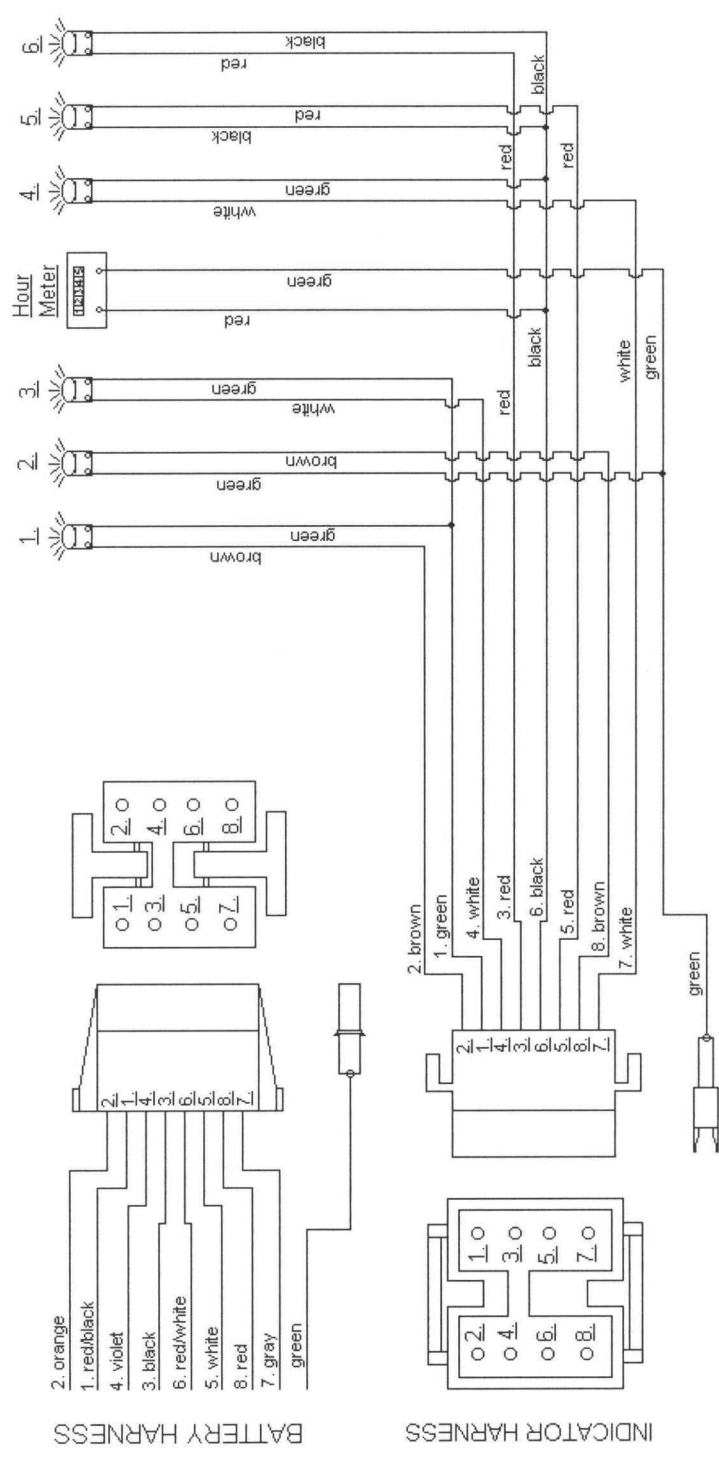


- DASH LIGHTS**
- 1: DEPRESS LEFT PEDAL
 - 2: DISENGAGE PTO
 - 3: IN REVERSE
 - 4: AMP
 - 5: LOW FUEL
 - 6: LOW OIL

MODELS 1650

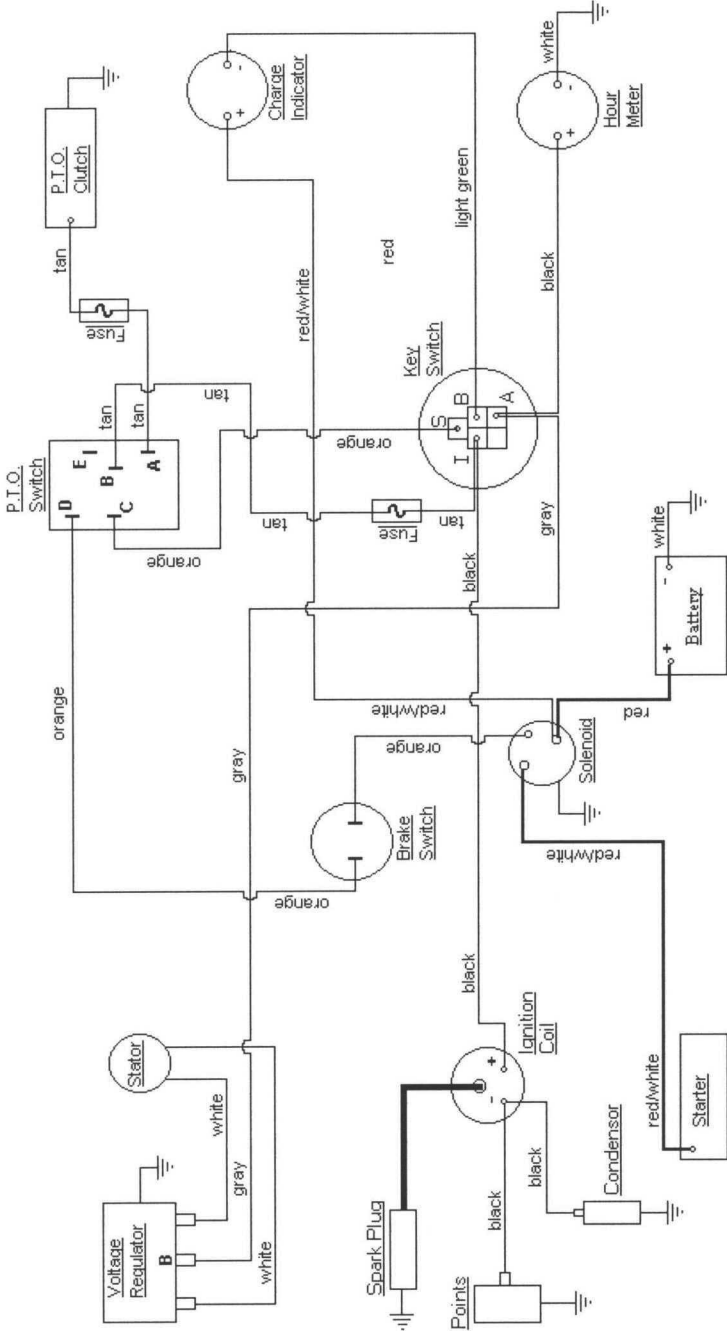


P.T.O. SWITCH	
OFF	B+E, C+D
ON	B+A

KEY SWITCH	
OFF	NONE
RUN	B+I+A
START	B+I+S

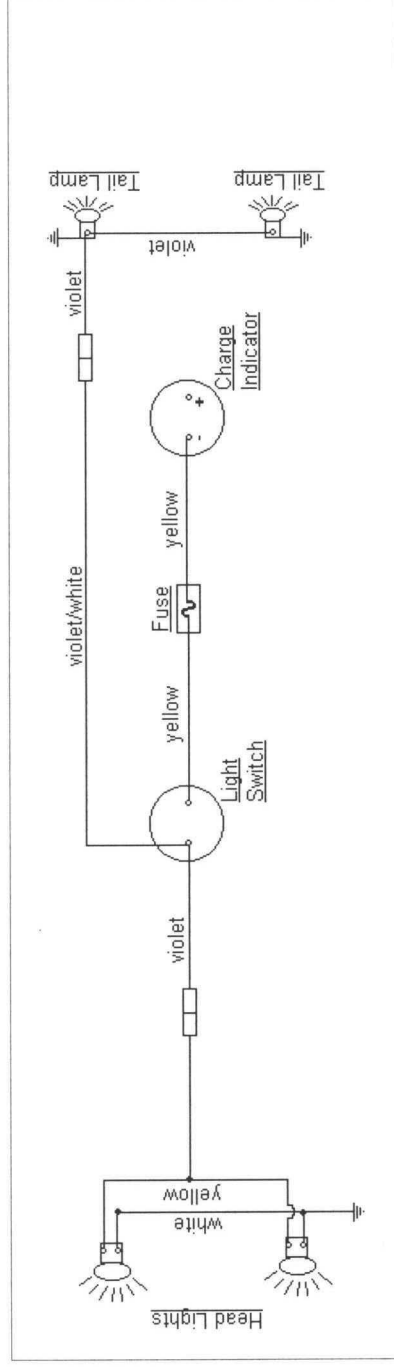


Electric Lighting Wiring Diagram.

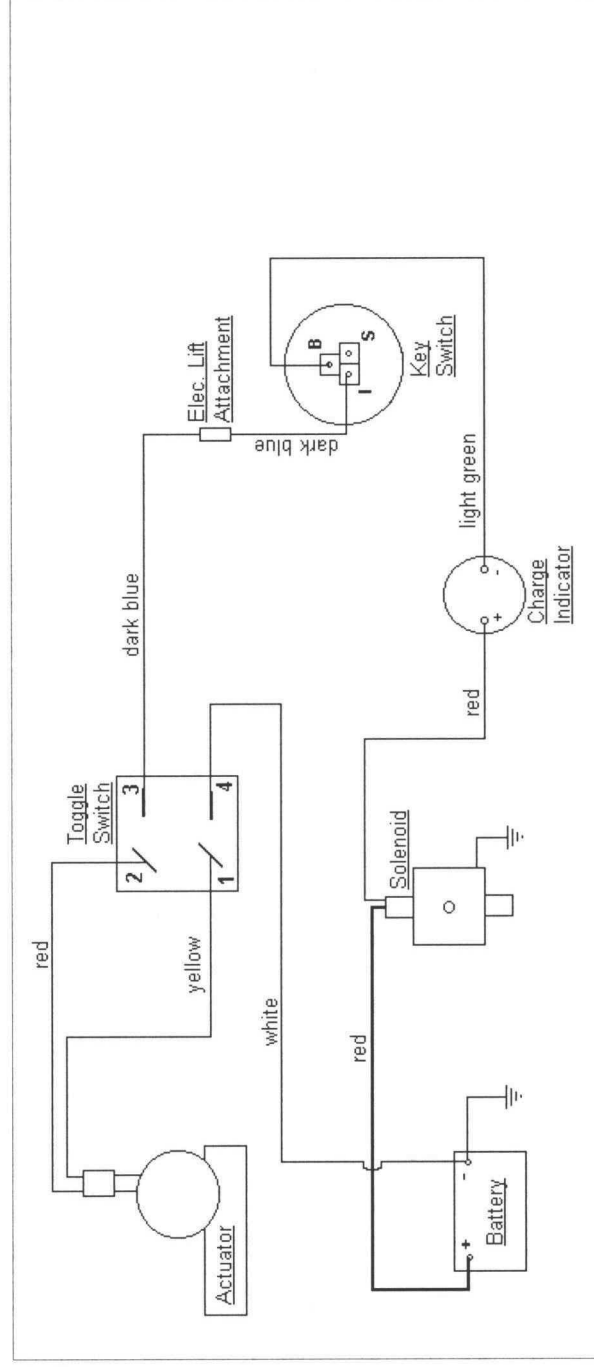


Electric Lift Wiring Diagram.

MODEL 1710

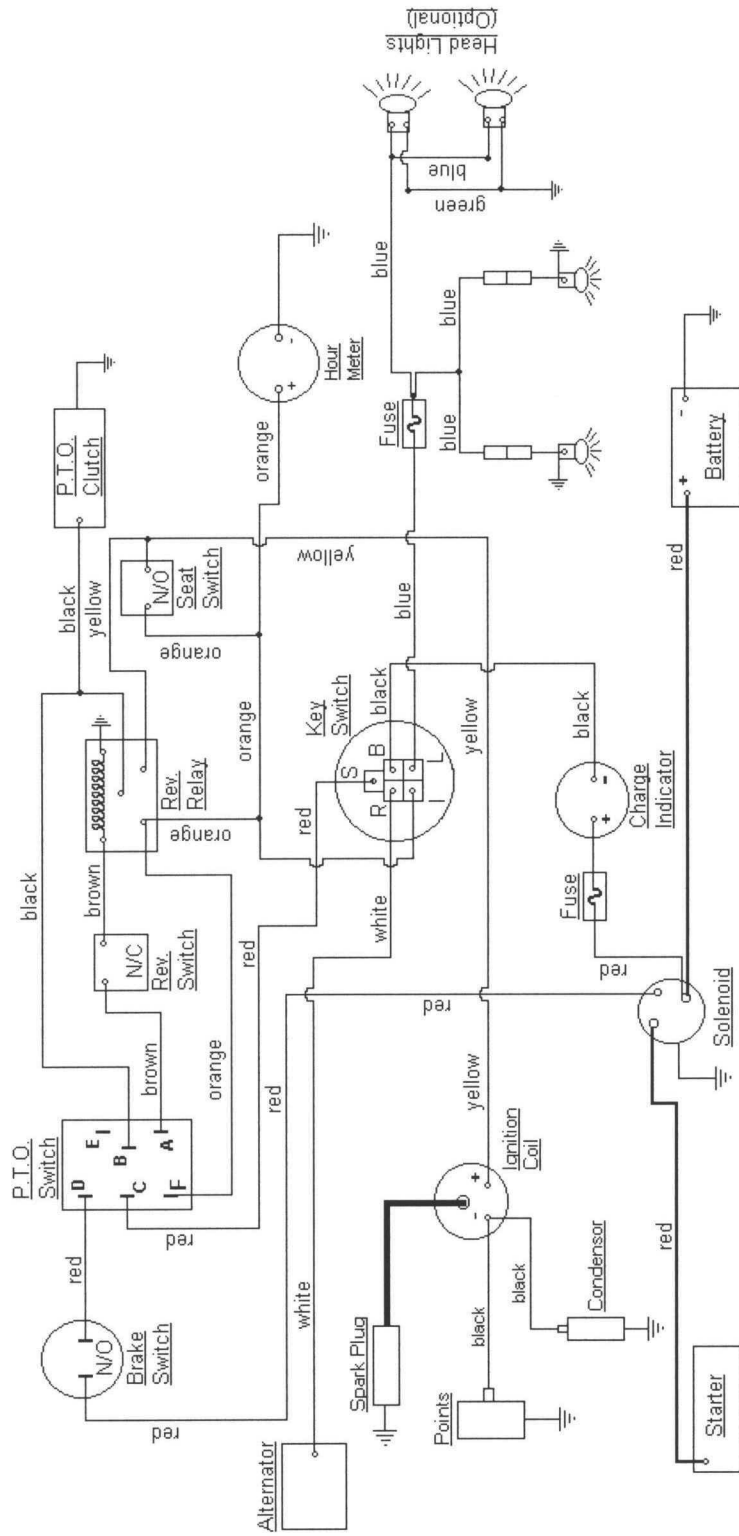

P.T.O. SWITCH	
OFF	C+D
ON	B+A
START	B+A+F


KEY SWITCH	
OFF	NONE
RUN w/LIGHTS	B+I+R+L
START	B+I+R
START	B+I+S

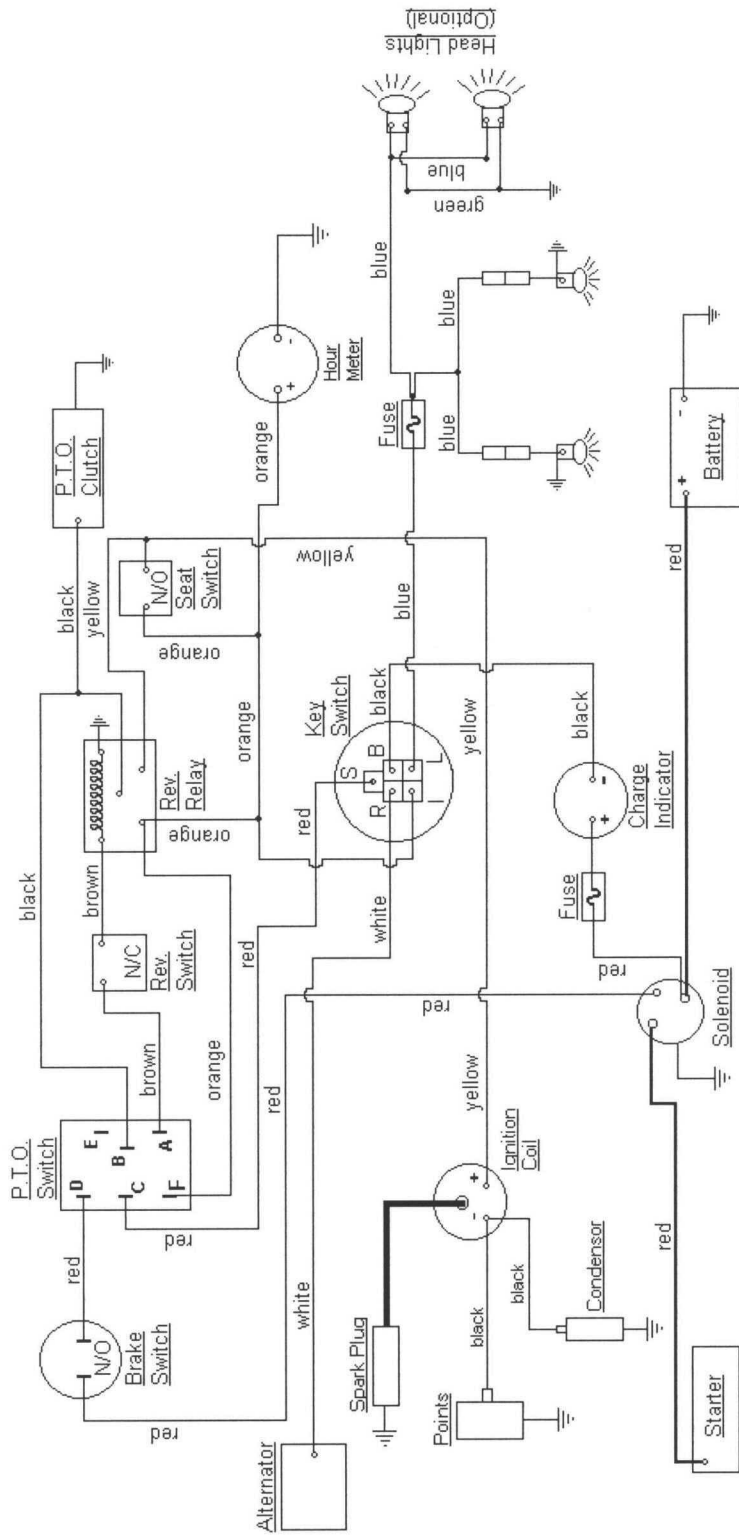

P.T.O. SWITCH	
OFF	C+D
ON	B+A
START	B+A+F


KEY SWITCH	
OFF	NONE
RUN w/LIGHTS	B+I+R+L
RUN	B+I+R
START	B+I+S

MODEL 1712

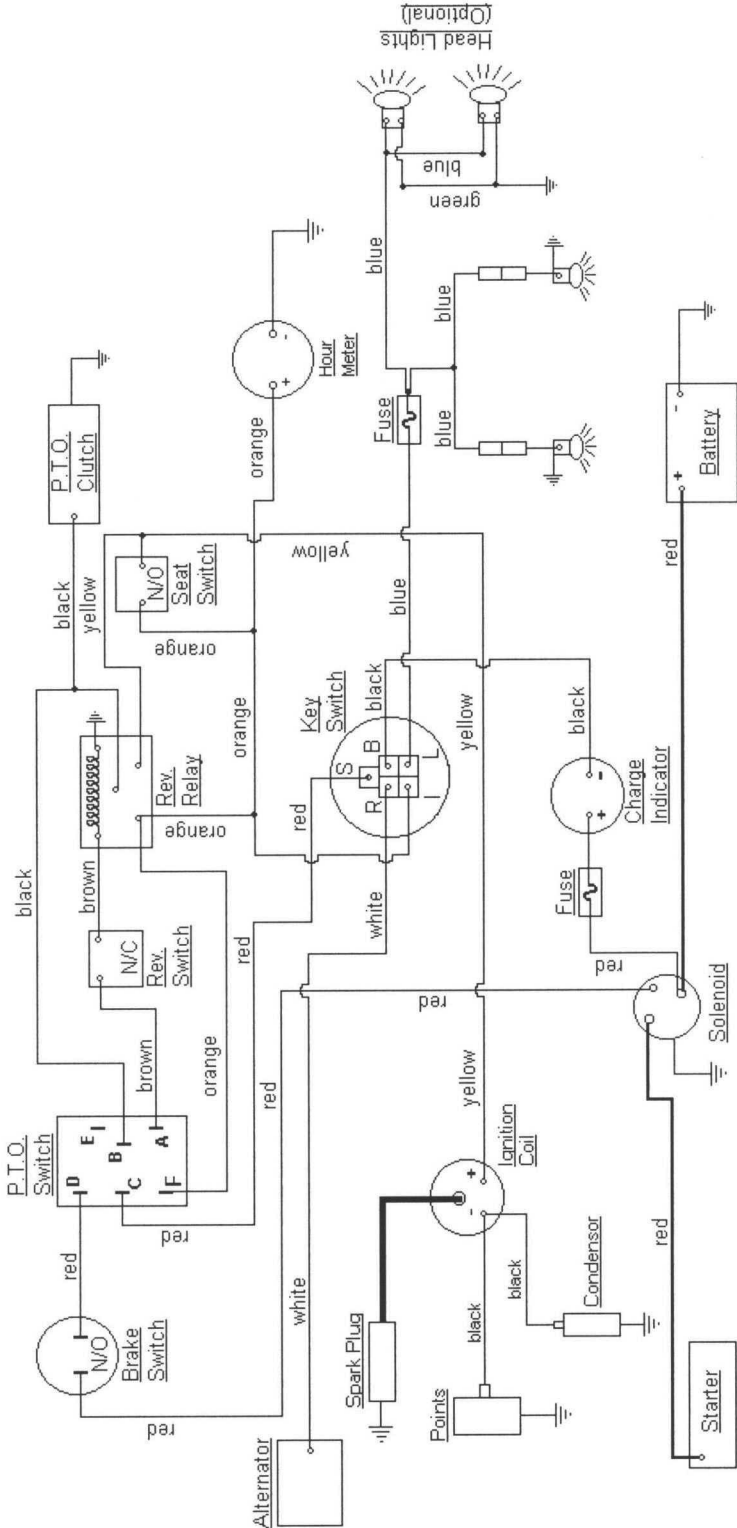

P.T.O. SWITCH	
OFF	C+D
ON	B+A
START	B+A+F

KEY SWITCH	
OFF	NONE
RUN w/LIGHTS	B+I+R+L
RUN	B+I+R
START	B+I+S

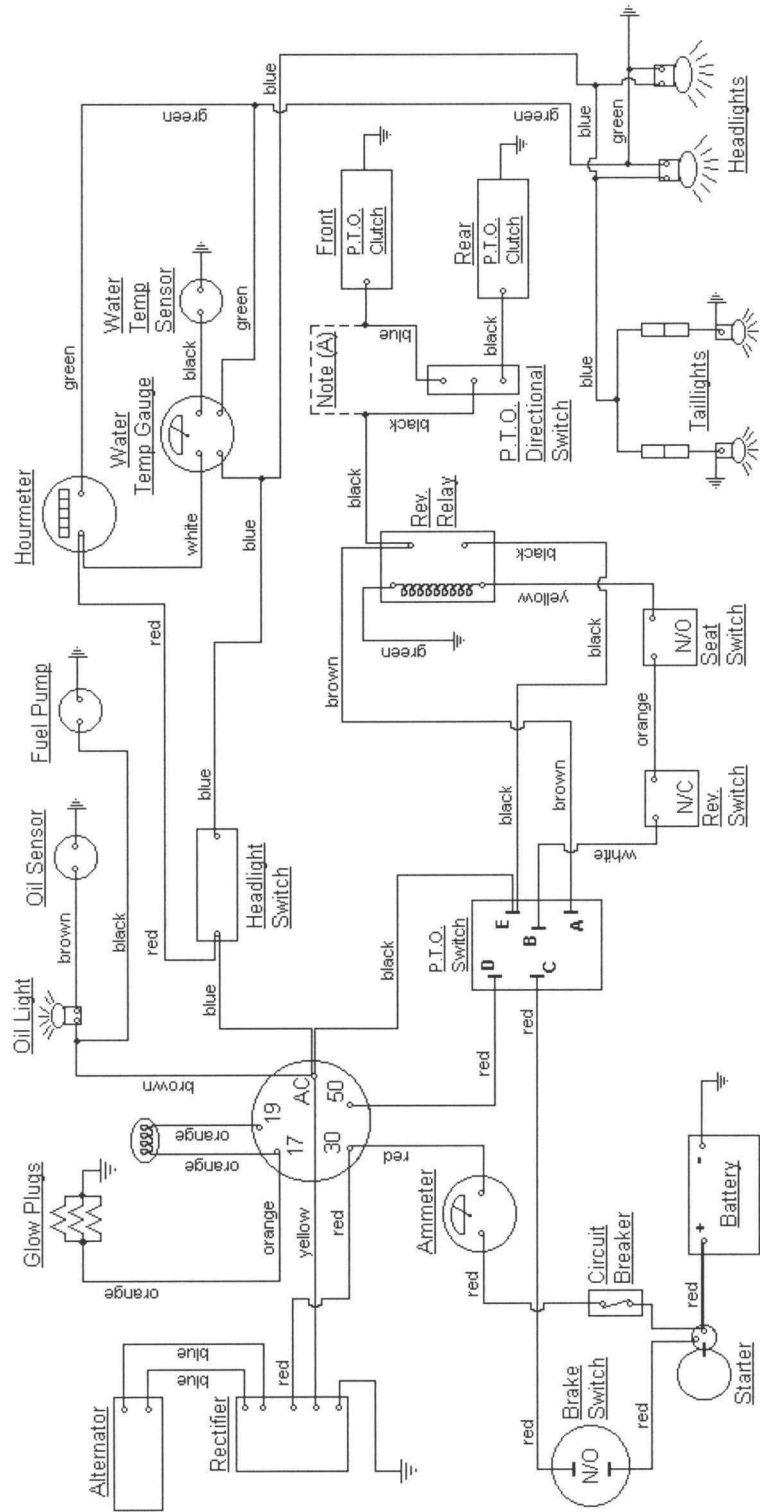


PTO SWITCH	
OFF	C+D
ON	B+A
START	B+A+E

KEY SWITCH	
GLOW PLUG	30+19+AC
OFF	NONE
ON	30+AC
START	30+50+19+AC

NOTE: (A) REMOVE JUMPER FOR REAR P.T.O. INSTALLATION

MODEL 1782 DIESEL

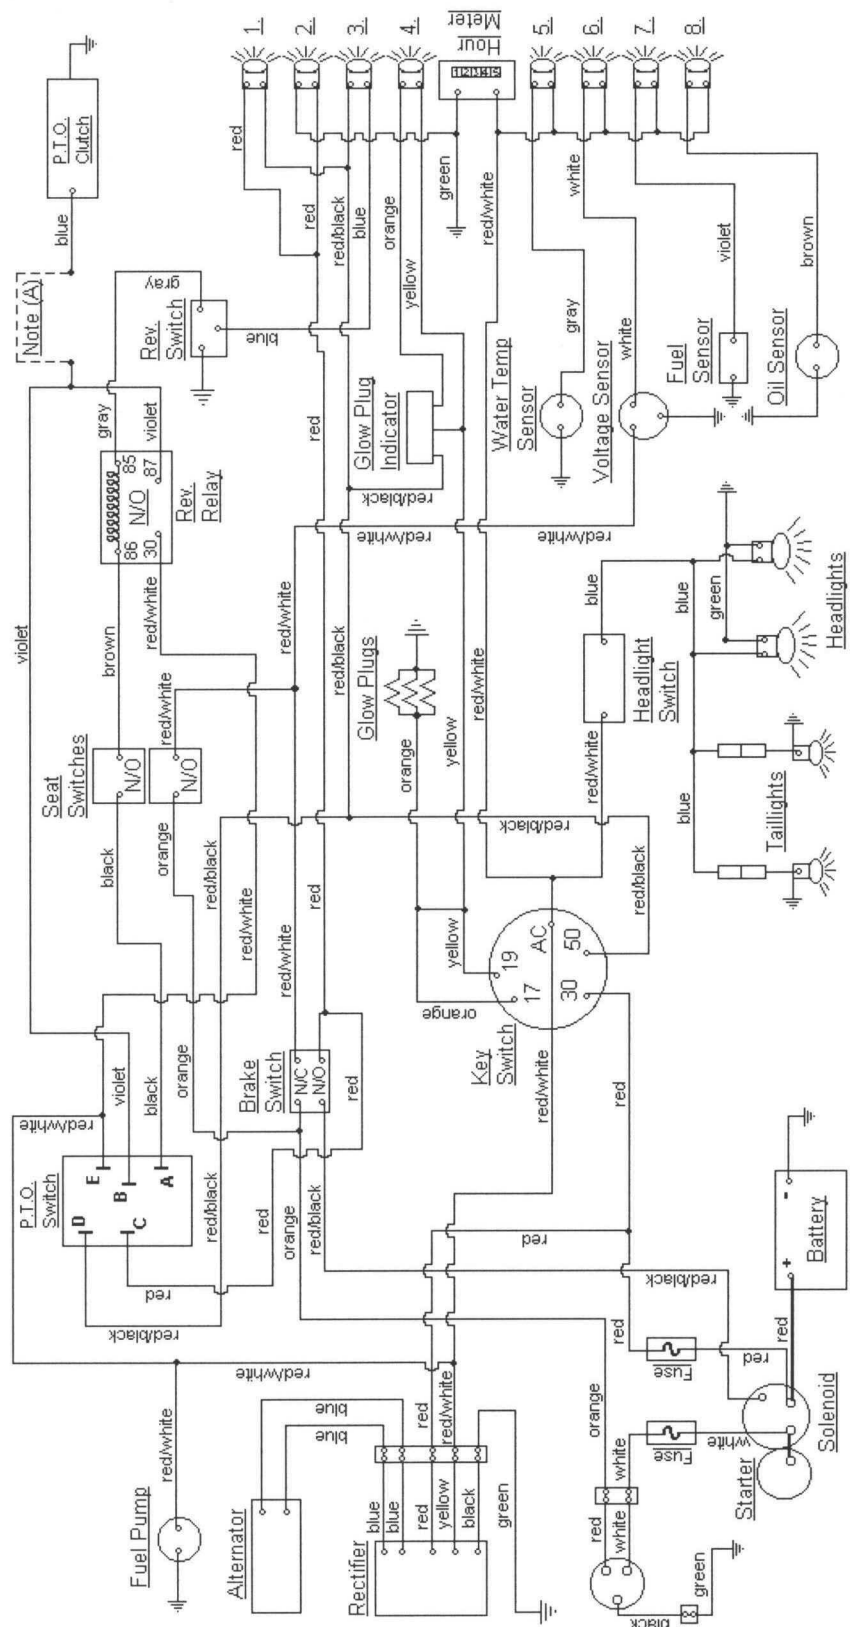

NOTE: (A) REMOVE JUMPER FOR REAR P.T.O. INSTALLATION

P.T.O. SWITCH	
OFF	C+D
ON	B+A
START	B+A+E

KEY SWITCH	
PREHEAT	30+19+AC
ON	30+AC
START	30+50+17+AC

DASH LIGHTS

1: DEPRESS LEFT PEDAL	5: WATER TEMP
2: DISENGAGE PTO	6: AMP
3: IN REVERSE	7: LOW FUEL
4: GLOW PLUGS	8: LOW OIL



MODEL 1782 DIESEL INDICATOR HARNESS