

**SERIES
3000
CUB CADET
TRACTORS
WIRE
SCHEMATICS**


3000 SERIES INDEX

MODEL	DESCRIPTION	PAGE
3165	Tractor Diagram (1998-1999)	F1.
3184	Tractor Diagram (2000)	F2.
3184	Tractor Diagram (2001)	F3.
3185	Tractor Diagram (1998-1999)	F4.
3186	Tractor Diagram (1999)	F5.
3204	Tractor Diagram (2002)	F6.
3205	Tractor Diagram (1998-1999)	F7.
3206	Tractor Diagram (2000)	F8.
3206	Tractor Diagram (2001)	F9.
3206	Tractor Diagram (2002)	F10.
3208	Tractor Diagram (2000)	F11.
3208	Tractor Diagram (2001)	F12.
3225	Tractor Diagram (1998)	F13.
3225	Tractor Diagram (1999)	F14.
3235	Tractor Diagram (2000)	F15.
3235	Tractor Diagram (2001)	F16.
3235	Tractor Diagram (2002)	F17.
3240	Tractor Diagram (2001)	F18.

THIS PAGE LEFT INTENTIONALLY BLANK

MODEL 3165 (1998-1999)

F1.

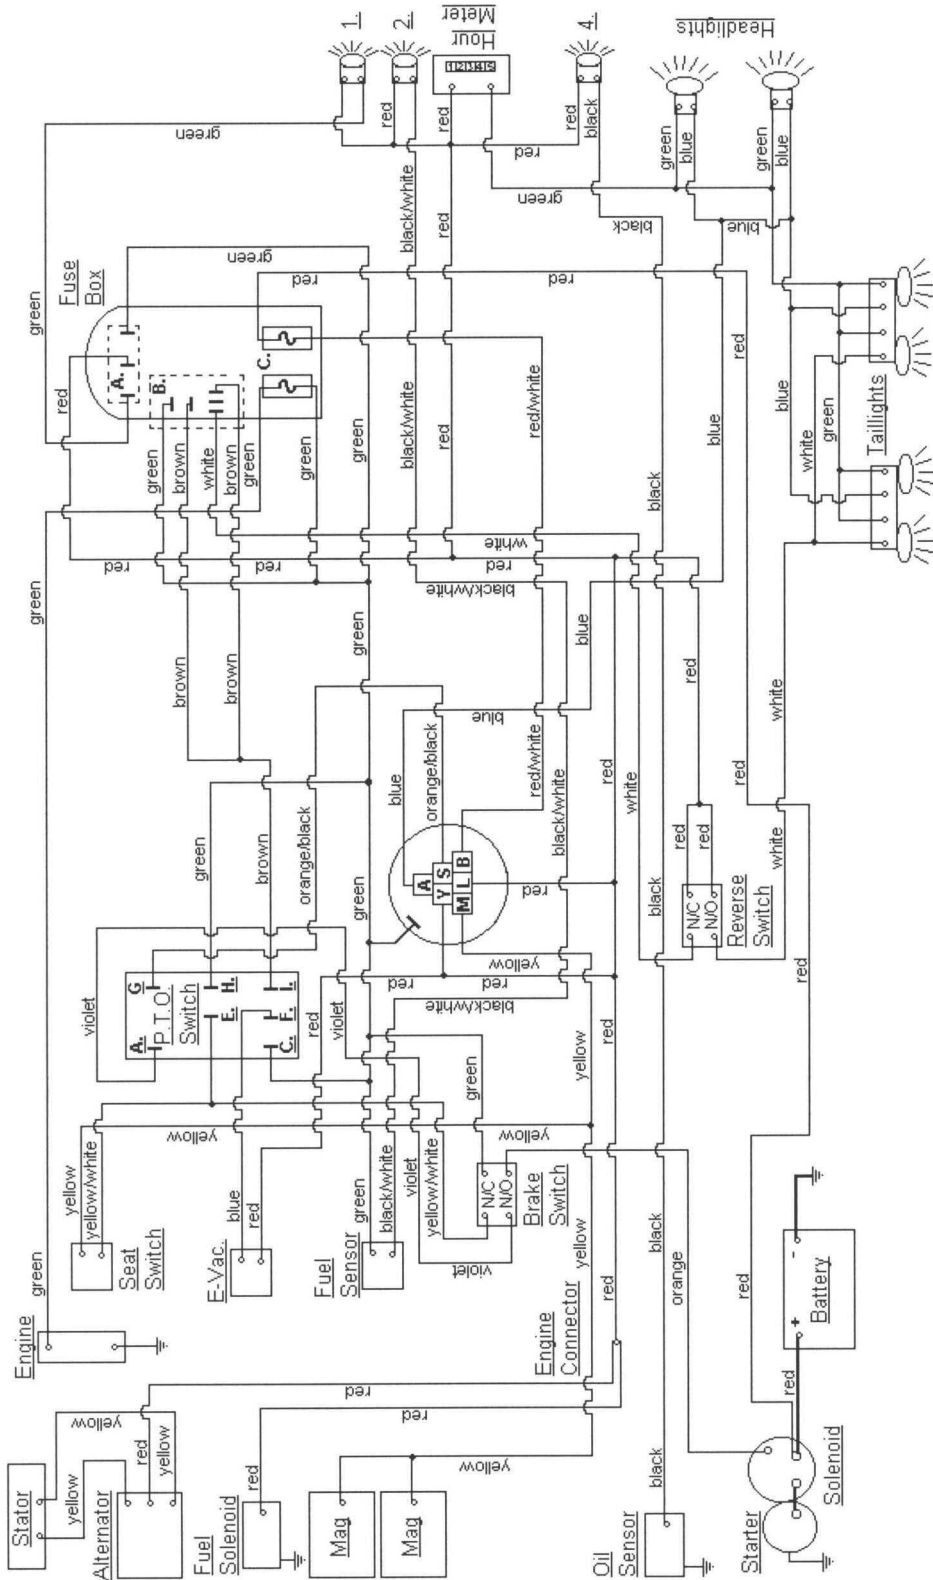

KEY SWITCH


OFF	M+G
RUN w/LIGHTS	B+A+L+Y
RUN	B+L
START	B+L+S

DASH LIGHTS

1:	LOW VOLTAGE
2:	LOW FUEL
4:	LOW OIL

FUSE BOX

A:	VOLTAGE SENSOR
B:	RELAY
C:	FUSES

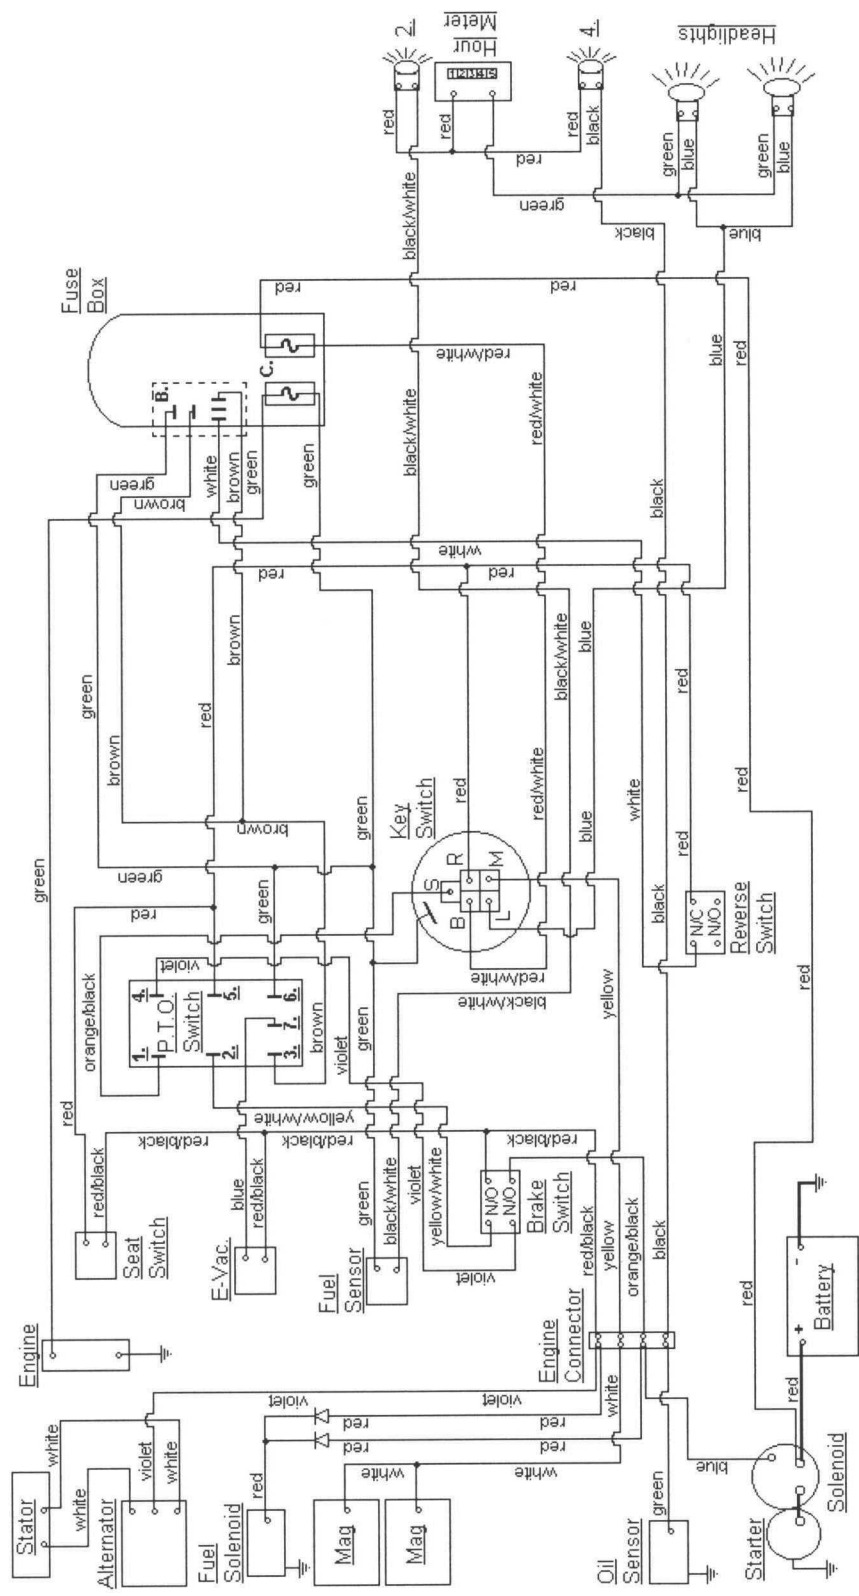


KEY SWITCH	
OFF	M+G
RUN w/LIGHTS	B+L+R
RUN	B+R
START	B+S

DASH LIGHTS	
2:	LOW FUEL
4:	LOW OIL

FUSE BOX	
B:	RELAY
C:	FUSES

MODEL 3184 (2001)

F3.

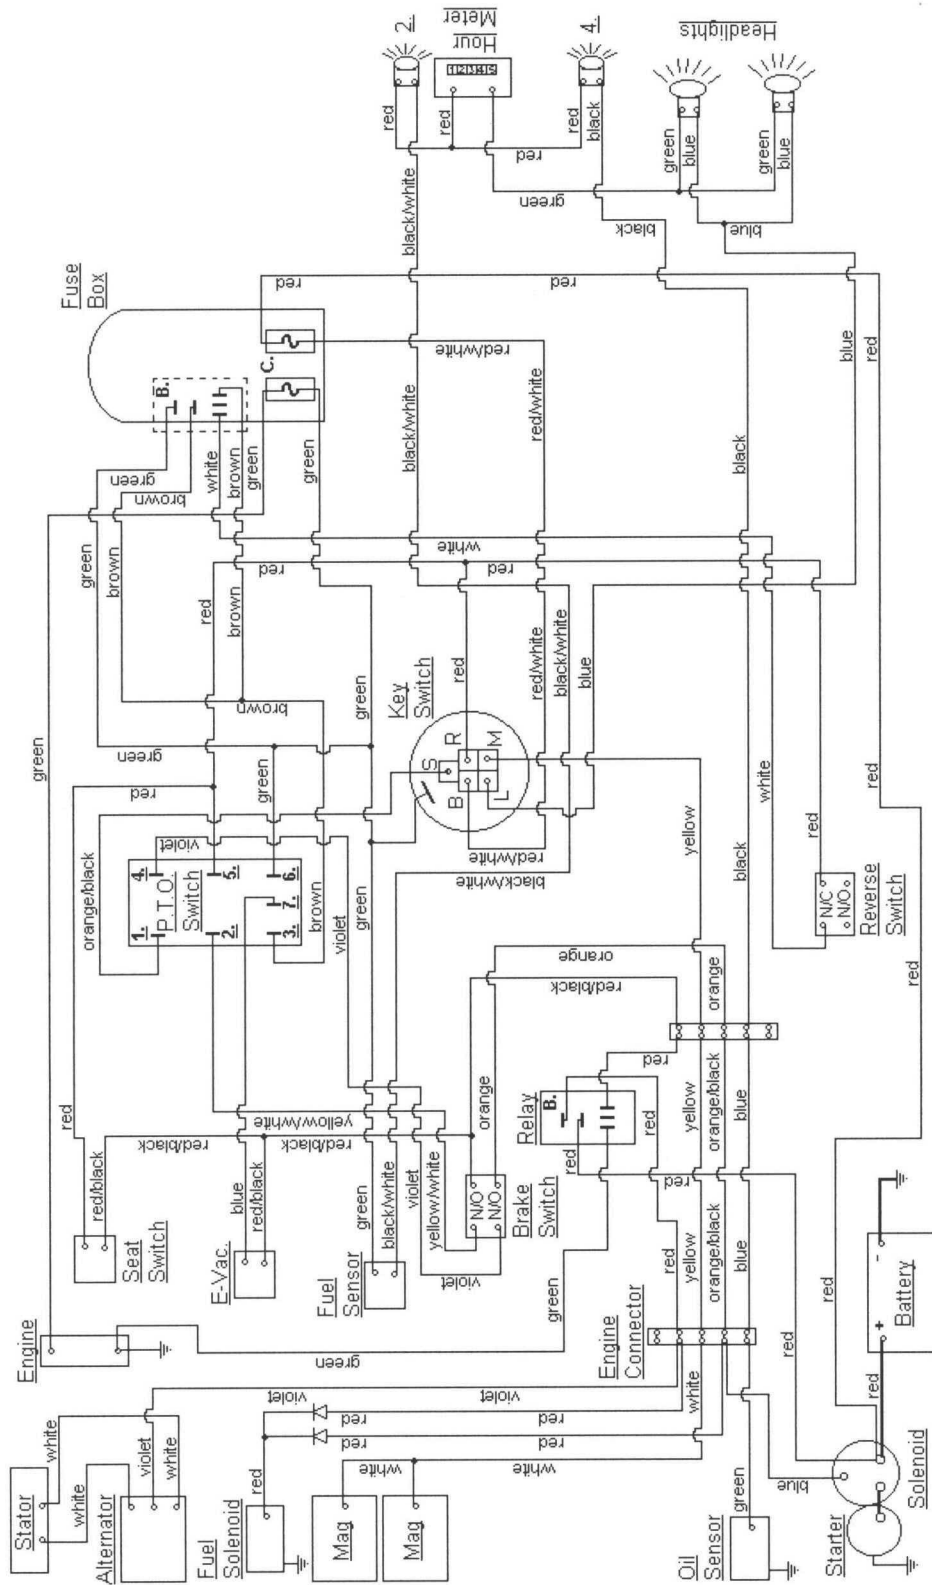

KEY SWITCH


OFF	M+G
RUN w/LIGHTS	B+L+R
RUN	B+R
START	B+S

DASH LIGHTS

2:	LOW FUEL
4:	LOW OIL

FUSE BOX

B:	RELAY
C:	FUSES

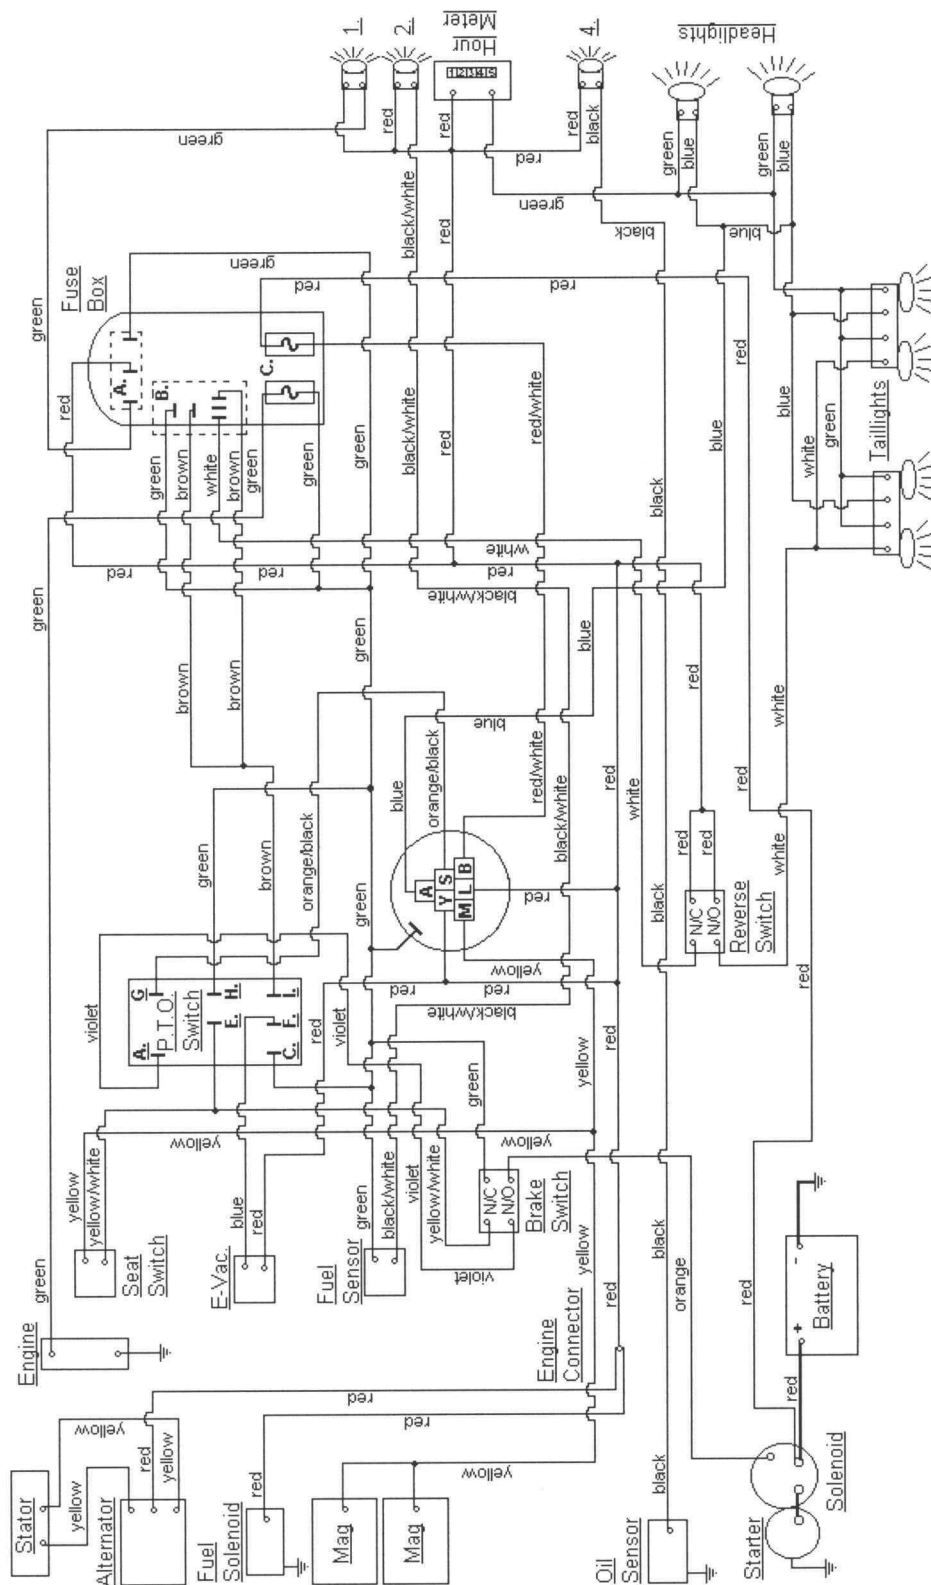

KEY SWITCH

OFF	M+G
RUN w/LIGHTS	B+A+L+Y
RUN	B+L
START	B+L+S

DASH LIGHTS


1:	LOW VOLTAGE
2:	LOW FUEL
4:	LOW OIL

FUSE BOX

A:	VOLTAGE SENSOR
B:	RELAY
C:	FUSES

MODEL 3186 (1999)

F5.

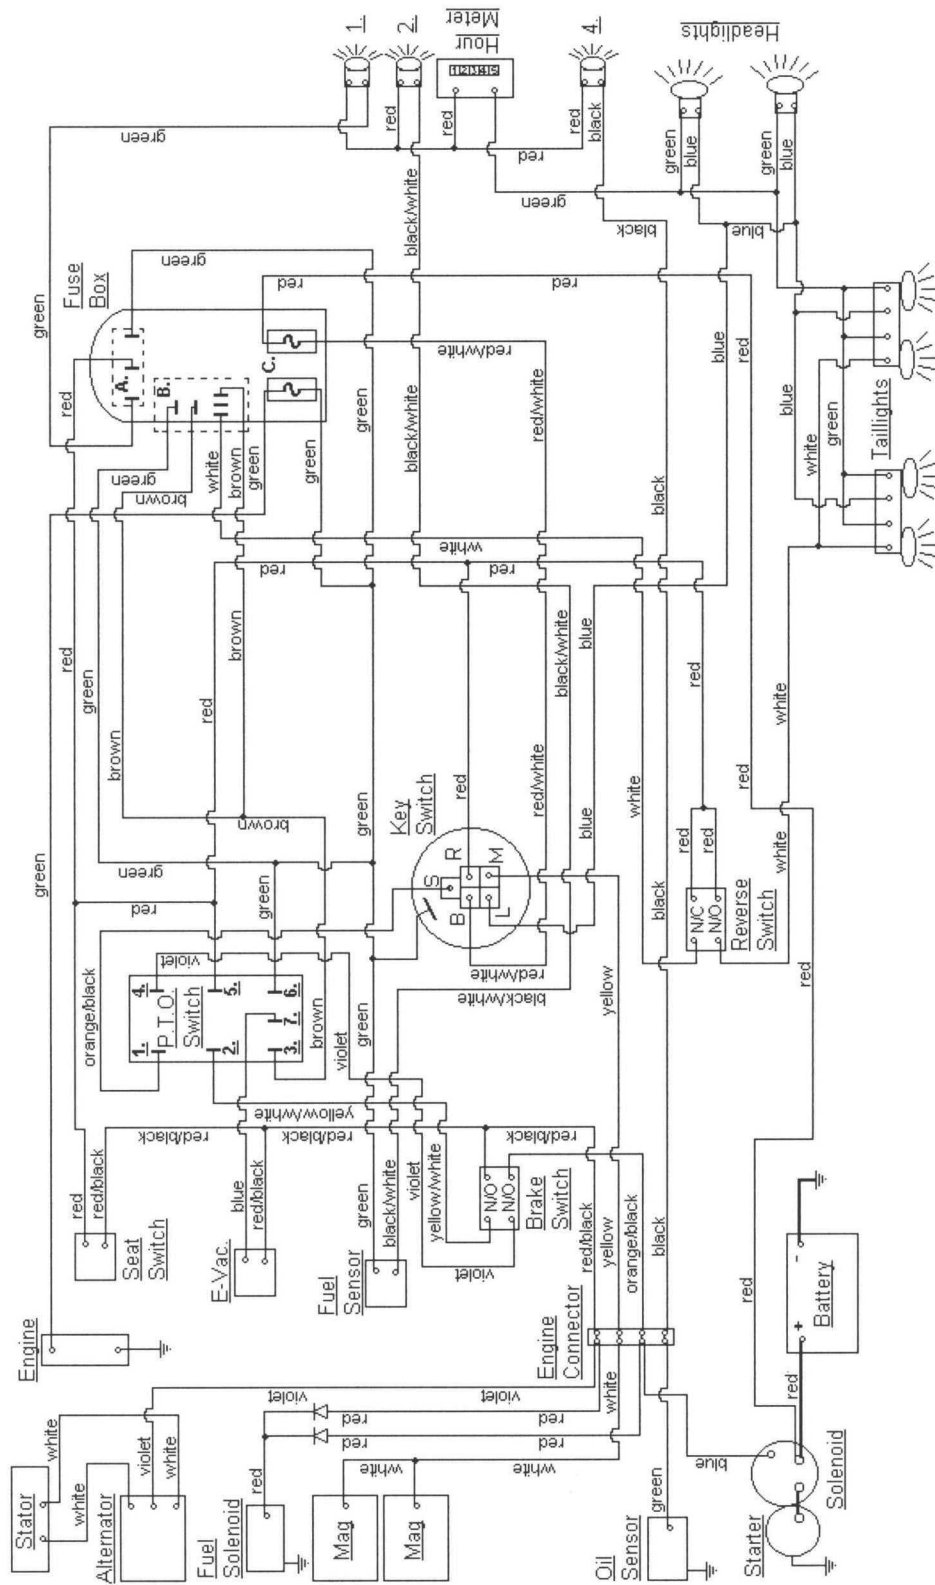

KEY SWITCH


OFF	M+G
RUN w/LIGHTS	B+L+R
RUN	B+R
START	B+S

DASH LIGHTS

1:	LOW VOLTAGE
2:	LOW FUEL
4:	LOW OIL

FUSE BOX

A:	VOLTAGE SENSOR
B:	RELAY
C:	FUSES

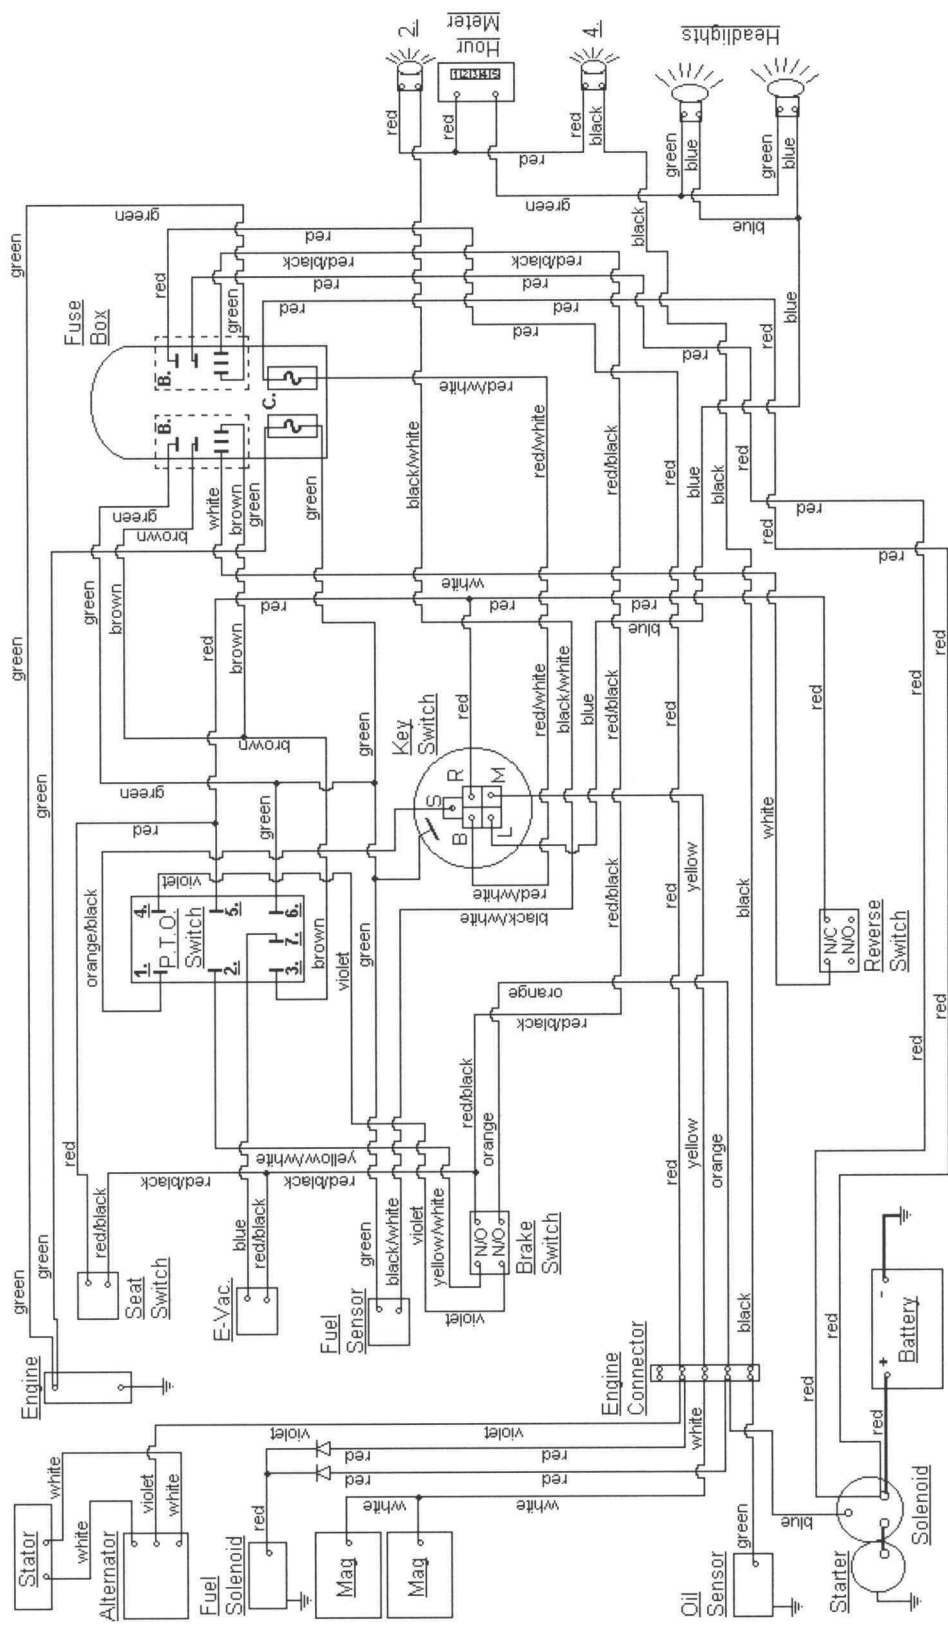

KEY SWITCH

OFF	M+G
RUN w/LIGHTS	B+L+R
RUN	B+R
START	B+S

DASH LIGHTS


2:	LOW FUEL
4:	LOW OIL

FUSE BOX

B:	RELAY
C:	FUSES

F7.



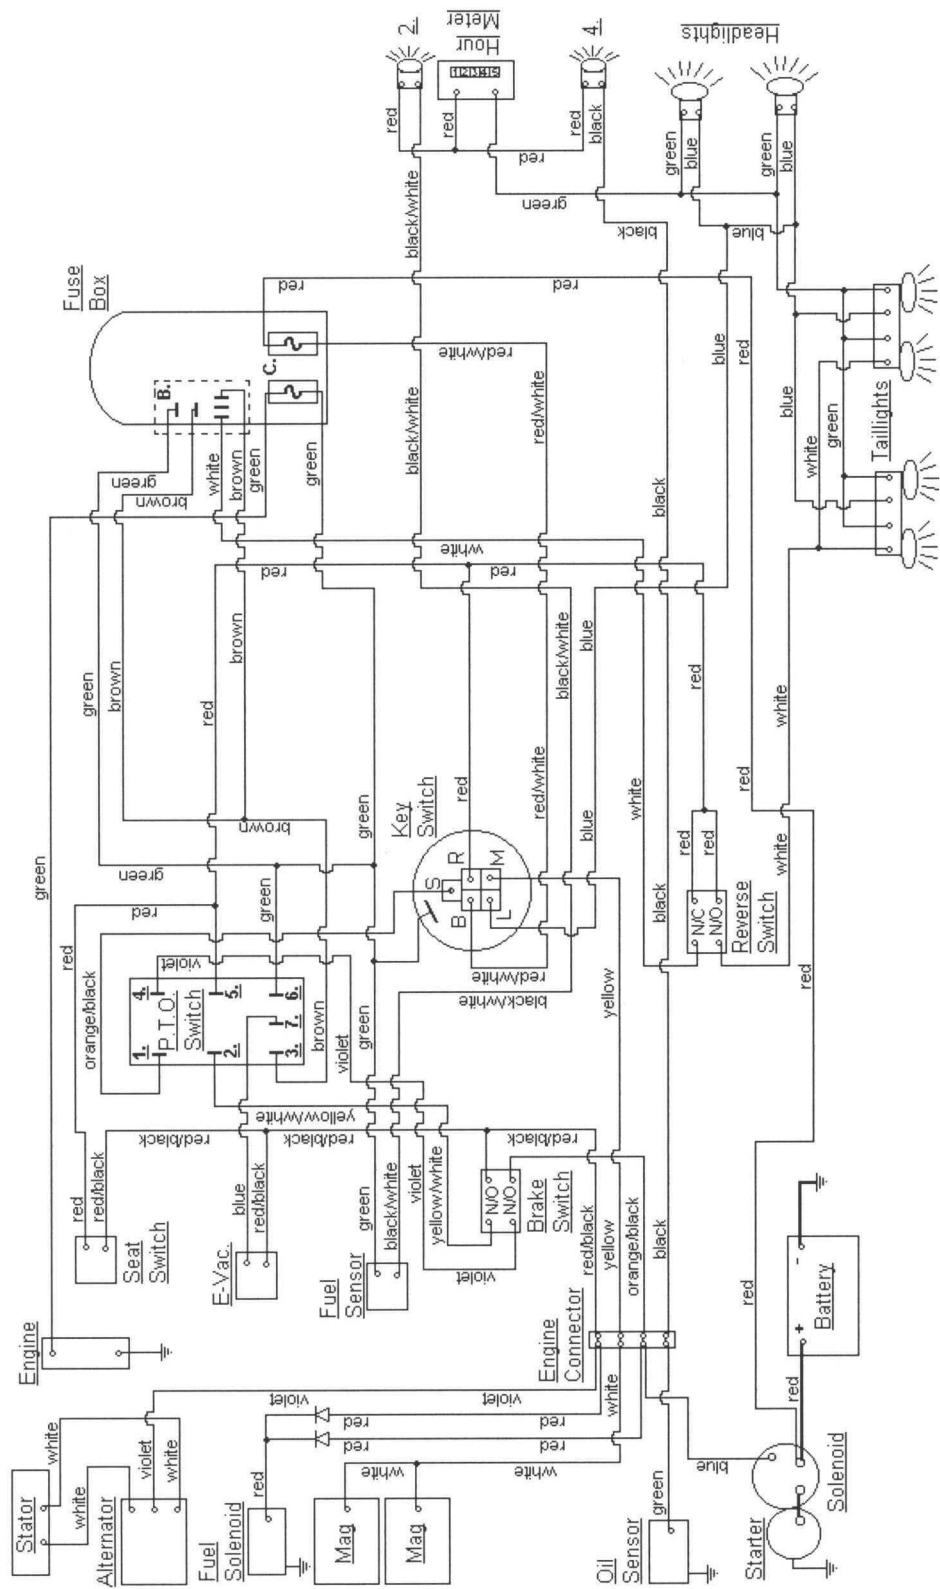

KEY SWITCH

OFF	M+G
RUN w/LIGHTS	B+L+R
RUN	B+R
START	B+S


DASH LIGHTS

2:	LOW FUEL
4:	LOW OIL

FUSE BOX

B:	RELAY
C:	FUSES

MODEL 3206 (2001)

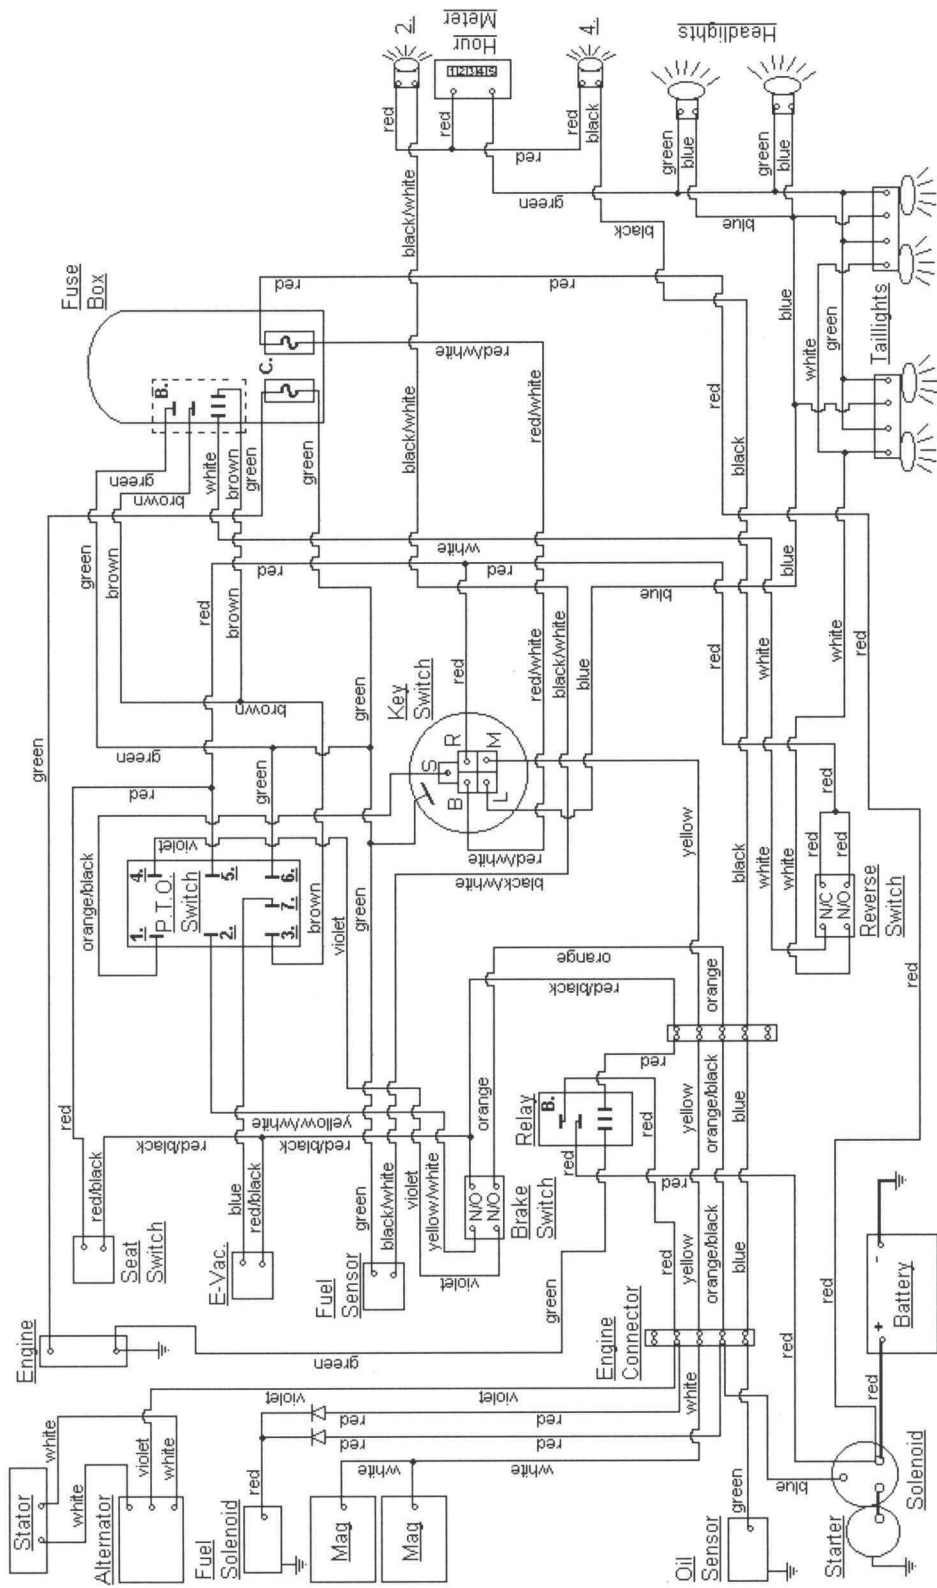

KEY SWITCH


OFF	M+G
RUN w/LIGHTS	B+L+R
RUN	B+R
START	B+S

DASH LIGHTS

2:	LOW FUEL
4:	LOW OIL

FUSE BOX

B:	RELAY
C:	FUSES

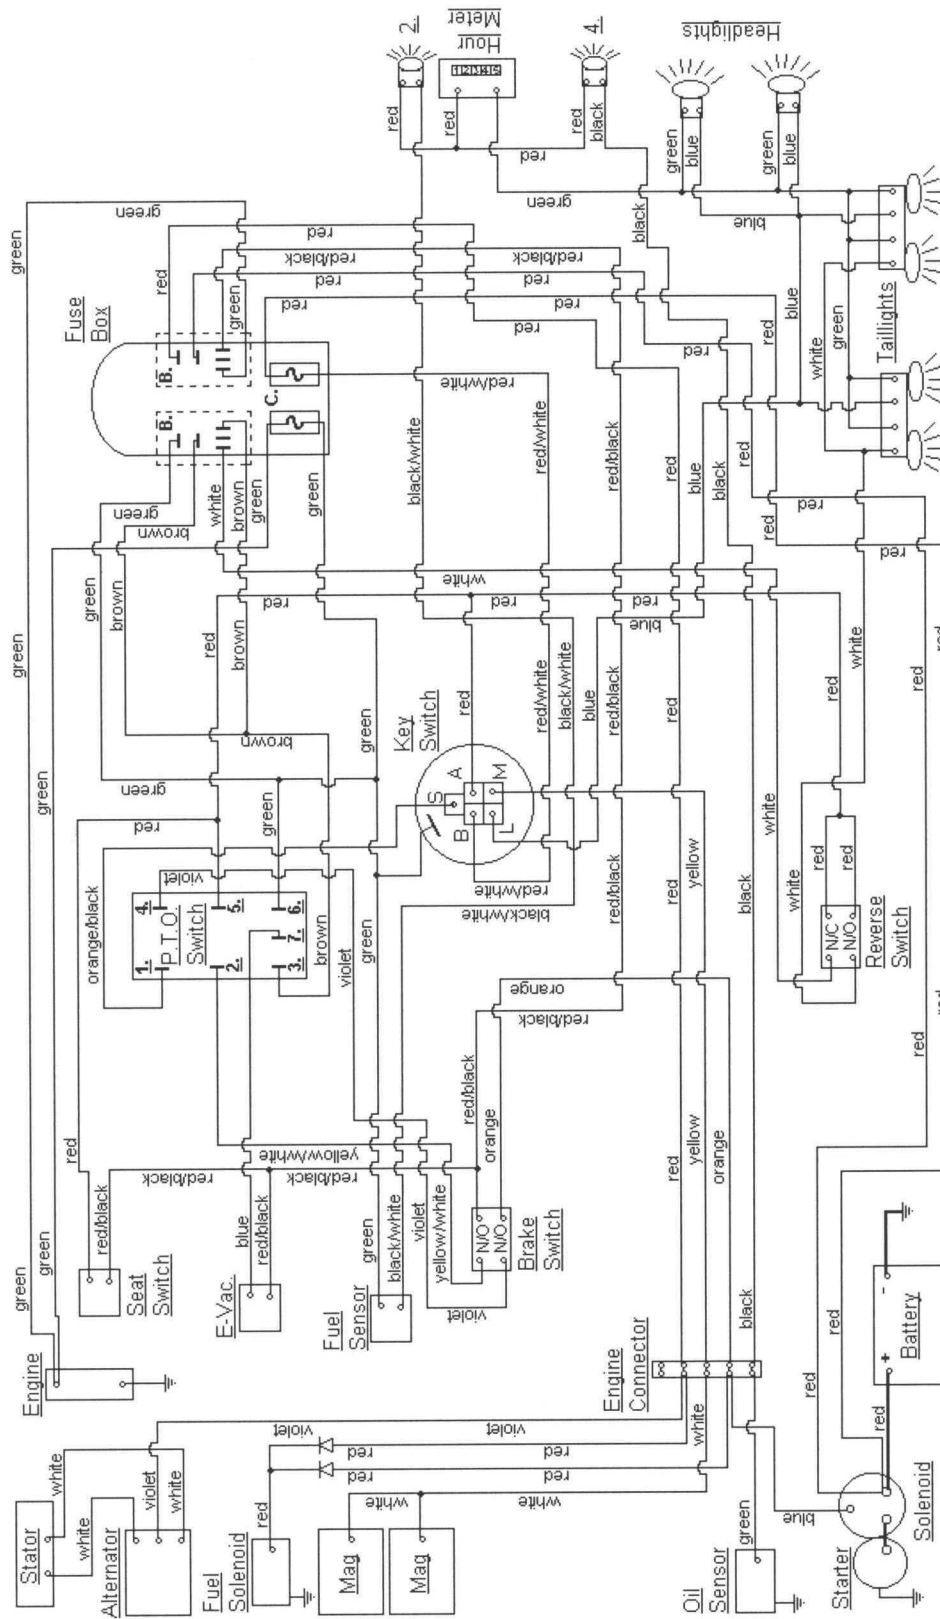

KEY SWITCH

OFF	M+G
RUN w/LIGHTS	B+L+R
RUN	B+R
START	B+S

DASH LIGHTS


2:	LOW FUEL
4:	LOW OIL

FUSE BOX

B:	RELAY
C:	FUSES

MODEL 3208 (2000)

F11.

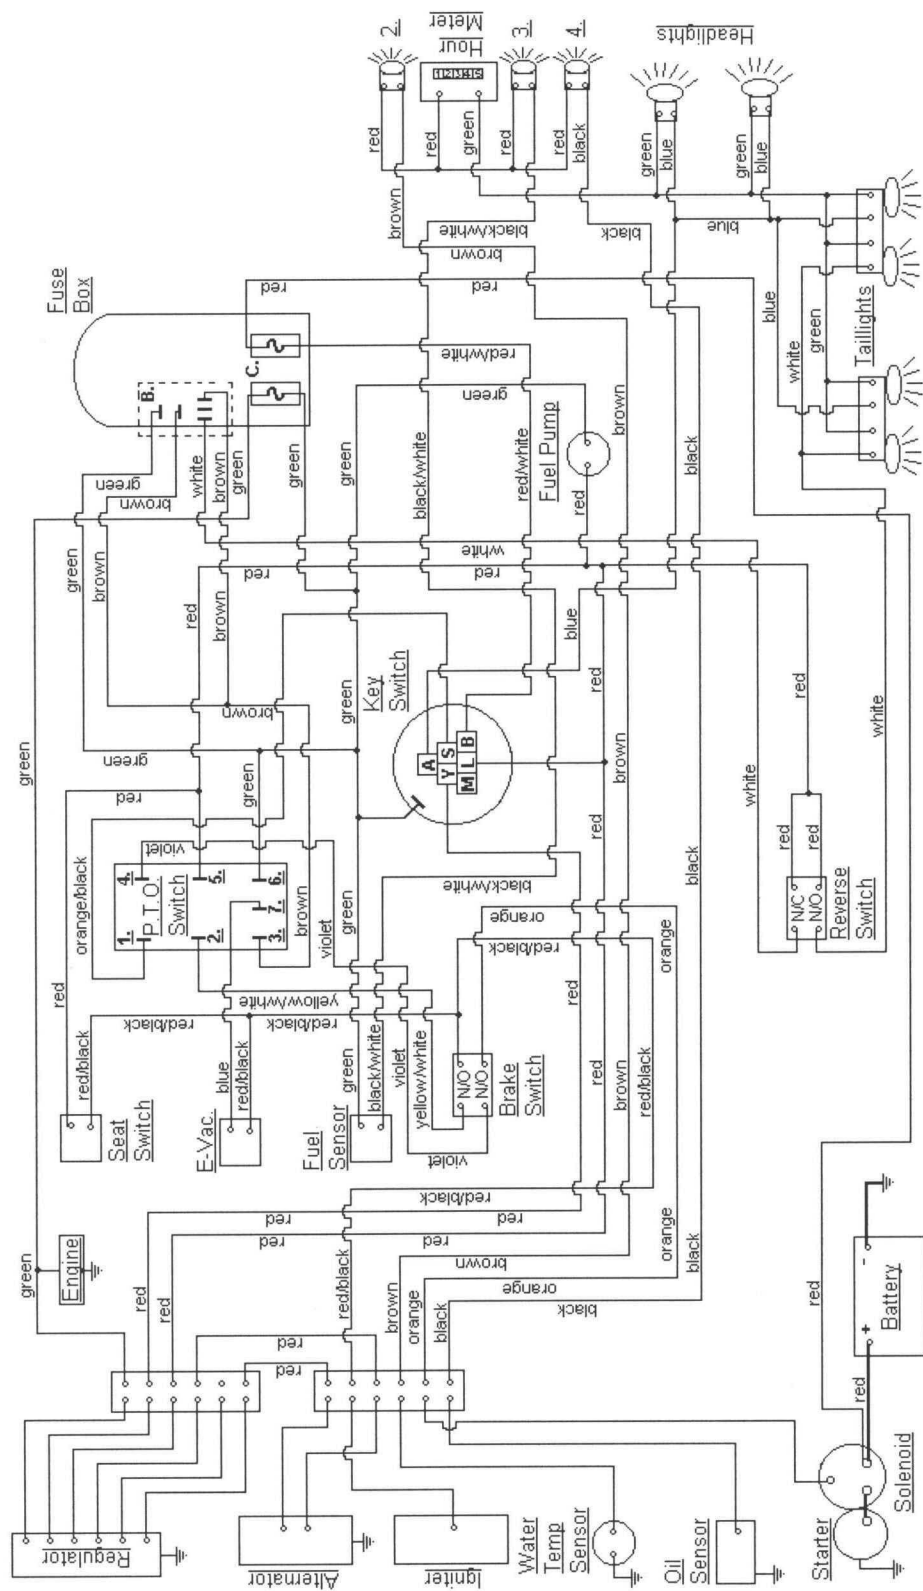

KEY SWITCH


OFF	M+G
RUN w/LIGHTS	B+A+L+Y
RUN	B+L
START	B+L+S

DASH LIGHTS

2:	WATER TEMP
3:	LOW FUEL
4:	LOW OIL

FUSE BOX

B:	RELAY
C:	FUSES

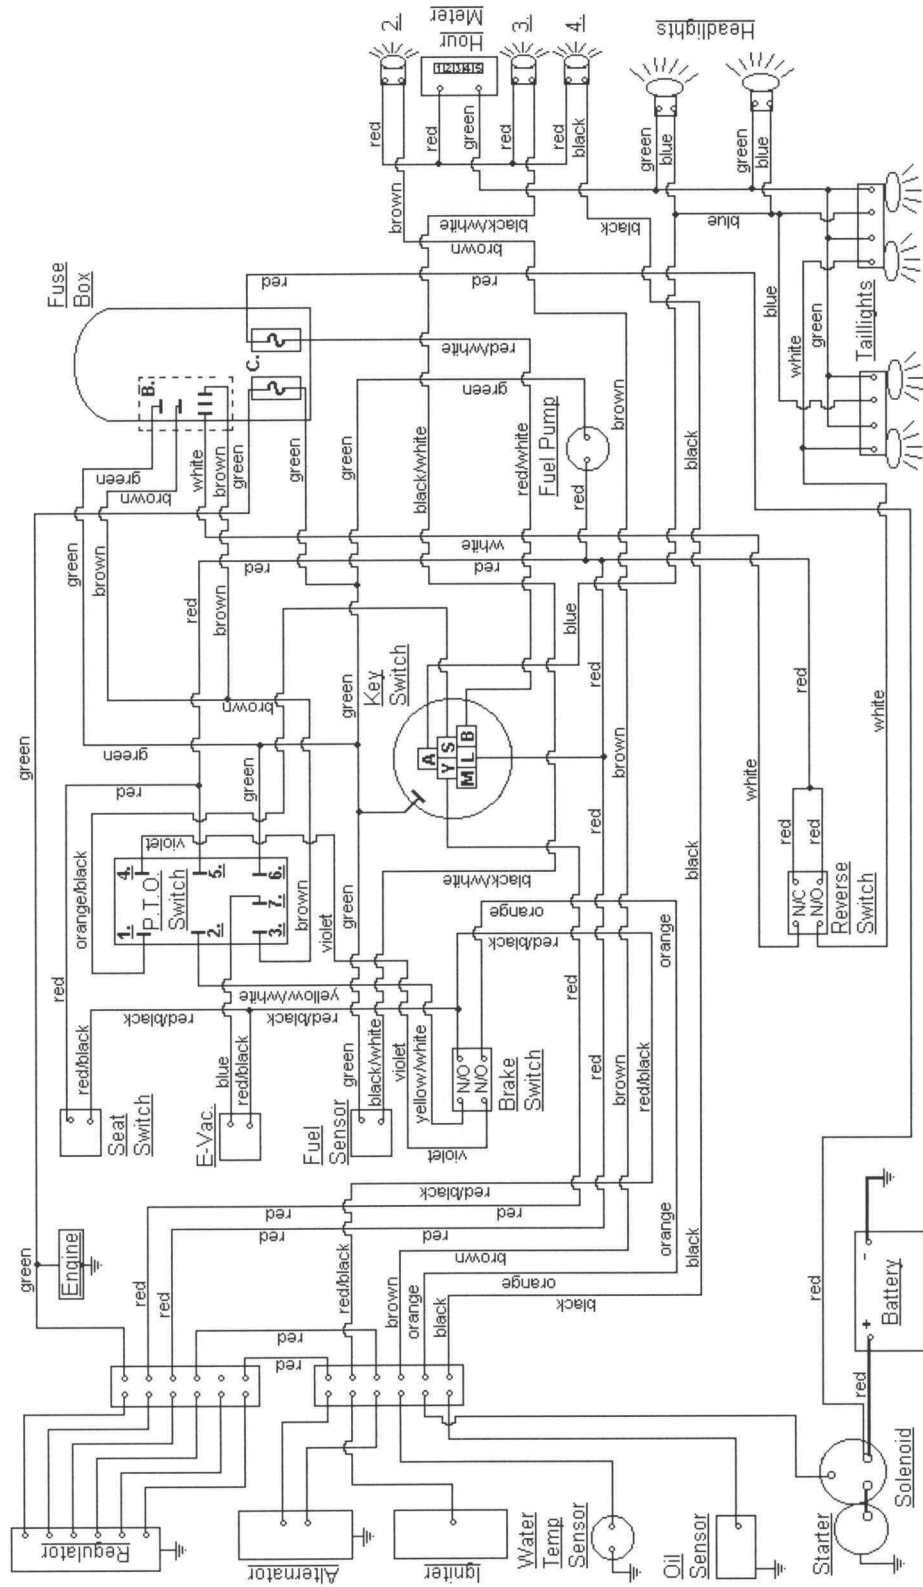


KEY SWITCH	
OFF	M+G
RUN w/LIGHTS	B+A+L+Y
RUN	B+L
START	B+L+S

DASH LIGHTS	
2:	WATER TEMP
3:	LOW FUEL
4:	LOW OIL

FUSE BOX	
B:	RELAY
C:	FUSES


MODEL 3225 (1998)

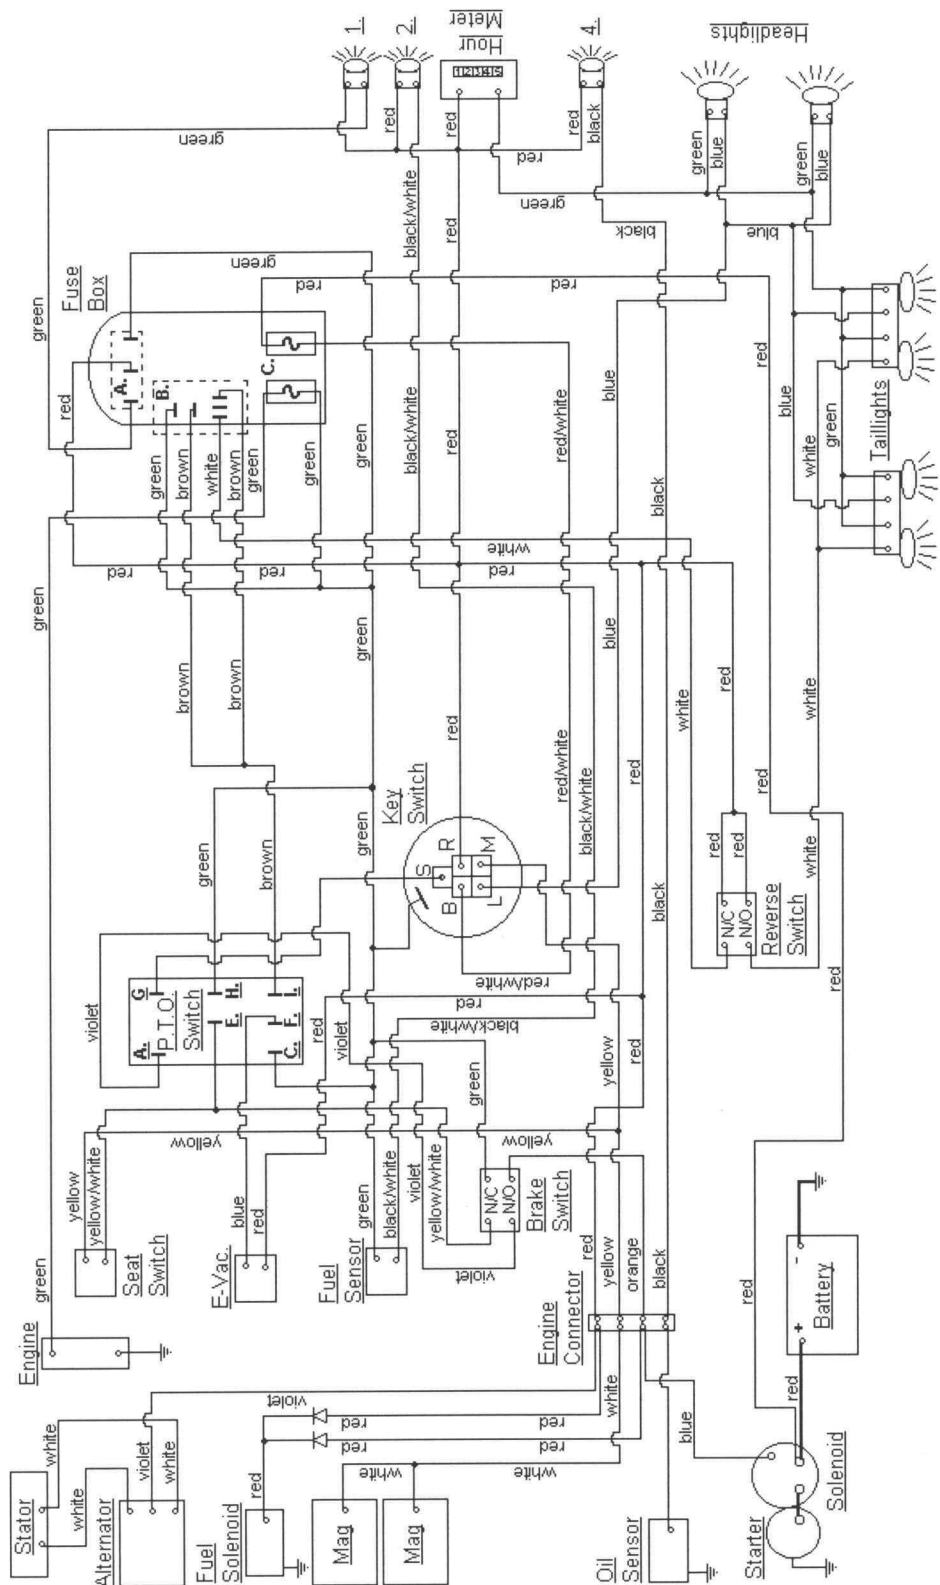

KEY SWITCH	
OFF	M+G
RUN w/LIGHTS	B+L+R
RUN	B+R
START	B+S

DASH LIGHTS	
1:	LOW VOLTAGE
2:	LOW FUEL
4:	LOW OIL

FUSE BOX	
A:	VOLTAGE SENSOR
B:	RELAY
C:	FUSES

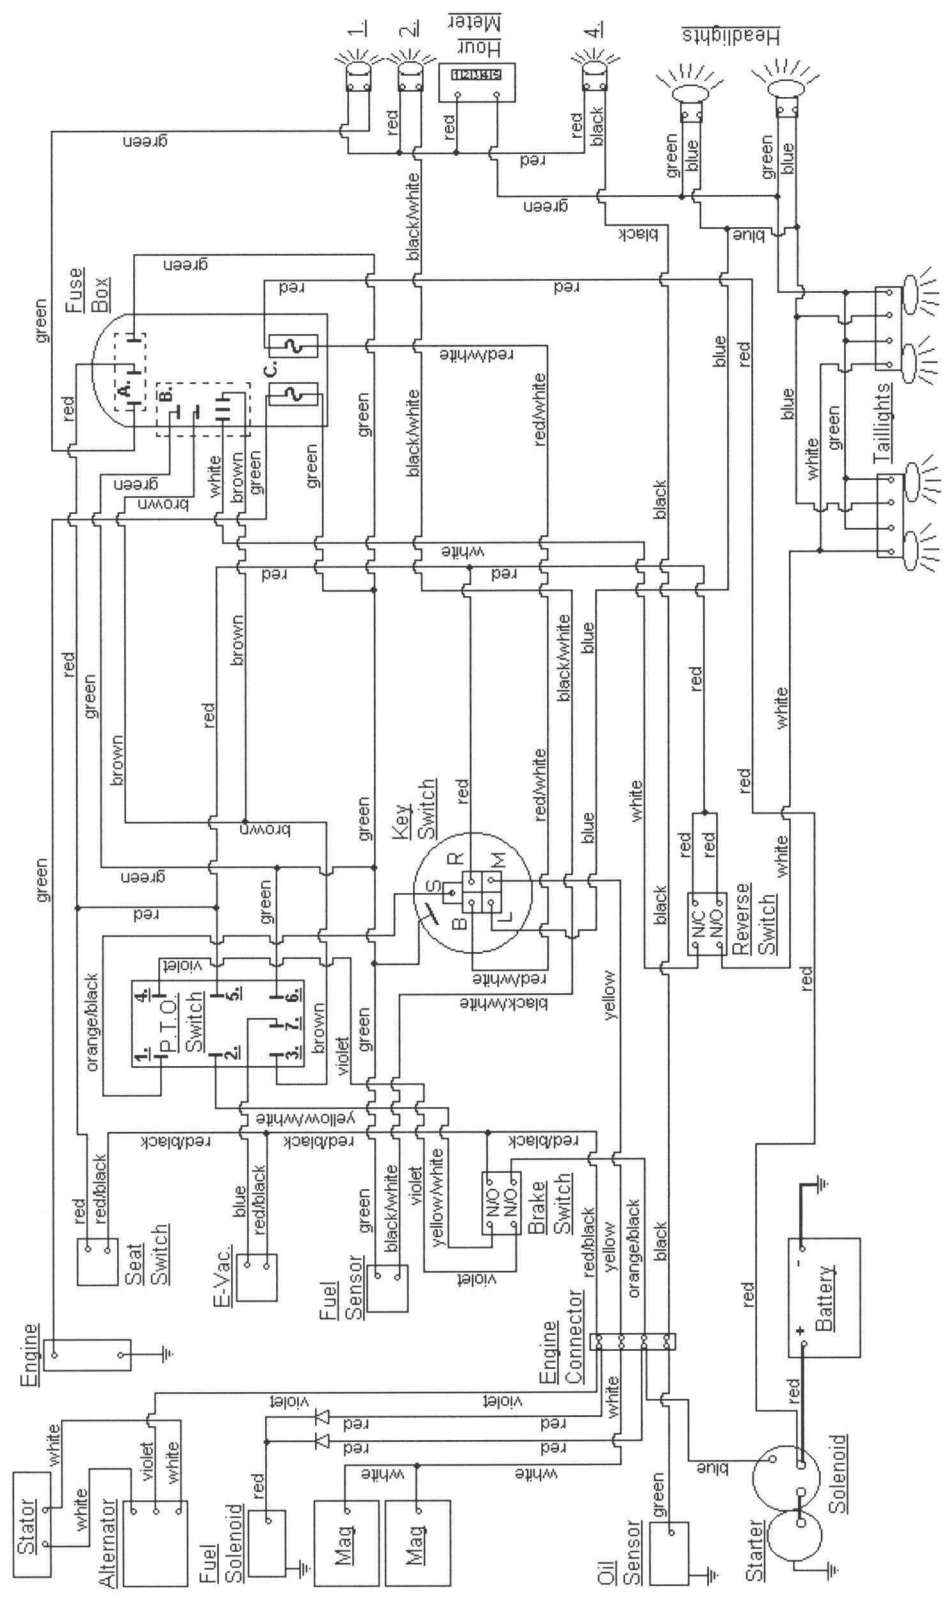


KEY SWITCH	
OFF	M+G
RUN w/LIGHTS	B+L+R
RUN	B+R
START	B+S

DASH LIGHTS	
1:	LOW VOLTAGE
2:	LOW FUEL
4:	LOW OIL

FUSE BOX	
A:	VOLTAGE SENSOR
B:	RELAY
C:	FUSES

MODEL 3235 (2000)

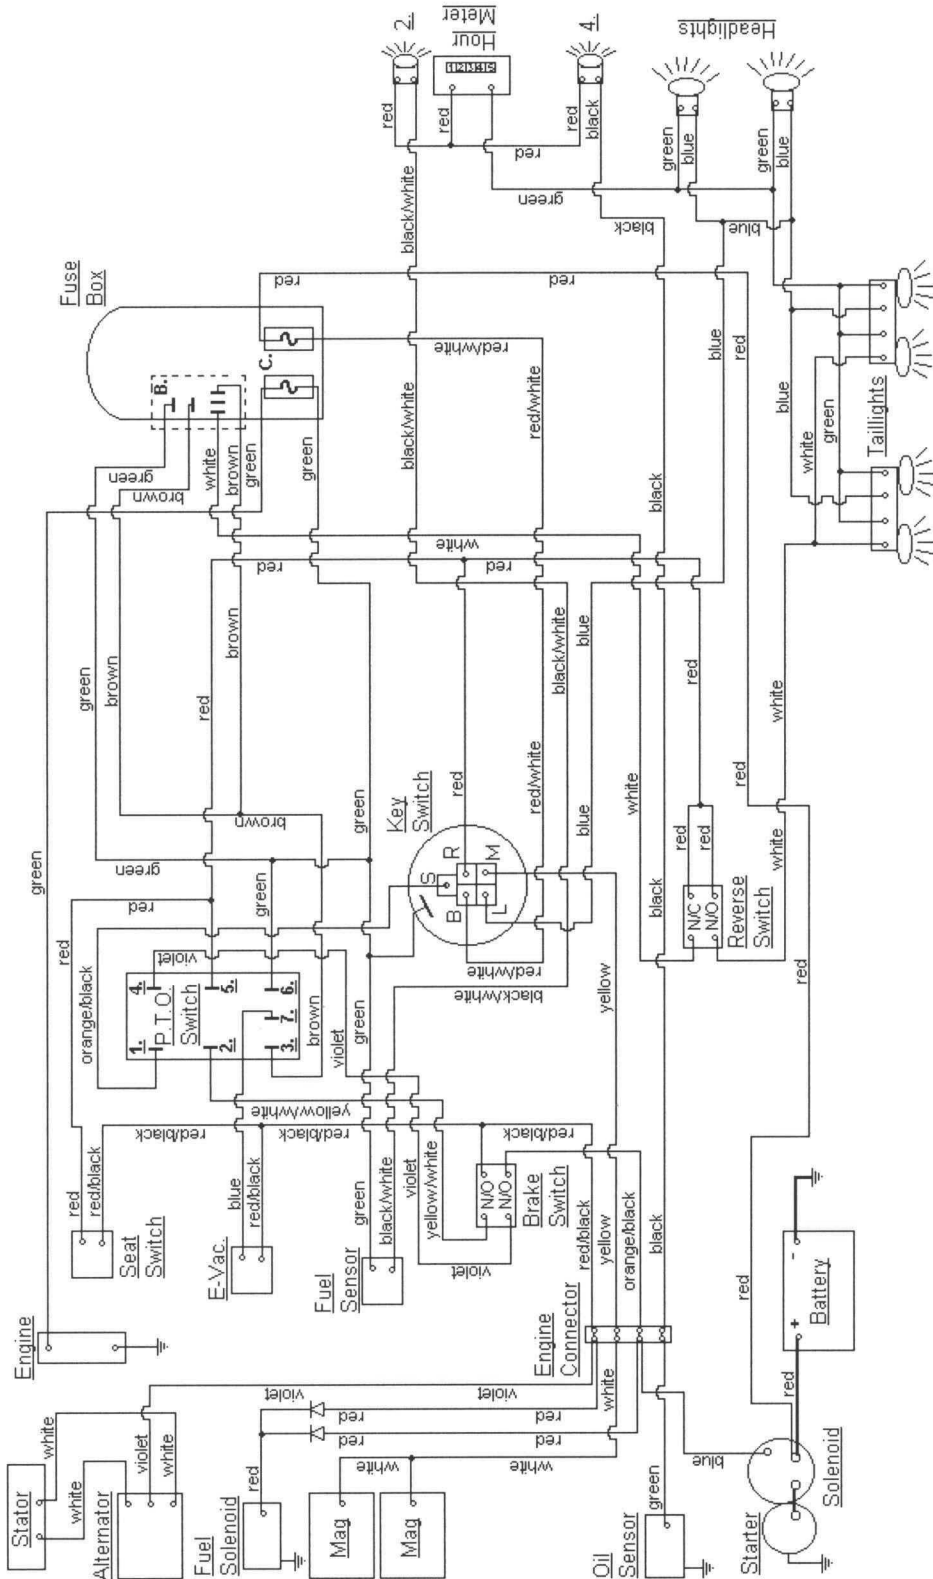


KEY SWITCH			
OFF	M+G		
RUN w/LIGHTS	B+L+R		
RUN	B+R		
START	B+S		

DASH LIGHTS	
2:	LOW FUEL
4:	LOW OIL

FUSE BOX	
B:	RELAY
C:	FUSES

MODEL 3235 (2002)

F17.

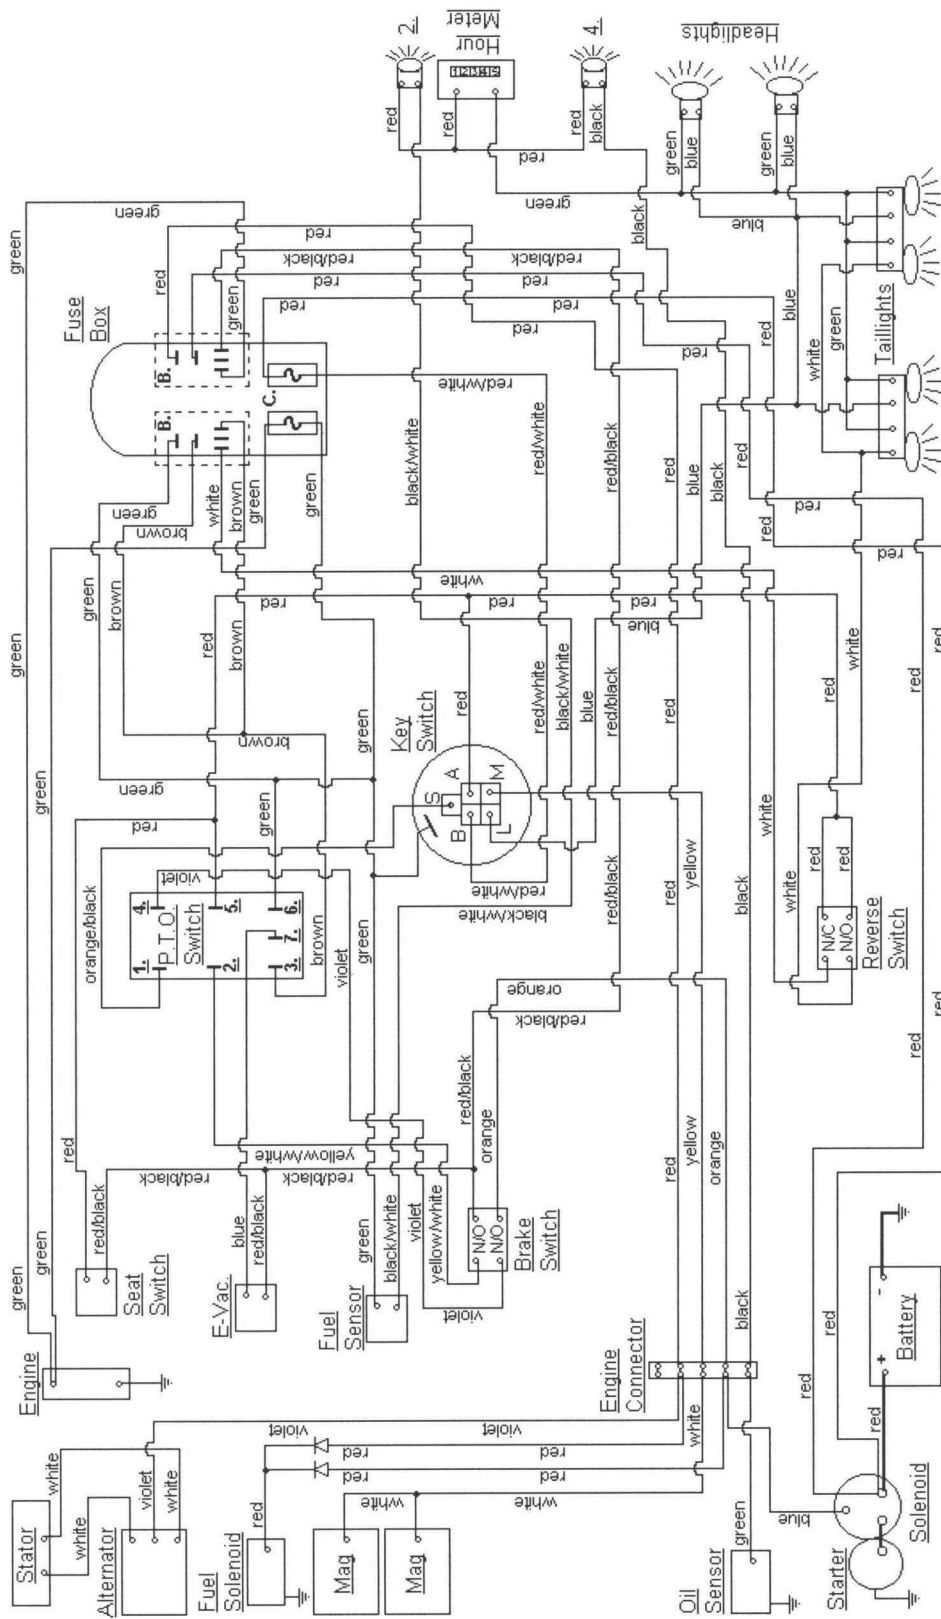

KEY SWITCH


OFF	M+G
RUN w/LIGHTS	B+L+R
RUN	B+R
START	B+S

DASH LIGHTS

2:	LOW FUEL
4:	LOW OIL

FUSE BOX

B:	RELAY
C:	FUSES

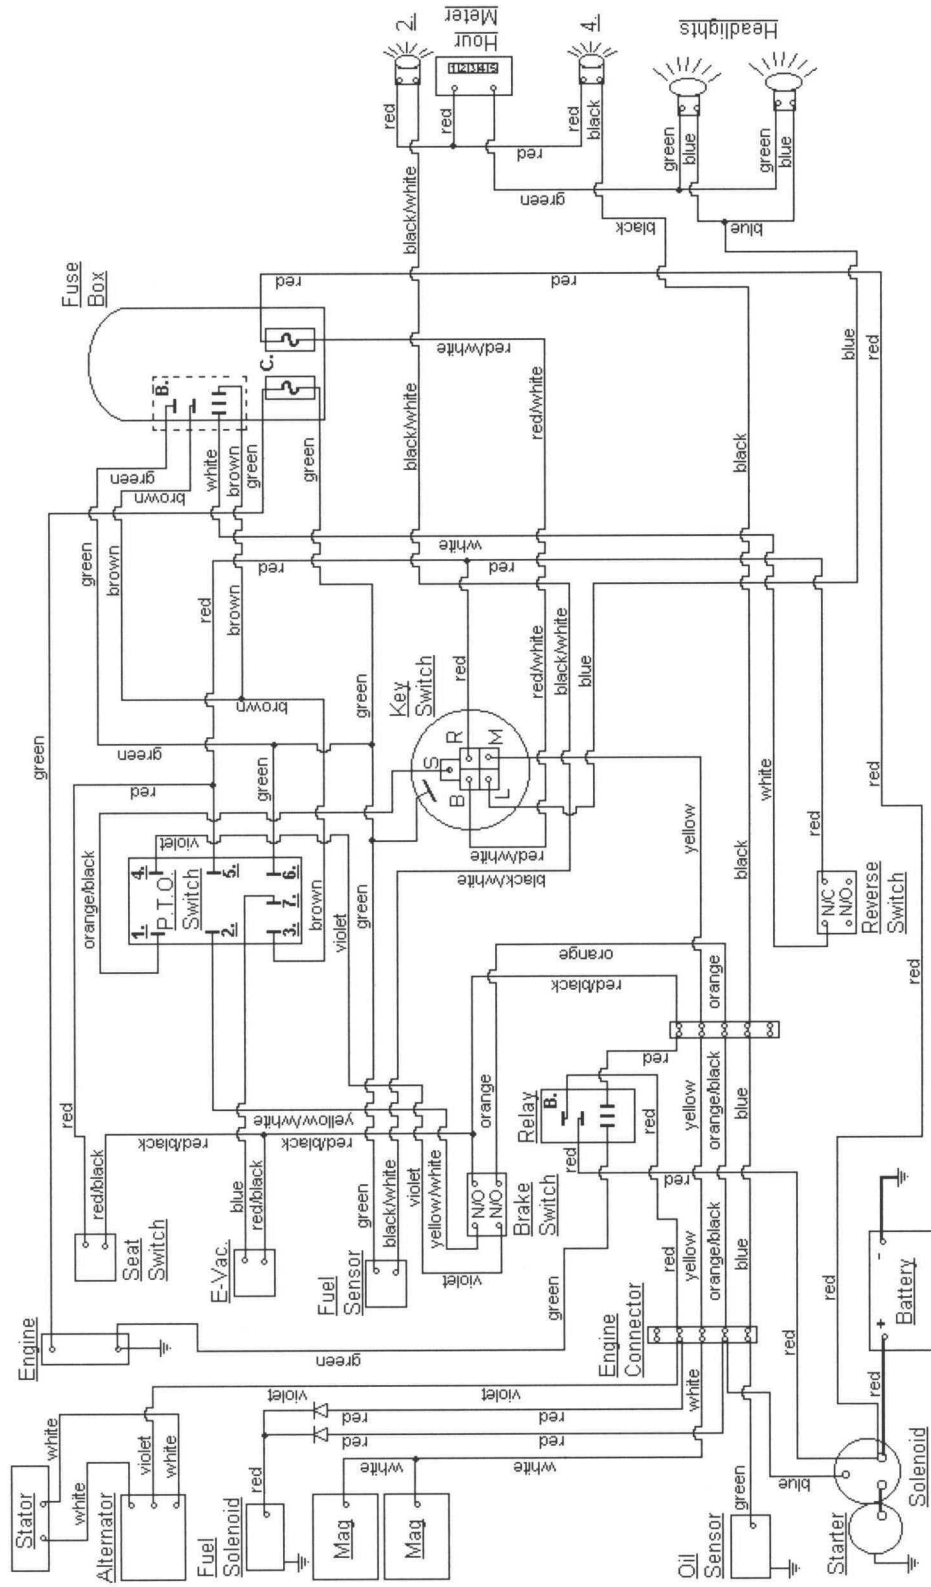

KEY SWITCH

OFF	M+G
RUN w/LIGHTS	B+L+R
RUN	B+R
START	B+S

DASH LIGHTS

2:	LOW FUEL
4:	LOW OIL

FUSE BOX

B:	RELAY
C:	FUSES